


Symbol LS4278

Product Reference Guide

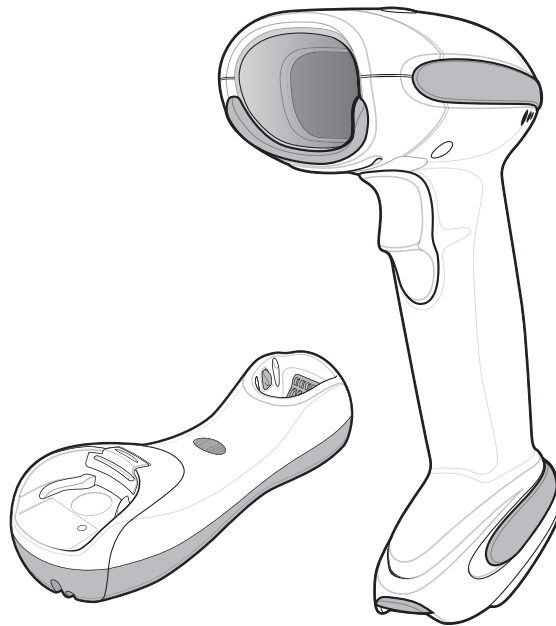

Contents

About This Guide

Introduction	xv
Chapter Descriptions	xv
Notational Conventions	xvi
Related Publications	xvi
Service Information	xvi

Chapter 1. Getting Started

Introduction	1-3
Unpacking the Scanner and Cradle	1-4
Parts	1-5
Scanner Parts	1-5
Cradle Parts	1-6
Scanner Cradle	1-8
Connecting the Cradle	1-8
Supplying Power to the Cradle	1-9
Connecting a Synapse Cable Interface	1-10
Lost Connection to Host	1-10
Mounting the Cradle	1-10
Replacing the Scanner Battery	1-11
Charging the Scanner Battery	1-12
Charging LED	1-12
Reconditioning the Scanner Battery	1-12
Battery Reconditioning LED Definitions	1-12
Inserting the Scanner in the Cradle	1-13

Horizontal Cradle Mount	1-13
Vertical Cradle Mount	1-13
Radio Communications	1-14
Configuring the Scanner	1-14
Accessories	1-14
Lanyard	1-14

Chapter 2. Scanning

Introduction	2-3
Beeper Definitions	2-3
LED Definitions	2-4
Scanning in Hand-Held Mode	2-5
Aiming	2-6
Scanning in Hands-Free Mode	2-8
Assemble the Stand	2-8
Scanning with Intellistand	2-9
Decode Zone	2-11

Chapter 3. Maintenance, Troubleshooting & Technical Specifications

Introduction	3-3
Maintenance	3-3
Scanner	3-3
Cradle	3-3
Battery Information	3-3
Troubleshooting	3-4
Technical Specifications	3-7
Cradle Signal Descriptions	3-10

Chapter 4. Radio Communications

Introduction	4-3
Scanning Sequence Examples	4-3
Errors While Scanning	4-3
Radio Communications Parameter Defaults	4-4
Wireless Beeper Definitions	4-5
Radio Communications Host Types	4-6
HID Host Parameters	4-8
HID Country Keyboard Types (Country Codes)	4-8
HID Keyboard Keystroke Delay	4-10
HID CAPS Lock Override	4-10
HID Ignore Unknown Characters	4-11
Emulate Keypad	4-11
HID Keyboard FN1 Substitution	4-12
HID Function Key Mapping	4-12
Simulated Caps Lock	4-13
Convert Case	4-13
Auto-reconnect Feature	4-14
Reconnect Attempt Beep Feedback	4-14

Out of Range Indicator	4-16
Scanner(s) To Cradle Support	4-17
Modes of Operation	4-17
Pairing	4-18
Connection Maintenance Interval	4-20
Bluetooth Technology Profile Support	4-22
Master/Slave Set Up	4-22
Pairing Bar Code Format	4-22
Bluetooth Security	4-23
Authentication	4-23
Encryption	4-24

Chapter 5. User Preferences

Introduction	5-3
Scanning Sequence Examples	5-3
Errors While Scanning	5-3
User Preferences Parameter Defaults	5-4
User Preferences	5-5
Default Parameters	5-5
Beeper Tone	5-6
Beeper Volume	5-6
Beep on Insertion	5-7
Intellistand Idle Timeout	5-7
Power Mode	5-8
Time Delay to Reduced Power Mode	5-9
Scan Pattern	5-10
Scan Line Width	5-11
Laser On Time	5-11
Beep After Good Decode	5-12
Transmit Code ID Character	5-12
Prefix/Suffix Values	5-13
Scan Data Transmission Format	5-13
FN1 Substitution Values	5-15
Transmit "No Read" Message	5-15
Synapse Interface	5-16
Batch Mode	5-17

Chapter 6. Keyboard Wedge Interface

Introduction	6-3
Connecting a Keyboard Wedge Interface	6-4
Keyboard Wedge Parameter Defaults	6-5
Keyboard Wedge Host Parameters	6-6
Keyboard Wedge Host Types	6-6
Keyboard Wedge Country Types (Country Codes)	6-7
Ignore Unknown Characters	6-8
Keystroke Delay	6-9
Intra-Keystroke Delay	6-9
Alternate Numeric Keypad Emulation	6-10

Caps Lock On	6-10
Caps Lock Override	6-10
Convert Wedge Data	6-11
Function Key Mapping	6-11
FN1 Substitution	6-12
Send Make and Break	6-12
Keyboard Maps	6-13
ASCII Character Set for Keyboard Wedge	6-14

Chapter 7. RS-232 Interface

Introduction	7-3
Connecting an RS-232 Interface	7-4
RS-232 Parameter Defaults	7-5
RS-232 Host Parameters	7-6
RS-232 Host Types	7-8
Baud Rate	7-9
Parity	7-10
Stop Bit Select	7-11
Data Bits (ASCII Format)	7-11
Check Receive Errors	7-12
Hardware Handshaking	7-12
Software Handshaking	7-14
Host Serial Response Time-out	7-16
RTS Line State	7-17
Beep on <BEL>	7-17
Intercharacter Delay	7-18
Nixdorf Beep/LED Options	7-19
Ignore Unknown Characters	7-19
ASCII Character Set for RS-232	7-20

Chapter 8. USB Interface

Introduction	8-3
Connecting a USB Interface	8-4
USB Parameter Defaults	8-5
USB Host Parameters	8-6
USB Device Type	8-6
USB Country Keyboard Types (Country Codes)	8-7
USB Keystroke Delay	8-9
USB CAPS Lock Override	8-9
USB Ignore Unknown Characters	8-10
Emulate Keypad	8-10
USB Keyboard FN 1 Substitution	8-11
Function Key Mapping	8-11
Simulated Caps Lock	8-12
Convert Case	8-12
Optional USB Parameters	8-13
Ignore Beep	8-13

Ignore Bar Code Configuration	8-13
ASCII Character Set for USB	8-14

Chapter 9. IBM Interface

Introduction	9-3
Connecting to an IBM 468X/469X Host	9-4
IBM Parameter Defaults	9-5
IBM 468X/469X Host Parameters	9-6
Port Address	9-6
Convert Unknown to Code 39	9-7
Optional IBM Parameters	9-8
Ignore Beep	9-8
Ignore Bar Code Configuration	9-8

Chapter 10. Wand Emulation Interface

Introduction	10-3
Connecting Using Wand Emulation	10-4
Wand Emulation Parameter Defaults	10-5
Wand Emulation Host Parameters	10-6
Wand Emulation Host Types	10-6
Leading Margin (Quiet Zone)	10-7
Polarity	10-8
Ignore Unknown Characters	10-8
Convert All Bar Codes to Code 39	10-9
Convert Code 39 to Full ASCII	10-10

Chapter 11. Scanner Emulation Interface

Introduction	11-3
Connecting Using Scanner Emulation	11-4
Scanner Emulation Parameter Defaults	11-5
Scanner Emulation Host	11-6
Scanner Emulation Host Parameters	11-6
Beep Style	11-6
Parameter Pass-Through	11-7
Convert Newer Code Types	11-7
Module Width	11-8
Convert All Bar Codes to Code 39	11-8
Code 39 Full ASCII Conversion	11-8
Transmission Timeout	11-9
Ignore Unknown Characters	11-10
Leading Margin	11-10
Check For Decode LED	11-11

Chapter 12. 123Scan

Introduction	12-3
Communication with 123Scan	12-3
123Scan requirements:	12-3

123Scan Parameter 12-3

Chapter 13. Symbologies

Introduction 13-5

- Scanning Sequence Examples 13-5
- Errors While Scanning 13-5

Symbology Parameter Defaults 13-6

UPC/EAN 13-9

- Enable/Disable UPC-A/UPC-E 13-9
- Enable/Disable UPC-E1 13-10
- Enable/Disable EAN-13/EAN-8 13-10
- Enable/Disable Bookland EAN 13-11
- Decode UPC/EAN/JAN Supplementals 13-11
- UPC/EAN/JAN Supplemental Redundancy 13-13
- Transmit UPC-A Check Digit 13-13
- Transmit UPC-E Check Digit 13-13
- Transmit UPC-E1 Check Digit 13-14
- UPC-A Preamble 13-14
- UPC-E Preamble 13-15
- UPC-E1 Preamble 13-16
- Convert UPC-E to UPC-A 13-16
- Convert UPC-E1 to UPC-A 13-17
- EAN-8/JAN-8 Extend 13-17
- UCC Coupon Extended Code 13-18

Code 128 13-19

- Enable/Disable Code 128 13-19
- Enable/Disable UCC/EAN-128 13-19
- Enable/Disable ISBT 128 13-20

Code 39 13-21

- Enable/Disable Code 39 13-21
- Enable/Disable Trioptic Code 39 13-21
- Convert Code 39 to Code 32 13-22
- Code 32 Prefix 13-22
- Set Lengths for Code 39 13-23
- Code 39 Check Digit Verification 13-24
- Transmit Code 39 Check Digit 13-24
- Code 39 Full ASCII Conversion 13-25
- Code 39 Buffering (Scan & Store) 13-25

Code 93 13-29

- Enable/Disable Code 93 13-29
- Set Lengths for Code 93 13-29

Code 11 13-31

- Code 11 13-31
- Set Lengths for Code 11 13-31
- Code 11 Check Digit Verification 13-33
- Transmit Code 11 Check Digits 13-33

Interleaved 2 of 5 (ITF) 13-34

- Enable/Disable Interleaved 2 of 5 13-34

Set Lengths for Interleaved 2 of 5	13-34
I 2 of 5 Check Digit Verification	13-35
Transmit I 2 of 5 Check Digit	13-36
Convert I 2 of 5 to EAN-13	13-36
Discrete 2 of 5 (DTF)	13-37
Enable/Disable Discrete 2 of 5	13-37
Set Lengths for Discrete 2 of 5	13-37
Chinese 2 of 5	13-39
Enable/Disable Chinese 2 of 5	13-39
Codabar (NW - 7)	13-40
Enable/Disable Codabar	13-40
Set Lengths for Codabar	13-40
CLSI Editing	13-41
NOTIS Editing	13-42
MSI	13-43
Enable/Disable MSI	13-43
Set Lengths for MSI	13-43
MSI Check Digits	13-44
Transmit MSI Check Digit(s)	13-45
MSI Check Digit Algorithm	13-45
GS1 DataBar	13-46
Convert GS1 DataBar to UPC/EAN	13-47
Symbology - Specific Security Levels	13-48
Redundancy Level	13-48
Security Level	13-50
Symbology - Intercharacter Gap	13-52

Chapter 14. Advanced Data Formatting

Introduction	14-3
Rules: Criteria Linked to Actions	14-3
Using ADF Bar Codes	14-3
ADF Bar Code Menu Example	14-4
Rule 1: The Code 128 Scanning Rule	14-4
Rule 2: The UPC Scanning Rule	14-4
Alternate Rule Sets	14-5
Rules Hierarchy (in Bar Codes)	14-6
Default Rules	14-6
Special Considerations for Multipoint Networks	14-6
Special Commands	14-7
Pause Duration	14-7
Begin New Rule	14-7
Save Rule	14-7
Erase	14-8
Quit Entering Rules	14-8
Disable Rule Set	14-9
Criteria	14-10
Code Types	14-10
Code Lengths	14-13

Message Containing A Specific Data String 14-17

Actions 14-20

 Send Data 14-20

 Setup Field(s) 14-23

 Modify Data 14-28

 Pad Data with Spaces 14-29

 Pad Data with Zeros 14-33

 Beeps 14-37

 Send Keystroke (Control Characters and Keyboard Characters) 14-38

 Send Right Control Key 14-70

 Send Graphic User Interface (GUI) Characters 14-70

 Turn On/Off Rule Sets 14-76

Alphanumeric Keyboard 14-77

Appendix A. Standard Default Parameters

Appendix B. Programming Reference

Symbol Code Identifiers B-3

AIM Code Identifiers B-4

Appendix C. Sample Bar Codes

Code 39 C-3

UPC/EAN C-3

 UPC-A, 100% C-3

 EAN-13, 100% C-3

Code 128 C-3

Interleaved 2 of 5 C-4

GS1 DataBar C-4

 GS1 DataBar-14 C-5

Appendix D. Numeric Bar Codes

Numeric Bar Codes D-3

Cancel D-4

Appendix E. Alphanumeric Bar Codes

Alphanumeric Keyboard E-3

Appendix F. ASCII Character Sets

Glossary

Index

Tell Us What You Think...

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Symbol/LS4278 product reference manual.html](https://the-checkout-tech.com/manuals/Symbol/LS4278%20product%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)