

QT-7000/7100 Series

Touch screen Point of Sale Terminal

Reference Manual

Version 1.0 July 1998



CASIO[®]

Contents

EQUIPMENT CARE	2
CHAPTER 1 INTRODUCTION	1
1.1 GENERAL DESCRIPTION	1
1.2 QT-7000/7100 SPECIFICATIONS.....	1
1.3 SYSTEM OVERVIEW	2
1.4 I/O OUTLETS.....	3
1.5 UTILITIES SOFTWARE	3
1.6 CUSTOMER DISPLAY (OPTIONAL ITEM).....	3
CHAPTER 2 SYSTEM CONFIGURATION	1
2.1 SYSTEM MAJOR PARTS.....	1
2.2 SYSTEM KEY COMPONENTS	3
2.3 PEDESTAL VERSATILITY	4
2.3.1 <i>Table Standing</i>	4
2.3.2 <i>Wall Mounting</i>	5
CHAPTER 3 SYSTEM INSTALLATION	1
3.1 CPU	1
3.2 DRAM	1
3.3 HDD	2
3.4 SERIAL PORTS.....	2
3.5 PARALLEL PORT	2
3.6 VGA	3
3.7 ETHERNET.....	3
3.8 CASH DRAWER	3
3.9 KEYBOARD	5
3.10 PS/2 MOUSE.....	5
3.11 EXTERNAL FDD.....	5
3.12 EXPANSION SLOT	5
3.13 SYSTEM O/S AND SOFTWARE INSTALLATION.....	6
CHAPTER 4 SYSTEM ENGINE SBC8352 FOR THE QT-7000/7100	1
4.1 SPECIFICATIONS OF SBC8352	1
4.2 SBC8352 OVERVIEW AND JUMPER SWITCH.....	2
4.3 JUMPER SETTINGS.....	3
4.3.1 <i>Setting pin 35 of LCD display (J4): JP2, JP4</i>	3
4.3.2 <i>Setting Watchdog Timer Timeout: JP5</i>	3
4.3.3 <i>LCD display Power Level Setting (V_{CCM}) - Pins 5, 6, 43, 44 of J4: JP9</i>	3
4.3.4 <i>CPU Settings: JP6, JP8, JP12, JP22</i>	3

4.3.5 CMOS SRAM Jumper: JP10.....	4
4.3.6 System Flash BIOS Type: JP11	4
4.3.7 LCD display Type Selection: JP14	4
4.3.8 Serial Ports Settings: JP15 ~ JP20,.....	4
4.3.9 CPU Hardware Reset/Turbo Switch/Turbo LED/IDE LED connector: JP3	6
4.4 CONNECTORS.....	7
4.5 HARDWARE INSTALLATION.....	7
4.5.1 CPU	7
4.5.2 BIOS	7
4.5.3 System Memory.....	7
4.5.4 I/O Port Address Map	8
4.5.5 Interrupt Controller.....	9
4.5.6 IDE Interface Connector	10
4.5.7 Display Interface	10
4.5.8 Floppy Disk Controller	12
4.5.9 Parallel Port Interface	13
4.5.10 Serial Port Interface	13
4.5.11 Digital I/Os	15
4.5.12 Real Time Clock and CMOS RAM.....	15
4.5.13 Keyboard and PS/2 Mouse Connector.....	15
4.5.14 Ethernet Connectors.....	16
4.5.15 CPU Fan Connector	17
4.5.16 Speaker/Key lock/Power LED Connector.....	17
4.5.17 Power Input Connector.....	17
4.5.18 USB Connector.....	18
4.5.19 PC/104 Connectors	18
CHAPTER 5 LCD DISPLAY/VGA SPECIFICATION	1
5.1 LCD DISPLAY SPECIFICATION.....	1
5.2 S/W DRIVERS	1
5.2.1 Windows NT.....	1
5.2.2 VGA Software Utilities	2
CHAPTER 6 ETHERNET INTRODUCTION	1
6.1 INTRODUCTION	1
6.2 SETUP AND DIAGNOSTIC TEST.....	1
6.2.1 Install drivers.....	1
6.2.2 Configuration.....	1
6.2.3 Diagnostic Test.....	2
6.2.4 Automatic Detection.....	2
6.3 INSTALLING NETWORK DRIVER	2

6.3.1 Windows 95 or Windows NT.....	2
6.3.2 MS-DOS.....	2
CHAPTER 7 SYSTEM BIOS AND WATCHDOG UTILITIES FOR THE QT-7000/7100	1
7.1 AMI BIOS SETUP	1
7.1.1 <i>AMI BIOS Setup Main Menu</i>	1
7.1.2 <i>Setup</i>	2
7.1.2.1 <i>Standard CMOS Setup</i>	2
7.1.2.2 <i>Advanced CMOS Setup</i>	3
7.1.2.3 <i>Advanced Chipset Setup</i>	4
7.1.2.4 <i>Peripheral Setup</i>	5
7.1.2.5 <i>PCI / Plug and Play Setup</i>	6
7.1.2.6 <i>POWER MANAGEMENT Setup</i>	6
7.2 WATCHDOG FUNCTION.....	7
7.2.1 <i>How to Use Watchdog Function</i>	7
CHAPTER 8 TOUCH SCREEN.....	1
8.1 SYSTEM REQUIREMENTS.....	1
8.2 ABOUT FUJITSU TOUCH SCREEN DRIVER SOFTWARE	1
8.3 INSTALLATION.....	2
8.3.1 <i>Driver installation</i>	2
8.3.2 <i>Calibration</i>	3
<i>Why Calibration is Necessary</i>	4
APPENDIX A: POWER SUPPLY SPECIFICATIONS	1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/casio/QT-7000 and QT-7100 reference manual.html>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)