

**ELECTRONIC CASH REGISTER**

**CASIO**  
**TK-710**

**OPERATOR'S INSTRUCTION MANUAL**



DI EU UK

**CASIO®**

# CONTENTS

<b>1</b>	<b>UNPACKING</b> .....	<b>3</b>
<b>2</b>	<b>HOW TO CONNECT THE DRAWER</b> .....	<b>3</b>
<b>3</b>	<b>LOADING RECEIPT AND JOURNAL PAPER</b> .....	<b>4</b>
	3-1 REMOVING PAPER ROLLS .....	4
	3-2 LOADING PAPER ROLLS .....	5
<b>4</b>	<b>GENERAL GUIDE</b> .....	<b>6</b>
	4-1 MODE CONTROL SWITCH AND KEYS .....	6
	4-2 DISPLAYS .....	7
	4-3 KEYBOARD .....	8
	4-4 PRINTER .....	9
	4-5 CASH DRAWER .....	10
<b>5</b>	<b>PROGRAMMING</b> .....	<b>11</b>
	5-1 PROGRAM 1 MODE (X MODE) .....	11
	5-2 PROGRAM 2 MODE (Z MODE) .....	12
	5-3 TAX TABLE PROGRAMMING .....	20
	5-4 READING ALL PRESET DATA .....	21
<b>6</b>	<b>OPERATION</b> .....	<b>23</b>
	6-1 OPERATIONAL PRECAUTIONS .....	23
	6-2 BASIC OPERATION PROCEDURE .....	23
	6-3 READING THE TIME .....	23
<b>7</b>	<b>REGISTRATION</b> .....	<b>24</b>
	7-1 MAKING CHANGE .....	24
	7-2 SINGLE ITEM CASH SALE .....	24
	7-3 MULTIPLE ITEM CASH SALE WITH/WITHOUT CHANGE CALCULATION .....	26
	7-4 PARTIAL TENDER REGISTRATION .....	30
	7-5 DISCOUNT/PREMIUM .....	30
	7-6 REDUCTION .....	31
	7-7 RETURNED GOODS .....	32
	7-8 PAYMENT MEDIA OTHER THAN CASH .....	33
	7-9 RECEIVED ON ACCOUNT .....	34
	7-10 PAIDOUT .....	34
	7-11 TAX COMPUTATION .....	35
	7-12 MAKING CORRECTIONS .....	37
<b>8</b>	<b>READ AND RESET OPERATIONS</b> .....	<b>38</b>
	8-1 ISSUING REPORTS .....	38
	8-2 REPORT SAMPLES .....	40
<b>9</b>	<b>CARING FOR THE PRINTER</b> .....	<b>43</b>
	9-1 REPLENISHING THE STAMP INK .....	43
	9-2 REPLACING THE INK ROLL .....	43
<b>10</b>	<b>TROUBLESHOOTING</b> .....	<b>44</b>
<b>11</b>	<b>ABOUT THE MEMORY PROTECTION BATTERY</b> .....	<b>44</b>
<b>12</b>	<b>OPTIONS</b> .....	<b>45</b>
	12-1 BATTERY PACK (MODEL B-6) .....	45
	12-2 WETPROOF COVER (MODEL WT-30) <FOR MAIN KEYBOARD> .....	45
<b>13</b>	<b>SPECIFICATIONS</b> .....	<b>45</b>

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)