

MODEL \_\_\_\_\_

**RS4601**

HOSPITALITY PAD

**PROGRAMMING MANUAL**

## TABLE OF CONTENTS

1.	INTRODUCTION .....	1-1
1.1	System Configuration .....	1-1
1.2	Peripheral Devices .....	1-2
1.3	Circuit Board Arrangement .....	1-3
2.	MEMORY CALCULATION .....	2-1
2.1	File Allocation .....	2-1
2.2	Memory Calculation .....	2-2
2.3	ROM/RAM Chip Layout .....	2-3
3.	INITIAL PROCEDURES .....	3-1
3.1	DIP Switches .....	3-1
3.2	RAM Clear .....	3-2
3.3	Fundamental Key Settings .....	3-3
3.4	Reset Grand Total, Z-Counter and Receipt Number .....	3-3
3.5	File Clear Routines .....	3-3
4.	SELF-DIAGNOSIS .....	4-1
4.1	Terminal ROM .....	4-1
4.2	Terminal RAM .....	4-1
4.3	LCD Display .....	4-2
4.4	R/J Printer .....	4-2
4.5	Slip Printer .....	4-2
4.6	Dynamic Keys .....	4-3
4.7	Buzzer .....	4-4
4.8	I/O Device .....	4-4
4.9	Static Keys and Sensor Test .....	4-5
4.10	End Print .....	4-5
5.	S MODE PROGRAMMING .....	5-1
5.1	Automatic Program Loading (APL) .....	5-1
5.2	Data #1: Bit Selection .....	5-2
5.3	Number of Waiter/Cashier, Preset Keys, SKU and Size of Guest Check File and PLU/SD File .....	5-3
5.4	TDL Connection Table .....	5-4
5.5	Miscellaneous File Setting .....	5-5
5.6	I/O Device TDL# Setting .....	5-5
5.7	Brand Digit Setting .....	5-6
5.8	Preparation Area Setting .....	5-6
5.9	P Mode Password .....	5-7
5.10	Automatic Guest Check for Transfer to Restaurant .....	5-7
5.11	EFT Terminal I.D. for Modem Polled System .....	5-7
5.12	EFT Satellite Configuration Table for Modem Polled System .....	5-7
5.13	Host Communication Parameters .....	5-8
5.14	S Mode Data Read .....	5-9
5.15	Keyboard Map Assignment .....	5-10
6.	P MODE PROGRAMMING .....	6-1
6.1	Password Entry .....	6-1
6.2	Bit Selection .....	6-1
6.3	Numeric Parameters Setting .....	6-7
6.3.1	No. of Lines in Department and No Sale Ticket .....	6-7
6.3.2	VAT% Rate .....	6-7
6.3.3	Service Charge % Rate .....	6-8
6.3.4	Line Numbers for Slip Validation .....	6-8
6.3.5	Line Number Parameters for Slip Printing .....	6-8
6.3.6	Secret Code for Master Mode .....	6-9
6.3.7	Audit Mode Passwords .....	6-9
6.3.8	Advertising Text Line Count .....	6-10
6.3.9	Communication Baud Rate for FT 20 .....	6-10
6.3.10	HHT Security Code .....	6-10

6.3.11	Hotel Link Codes .....	6-10
6.3.12	EFT APACS 50 Polling .....	6-10
6.3.13	Terminal Alarms .....	6-11
6.3.14	Price Level Multiples .....	6-11
6.3.15	Ticket Cutting Parameters .....	6-11
6.3.16	Pop-up Windows .....	6-12
6.4	Descriptor Programming .....	6-13
6.4.1	Terminal Descriptors .....	6-13
6.4.2	Level Shift Descriptors .....	6-17
6.4.3	Retailer Details .....	6-17
6.4.4	Preparation Descriptors .....	6-17
6.4.5	Preparation Descriptor .....	6-18
6.4.6	Host Communication Parameters .....	6-18
6.5	ROM Revision Check .....	6-19
7.	FUNCTION KEY PROGRAMMING .....	7-1
7.1	Void .....	7-2
7.2	Error Correct .....	7-2
7.3	Refund/Adjust .....	7-2
7.4	General Refund .....	7-3
7.5	Paid Out .....	7-3
7.6	Pick Up .....	7-3
7.7	Cash .....	7-4
7.8	Miscellaneous .....	7-4
7.9	Pre-commit .....	7-5
7.10	Item Discount .....	7-5
7.11	Selective Subtotal Discount .....	7-5
7.12	Preset Cash .....	7-6
7.13	Float .....	7-6
7.14	Transfer Guest Check .....	7-6
7.15	Split Guest Check .....	7-6
7.16	Receive from Bar .....	7-6
7.17	Transfer to Restaurant .....	7-7
7.18	Gratuity/Tip .....	7-7
8.	DEPARTMENTS.....	8-1
8.1	Department Programming .....	8-1
8.2	Department Data Reading .....	8-2
8.3	Department Active/Inactive (X-Mode) .....	8-2
9.	PLU .....	9-1
9.1	PLU/SD Programming in P Mode .....	9-2
9.2	Inclusive Option Assignment .....	9-4
9.3	PLU/SD Data Reading .....	9-4
9.4	PLU/SD Code Delete .....	9-4
9.5	Programmable Key Assignment .....	9-5
9.6	Reading of Preset Key Programming .....	9-5
9.7	PLU Price Change .....	9-5
9.8	PLU/SD Active/Inactive .....	9-5
9.9	Inclusive Option/Set Menu Table Programming .....	9-6
9.10	IO/SM Reading .....	9-6
10.	WAITER/CASHIER/SERVER .....	10-1
10.1	Waiter/Cashier Programming .....	10-1
10.2	Waiter/Cashier/Server Code Setting to Preset Keys.....	10-3
10.3	Read All Waiters/Cashiers .....	10-3
10.4	Delete Waiter/Cashier .....	10-3
10.5	Waiter/Cashier Active/Inactive .....	10-4
10.6	Server Programming .....	10-4
10.7	Server Assignment .....	10-5
10.8	Read All Servers .....	10-5
10.9	Delete Server .....	10-5

11.	GUEST CHECK SYSTEM .....	11-1
11.1	Related Programmabilities .....	11-1
11.2	Guest Check System .....	11-1
11.3	Guest Check Operations .....	
11.3.1	Guest Check File Open .....	11-4
11.3.2	Item Registration .....	11-4
11.3.3	Termination after Each Order .....	11-5
11.3.4	Guest Check Read .....	11-5
11.3.5	Guest Check Termination .....	11-5
11.3.6	Guest Check Split .....	11-5
11.3.7	Guest Check File Print.....	11-5
11.3.8	Guest Check Transfer .....	11-5
11.3.9	Waiter Transfer .....	11-5
11.3.10	Table Number or Customer Number Change.....	11-6
11.3.11	Item Transfer .....	11-6
11.3.12	Total Transfer Operation .....	11-6
11.3.13	Payment Transfer .....	11-6
11.4	Guest Check File Sharing .....	11-7
11.4.1	Guest Check File Sharing Programmability (S Mode) .....	11-7
11.4.2	Post Check Effects .....	11-7
11.4.3	Guest Check Shared File Error .....	11-7
11.4.4	Guest Check File Transfer in File Sharing System .....	11-8
12.	GENERAL X MODE PROGRAMMING .....	12-1
12.1	Date Setting .....	12-1
12.2	Time Setting .....	12-1
12.3	Standard Level Setting .....	12-1
12.4	Capture and File Sharing Connection Option Setting .....	12-1
12.5	Kitchen Printer Connection Setting .....	12-2
12.6	Standard Keyboard Level Setting .....	12-2
12.7	EFT APACS 50 Polling Password Setting .....	12-2
12.8	Modem Mode Override .....	12-2
13.	KITCHEN PRINTER .....	13-1
13.1	Related Programmabilities .....	13-1
13.2	Kitchen Printer Print Contents .....	13-1
13.3	Kitchen Printer Initialize .....	13-2
13.4	Kitchen Printer Data Re-Transmit after Error .....	13-2
13.5	Kitchen Printer Disconnection .....	13-2
13.6	Kitchen Printer Connection .....	13-2
14.	FDK OPERATION .....	14-1
14.1	5 Inch FDK Data Loading .....	14-1
14.2	FDK Data Dumping .....	14-2
14.3	5 Inch FDK Media Initialize .....	14-3
14.4	FDK Error Code .....	14-4
15.	HOURLY TIME ZONE SETTING .....	15-1
16.	EFT CARD SCHEME SETTING .....	16-1
16.1	EFT Card Scheme Read .....	16-1
17.	PROGRAM COPY .....	17-1
17.1	Master to Satellite Copy .....	17-1
17.2	Master PLU Programming .....	17-1
18.	HAND HELD TERMINAL PROGRAMMING .....	18-1
18.1	State Table Programming .....	18-1
18.1.1	Programming .....	18-1
18.1.2	Deleting .....	18-1
18.1.3	State Table Read .....	18-1

18.2	Hand Held Terminal Initialisation .....	18-2
18.2.1	Controller Initialisation .....	18-2
18.2.2	HHT Initialisation .....	18-2

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*