

Sharp XE-A101 operating programming Manual

SHARP®

ELECTRONIC CASH REGISTER
ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE
CAJA REGISTRADORA ELECTRONICA

MODEL
MODELL
MODELE
MODELO

XE-A101

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES



CAUTION:

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

WARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

WARNING:

För att helt koppla från strömmen, dra ut stickproppen.

This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/EOK και 73/23/EOK, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/EOK.

Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som komplette ras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.

Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.

XE-A101

ELECTRONIC CASH REGISTER

Thank you for purchasing the SHARP Electronic Cash Register Model XE-A101. Please read this manual carefully before operating your machine. Keep this manual for future reference. It will help you solve operational problems that you may encounter.

Handling Cautions

- Be very careful for the manual cutter mounted on the printer cover when removing and replacing the cover, so as not to hurt yourself.
- Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity, or splashing water.
- Never operate the cash register with wet hands. Water can cause internal component failure.
- The cash register plugs into any standard wall outlet (official (nominal) voltage). Other electrical devices on the same electrical circuit can cause the cash register to malfunction.
- Clean the cash register with a dry, soft cloth. Never use volatile liquids, such as benzine or thinner. Chemicals can discolor or damage the cabinet.
- For protection against data loss, please purchase three R6 or LR6 batteries ("AA"size), and install them after resetting you cash register and before using it.

When handling the batteries, never fail to observe the followings. Incorrectly using batteries can cause them to burst or leaks, possibly damaging the interior of the cash register.

- Be sure that the positive (+) and negative (-) poles of each battery are facing in the proper direction for the installation.
 - Never mix batteries of different types for the installation.
 - Never mix old batteries and new ones for the installation.
 - Never leave dead batteries in the battery compartment.
 - Remove the batteries if you do not plan to use the cash register for long periods.
 - Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.
 - For battery disposal, follow the corresponding law in your country.
- For a complete electrical disconnection, pull out the main plug.

IMPORTANT!

Before using the cash register for the first time, you must first reset the cash register, and then install three new R6 or LR6 batteries ("AA"size) on the register. Never fail to follow the procedures described on "Before Operation" section.

When you open the carton, make sure that all accessories shown on the "Specifications" section are contained.

Contents

Parts and their Functions	3
Before Operation	4
Reset the Cash Register	4
Install Batteries	4
Install the Paper Roll	5
Set Time and Date	6
Check the Time and Date	6
Program Necessary Items	6
When an Error Occurs	7
Basic Sales Entry Operation	8
Before Sales Entries	8
Basic Sales Entry	8
Other Features for Sales Entries	9
VAT (Tax) Calculation	9
Discounts and Premiums Using the Percent Key	10
Currency Exchange	10
No Sale	11
Refund	11
Non-add Code Number	11
Received-on Account and Paid-out Entries	11
Corrections	11
Reading and Resetting of Sales	12
EURO Migration Function	14
Programming	16
Preparations for Programming	16
Tax Programming	16
Department Programming	16
PLU Programming	17
Percent Key Programming	18
Exchange Key Programming	18
Printing Format Programming	18
Miscellaneous Programming	19
Consecutive Receipt Number Programming	19
EURO Programming	20
Rounding Programming (For Australian tax system)	20
Secret Code Programming	20
Checking the Programmed Machine Settings	21
Maintenance	22
Drawer Handling	22
Replacing the Paper Roll	22
Replacing the Batteries	23
Replacing the Ink Roller	23
In Case of Power Failure or Paper Jam	23
Before Calling for Service	24
Specifications	24

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/XE-A101> operating programming manual.h

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)