

# SHARP PARTS GUIDE

## EX-A110 MODEL EX-A130

PRINTER: M-31(XE-A110)  
M-42V(XE-A130)

for KA, KB, TQ, TS, TR

### CONTENTS

- |   |   |   |                           |
|---|---|---|---------------------------|
| 1 | Exteriors   | 6 | Slide PWB unit [XE-A110]  |
| 2 | Drawer box unit(SK380type)<br>[except XE-A130 : KA, KB] | 7 | Rotary PWB unit [XE-A130] |
| 3 | Drawer box unit(SK423type)<br>[XE-A130 : KA, KB]        | 8 | Atricles for consumption  |
| 4 | Packing material & Accessories                          | 9 | AC CARD                   |
| 5 | Main PWB unit   | ■ | Index                     |

Because parts marked with “△” is indispensable for the machine safety maintenance and operation, it must be replaced with the parts specific to the product specification.

#### Table of destinations

SELECTION CODE	COUNTRIES
U	U. S. A., Guam
A	Canada
TS	Germany
TQ	SEEG territory other than Germany (Stamp : English)
TR	SEEG territory other than Germany (Stamp : Spanish)
KB	U. Kingdom
KA	Australia

SELECTION CODE	COUNTRIES
SB	Saudi Arabia (127V area)
SBA	Saudi Arabia (220V area)
SC	Taiwan
SD	Venezuela
SE	Hong Kong
SG	Lebanon, Syria, Greece, Pakistan, Iran, Egypt, Thailand, Iraq, Mauritius, Seychelles, Tahiti, Jordan, Sudan, Turkey
SH	South Africa (U. S. A. version)
SHE	South Africa (Europe version)
SJ	Philippines (Europe version)
SJ2	philippines (U. S. A. version)
SM	Kuwait, Qatar, Oman, UAE, Malta, Bahrain
SMT	Nigeria, Yemen, Kenya

SELECTION CODE	COUNTRIES
K	Korea

SELECTION CODE	COUNTRIES
RA1	Morocco, Algeria, Tunisia, West Africa
RA2	Chile, Uruguay, Peru, Argentina, Paraguay
RA5	Sri Lanka

SELECTION CODE	COUNTRIES
RB3	Indonesia
RB4	
RB5	Cyprus
RB6	Panama
RB7	Barbados
RB8	Malaysia (U. S. A. version)

SELECTION CODE	COUNTRIES
RC1	Malaysia (Europe version)
RC2	Singapore
RC5	Dominican Republic, Ecuador

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)