

REV : 00
MAY 13, 1997

AP SERIES

SERVICE MANUAL

C A S CORPORATION

THE CONTENTS

CHAPTER-I THE GENERAL INTRODUCTIONS

A... THE PREFACE	4
B... THE PRECAUTIONS	4
C... THE SPECIFICATIONS	4
D... SEALING METHOD	5

CHAPTER-II THE CALIBRATIONS

A... GENERAL SPAN CALIBRATION	6
A.1... SET TO THE CALIBRATION MODE	6
A.2... THE SPAN CALIBRATION	7
A.3... TO CONFIRM THE SPAN AND TO DO FINE TRIMMING	7
A.4... RETURN TO THE NORMAL MODE	7
B... THE SPAN CALIBRATION FROM REPAIR	8
B.1... SET TO THE CALIBRATION MODE	8
B.2... CHECK THE INITIAL ZERO POINT	8
B.3... CHECK THE SPAN RANGE	8
B.4... THE SPAN CALIBRATION	8
B.5... CONFIRM THE SPAN AND THE FINE TRIMMING	8
B.6... RETURN TO THE NORMAL MODE	8
C... THE SPAN CALIBRATION WITH A PARTIAL LOAD	10
C.1... SET TO THE CALIBRATION MODE	10
C.2... THE SPAN CALIBRATION	10
C.3... CONFIRM THE SPAN AND THE FINE TRIMMING	10
C.4... RETURN TO THE NORMAL MODE	11

CHAPTER-III THE PART REPLACEMENTS

A... REPLACEMENT OF THE LOAD CELL	12
A.1... REPLACEMENT OF THE LOAD CELL	12
A.2... CORRECTION OF THE ECCENTRICITY	12
A.3... THE SPAN CALIBRATION	12
B... REPLACEMENT OF THE ANALOG MODULE	13
B.1... REPLACEMENT OF THE ANALOG MODULE	13
B.2... THE SPAN CALIBRATION FOR THE ANALOG MODULE	13
C... REPLACEMENT OF THE DIGITAL MODULE	13
C.1... REPLACEMENT OF THE DIGITAL MODULE	13
C.2... THE INPUTS FOR THE DIGITAL MODULE	13
D... REPLACEMENT OF THE KEY BOARD	13
D.1... REPLACEMENT OF THE KEY BOARD	13
D.2... TEST THE KEYBOARD	13
D.3... RETURN TO THE NORMAL MODE	13

CHAPTER-IV THE TRANSFORMER

A... THE TRANSFORMER	14
----------------------------	----

CHAPTER-V THE SCHEMATICS AND THE DIAGRAMS

A... THE SCHEMATICS	15
A.1... MAIN CIRCUIT DIAGRAM	16
A.2... DISPLAY CIRCUIT DIAGRAM	17
B... WIRING DIAGRAMS	18
C... PARTS LOCATION	18

CHAPTER-VI THE ERROR MESSAGES

A... THE ERRDR MESSAGES	20
A.1... ERR 1	20
A.2... ERR 10	20
A.3... ERR 11	20
A.4... ERR 12	20
A.5... ERR 13	20

CHAPTER-VII THE OTHERS

A... FOR THE SERIAL INTERFACE	21
A.1... THE COMMUNICATION AGREEMENTS	21
A.2... THE WIRE CONNECTIONS	21
A.3... THE PROTOCOL	22
A.4... THE DATA TRAINS	22
B... EXPLODED VIEW	24
C... FULL PARTS LIST	25

CHAPTER-VIII APPENDIX-I

A... INPUT CODE FOR THE DIGITAL MODULE	28
A.1 INPUT FOR THE SOFT KEY CODES	28
A.2 INPUT FOR WEIGHING CONDITION CODES	30
A.3 THE SPAN CALIBRATION	30

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)