



# DS-470

*Check Weighing Scale*

# Operation Manual

# DS-470 SERIES OPERATING MANUAL

<u>SECTION</u>	<u>INDEX</u>	<u>PAGE NUMBER</u>
<b>1.0. <u>GENERAL</u></b>		<b>1</b>
1.1. Description		1
<b>2.0. <u>SPECIFICATIONS</u></b>		<b>2</b>
2.1. Technical Specifications		2
2.2. Physical Dimensions		3
<b>3.0. <u>INSTALLATION</u></b>		<b>4</b>
3.1. Unpacking		4
3.2. Inspection		4
3.3. Repackaging		4
3.4. DI-470 RS-232 Cable Installation		5
3.5. Platform Unlocking Procedure		6
<b>4.0. <u>ELECTRICAL TEST</u></b>		<b>7</b>
4.1. Set-Up Procedure		7
4.2. Keyboard & Display Test		7
<b>5.0. <u>OPERATION</u></b>		<b>8</b>
5.1. Keysheet and Display Layout		8
5.2. DS-470 Key Function Summary	<i><u>See below</u></i>	8
5.3. Indicator Lamps	<i><u>See below</u></i>	8
5.4. Operation Procedure Overview		9
5.5. Tare Reduction		10
5.5.1. Digital Tare		10
5.5.2. One Touch Tare		10
5.6. Set The Min And Max Values		10-12
5.6.1. Programming Of Minimum And Maximum Range By Numeric Key Entry		10
5.6.2. Programming Of Minimum And Maximum Range By Weighing		11
5.6.3. Programming Of Minimum And Maximum Range By Entering Target Weight		11
5.6.4. Programming Of Minimum And Maximum Range By Weighing Target Weight		12
5.7. Check Weighing Operation		12-13
5.7.1. Using Full Container		12
5.7.2. When Filling A Container		13
5.8. Clearing Min & Max Range		13
<b>6.0. <u>DS-470 OPTIONS</u></b>		<b>14-20</b>
6.1. RS-232 Option		14-18
6.2. Set Point		19-20
<b>7.0. <u>MAINTENANCE, CALIBRATION, TEST PROCEDURE, SERVICE</u></b>		<b>21-31</b>
7.1. Maintenance Procedures		21
7.2. Service & Repair		22
7.3. Specification List	<i><u>See below</u></i>	23-27
7.4. Span Enable Switch		28
7.5. Internal Count		28
7.6. Calibration Mode		29
7.7. Error Messages	<i><u>See below</u></i>	29
7.8. Shop Notes		30

*See pages 2,8, 25,26, 27 for revisions in this manual*

## DS-470 OPERATING MANUAL

### 1.0. GENERAL

#### 1.1. Features

The DS-470SS Check Weighing Scale offers a practical solution to a wide range of weighing applications. There are a variety of weight capacities and increments available. The display resolution is selectable from 1/3,000 to 1/15,000. It features keyboard calibration with auto-span and ON/OFF, REZERO, TARE, for one touch tare and a numeric keyboard for digital tare and set point entry. For a list of platform sizes and available capacities see page 2.

This instruction manual will provide the user with all the information necessary to understand, set-up and operate the DS-470 scale. Included in this manual are descriptions, specifications, drawings, and operating instructions.

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*