



IT3800/3900

Handheld Linear Imager



User's Guide



Table of Contents

Chapter 1 - Getting Started

Typical Applications for the IT3900	1-1
About This Manual	1-1
Unpacking the Scanner	1-2
IT3800 Scanner Identification	1-3
IT3900 Scanner Identification	1-3
Connecting the Scanner When Powered by Host (Keyboard Wedge)	1-4
Mounting Information for the IT3900	1-5
Specular Zone.....	1-6
Plug and Play	1-6
IBM 4683 Ports 5B, 9B, and 17 Interface	1-8
USB Interface	1-9
USB Converter.....	1-11
OCIA Interface	1-11
NCR OCIA Short Format (8 Bit) Interface	1-12
NCR OCIA Long Format (9 Bit) Interface.....	1-12
Nixdorf OCIA Interface.....	1-13
Serial Wedge.....	1-13

Chapter 2 - Terminal Interfaces

Keyboard Wedge Connection.....	2-1
Terminal ID	2-2
Supported Terminals.....	2-3
Keyboard Country	2-5
Keyboard Style	2-5
Keyboard Modifiers.....	2-6

Serial Port Connection	2-8
Baud Rate	2-9
RS-232 Word Length: Data Bits, Stop Bits, and Parity	2-10
RS-232 Handshaking	2-12
Wand Emulation Connection	2-12
Wand Emulation Transmission Rate	2-13
Wand Emulation Polarity	2-14
Wand Emulation Idle	2-14
PDF417 Wand Emulation	2-15
Data Block Size	2-15
Delay Between Blocks	2-15
Overall Checksum	2-16

Chapter 3 - Output

Scan Rate	3-1
Beeper Volume	3-1
Beeper Tone	3-2
Scan Voting	3-2
Reduce Quiet Zone	3-2
Reread Delay	3-3
Good Read Delay	3-4
Trigger Mode	3-4

Chapter 4 - Data Editing

Prefix/Suffix Overview	4-1
To Add a Prefix or Suffix:	4-1
To Clear One or All Prefixes or Suffixes:	4-2
To Add a Carriage Return Suffix to all Symbologies	4-3
Prefix Selections	4-4
Suffix Selections	4-4
Symbology Chart	4-5
ASCII Conversion Chart (Code Page 1252)	4-6
Function Code Transmit	4-8

Intercharacter, Interfunction, and Intermessage Delays	4-8
Intercharacter Delay	4-8
User Specified Intercharacter Delay.....	4-9
Interfunction Delay.....	4-10
Intermessage Delay	4-10

Chapter 5 - Data Formatting

Data Format Editor Introduction.....	5-1
To Add a Data Format.....	5-1
Other Programming Selections	5-2
Data Format Editor Commands.....	5-2
Data Format Editor	5-4
Data Formatter.....	5-5
Alternate Data Formats	5-5

Chapter 6 - Secondary Interface

Secondary Code 39 Wand Emulation	6-1
Secondary RS-232 Connection	6-1
Secondary Non Decoded Output Laser Emulation	6-2
Non Decoded Output Laser Emulation Transmission Rate..	6-2
Non Decoded Output Laser Emulation Polarity	6-2
Non Decoded Laser Emulation Idle.....	6-3
Disabling the Secondary Interface	6-3
Secondary Trigger Mode	6-3

Chapter 7 - Symbologies

Introduction.....	7-1
All Symbologies.....	7-1
Message Length Description	7-2
Codabar	7-3
Start/Stop Characters	7-3
Check Character	7-4
Concatenation.....	7-5
Codabar Message Length	7-5

Code 39.....	7-6
Start/Stop Characters	7-6
Check Character	7-7
Code 39 Message Length	7-7
Code 39 Append.....	7-8
Base 32	7-8
Full ASCII.....	7-9
Interleaved 2 of 5	7-10
Check Digit	7-10
Interleaved 2 of 5 Message Length	7-11
Strict Decoding.....	7-11
Code 93.....	7-12
Code 93 Message Length	7-12
Code 2 of 5.....	7-13
Code 2 of 5 Message Length.....	7-13
IATA Code 2 of 5	7-14
IATA Code 2 of 5 Message Length	7-14
Matrix 2 of 5	7-15
Matrix 2 of 5 Message Length	7-15
Code 11.....	7-16
Check Digits Required	7-16
Code 11 Message Length	7-17
Code 128.....	7-18
<GS> Substitution.....	7-18
Code 128 Message Length 19	
Telepen	7-20
Telepen Output.....	7-20
Telepen Message Length.....	7-20
UPC A.....	7-21
Check Digit	7-21
Number System.....	7-21
UPC A, continued	7-22
Addenda	7-22
Addenda Required.....	7-22
Addenda Separator	7-23
UPC Strict Decoding.....	7-23

UPC E0 and UPC E1	7-24
UPC E Expand.....	7-24
Check Digit.....	7-25
Number System	7-25
Addenda.....	7-26
Addenda Required	7-26
Addenda Separator	7-27
EAN/JAN 13	7-28
Check Digit.....	7-28
Addenda.....	7-29
Addenda Required	7-29
Addenda Separator	7-30
ISBN Enable.....	7-30
EAN/JAN 8.....	7-31
Check Digit.....	7-31
Addenda.....	7-32
Addenda Required	7-32
Addenda Separator	7-33
MSI	7-34
MSI, continued	7-34
Check Character	7-34
MSI Message Length.....	7-35
Plessey.....	7-36
Plessey Message Length.....	7-36
RSS-14	7-37
RSS Limited.....	7-37
RSS Expanded	7-38
RSS Expanded Message Length.....	7-38
China Post Code.....	7-39
China Post Message Length	7-39
PDF417	7-40
PDF417 Message Length	7-40
Show GLI Blocks	7-41
Scan Diagnostics	7-41
PDF Learn Mode	7-42

MicroPDF417	7-43
MicroPDF417.....	7-43
MicroPDF417 Message Length	7-43
EAN•UCC Composite Symbology	7-44
EAN•UCC Composite	7-44
Enable UPC/EAN Version	7-44
EAN•UCC Composite Code Message Length.....	7-45

Chapter 8 - Cloning

Procedure	8-1
-----------------	-----

Chapter 9 - Visual Menu

Visual Menu Introduction.....	9-1
Temporary Visual Menu Configuration.....	9-1
Installing Visual Menu from the Web.....	9-1
Upgrading USB Firmware	9-2

Chapter 10 - Interface Keys

Keyboard Function Relationships.....	10-1
Supported Interface Keys	10-3

Chapter 11 - Utilities

To Add a Test Code I.D. Prefix to All Symbologies.....	11-1
Show Software Revision.....	11-1
Show Data Format	11-1
Specular Effect Reduction	11-2

Chapter 12 - Serial Programming Commands

Conventions	12-1
Menu Command Syntax	12-1
Query Commands.....	12-2
Concatenation of Multiple Commands	12-2
Trigger Commands	12-4
Resetting the Factory Settings	12-4

Menu Commands	12-5
PDF417 Wand Emulation	12-7

Chapter 13 - Product Specifications

IT3800 Product Specifications.....	13-1
IT3900 Product Specifications.....	13-2
Standard Cable Pinouts	13-3

Chapter 14 - Maintenance

Repairs	14-1
Maintenance	14-1
Replacing the Interface Cable	14-2
Troubleshooting	14-2

Chapter 15 - Customer Support

Product Service and Repair.....	15-1
Online Product Service and Repair Assistance	15-2
Technical Assistance.....	15-2
Online Technical Assistance	15-2
Limited Warranty	15-3

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*