



METROLOGIC INSTRUMENTS, INC.
IS6520/MS6520 Cubit[®] Series
Omnidirectional Bar Code Scanner
Installation and User's Guide



TABLE OF CONTENTS

Introduction	1
Scanner and Accessories	2
Quick Start.....	3
Installing the IS6520-41/MS6520-41 to the Host System	4
Installing the IS6520-47/MS6520-47 to the PC	5
Disconnecting the PowerLink Cables from the Scanner	6
Scanner Parts	7
Mounting Holes	7
Stands	8
Audible Indicators.....	9
Failure Modes	10
Visual Indicators.....	11
Programming Modes.....	12
Labels.....	15
Maintenance.....	15
Optimal Low and Close Depth of Field	16
Optimal High and Normal Depth of Field	17
Far Depth of Field	18
Troubleshooting Guide.....	19
Appendix A	
Design Specifications	23
Appendix B	
Default Settings	25

TABLE OF CONTENTS

Appendix C

Scanner Pinout Connections	29
Cable Connector Configurations	29

Appendix D

Warranty and Disclaimer	31
-------------------------------	----

Appendix E

Notices	32
---------------	----

Appendix F

Patents	34
---------------	----

Index.....	35
------------	----

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Metrologic/IS6520 and MS6520 Cubit Series use](https://the-checkout-tech.com/manuals/Metrologic/IS6520%20and%20MS6520%20Cubit%20Series%20user%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)