



METROLOGIC INSTRUMENTS, INC.

MS1690 Focus™

Area Imaging Bar Code Scanner  
Installation and User's Guide



# TABLE OF CONTENTS

---

Introduction .....	1
Scanner and Accessories .....	2
Scanner Components .....	4
The PowerLink Cable .....	5
Labels .....	6
Maintenance .....	6
Installing the Scanner to the Host System	
RS232 MS1690-14 .....	7
Keyboard Wedge MS1690-47 .....	8
Stand Alone Keyboard MS1690-47 .....	9
IBM MS1690-11 .....	10
Full Speed USB MS1690-40 (Integrated) .....	11
Low Speed USB MS1690-38 (Integrated) .....	11
Stand Kits	
Stand Components, MLPN 46-00147 .....	12
Hard Mounting the Stand .....	13
Assembling the Stand .....	14
Scanner Operation	
Two Default Modes of Operation .....	15
Audible Indicators .....	16
Visual Indicators .....	17
Failure Modes .....	18
Depth of Field by Minimum Bar Code Element Width .....	19
IR Activation Range .....	20
Troubleshooting Guide .....	21
Design Specifications .....	25
Applications and Protocols .....	27
Default Settings – Communication Parameters .....	28
Configuration Modes .....	32
Upgrading the Flash ROM Firmware .....	33

# TABLE OF CONTENTS

---

Scanner and Cable Terminations	
Scanner Pinout Connections .....	34
Cable Connector Configurations .....	36
Limited Warranty .....	38
Product Safety	
Notices .....	39
Cautions .....	40
Patents .....	41
Index .....	42
Contact Information and Office Locations.....	45

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Metrologic/MS1690 user manual.html](https://the-checkout-tech.com/manuals/Metrologic/MS1690%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)