



METROLOGIC INSTRUMENTS, INC.

MS1690 Focus™
Area Imaging Bar Code Scanner
Installation and User's Guide



TABLE OF CONTENTS

Introduction	1
Scanner and Accessories	2
Scanner Components	4
The PowerLink Cable	5
Labels	6
Maintenance	6
Installing the Scanner to the Host System	
RS232 MS1690-14	7
Keyboard Wedge MS1690-47	8
Stand Alone Keyboard MS1690-47	9
IBM MS1690-11	10
Full Speed USB MS1690-40 (Integrated)	11
Low Speed USB MS1690-38 (Integrated)	11
Stand Kits	
Stand Components, MLPN 46-00147	12
Hard Mounting the Stand	13
Assembling the Stand	14
Scanner Operation	
Two Default Modes of Operation	15
Audible Indicators	16
Visual Indicators	17
Failure Modes	18
Depth of Field by Minimum Bar Code Element Width	19
IR Activation Range	20
Troubleshooting Guide	21
Design Specifications	25
Applications and Protocols	27
Default Settings – Communication Parameters	28
Configuration Modes	32
Upgrading the Flash ROM Firmware	33

TABLE OF CONTENTS

Scanner and Cable Terminations	
Scanner Pinout Connections	34
Cable Connector Configurations	36
Limited Warranty	38
Product Safety	
Notices	39
Cautions	40
Patents	41
Index	42
Contact Information and Office Locations.....	45

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)