



METROLOGIC INSTRUMENTS, INC.
MS2320 StratosH™ Scanner / Diva Scale
Installation and User's Guide

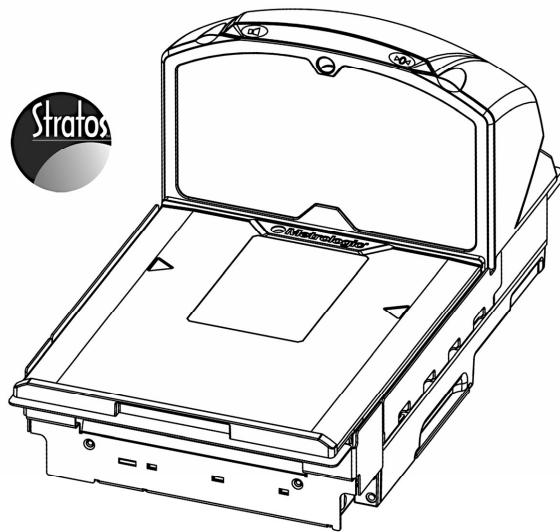


TABLE OF CONTENTS

INTRODUCTION

| | |
|---|---|
| Manual Scope | 1 |
| Product Overview | 1 |
| Base Kit Components..... | 2 |
| Optional Accessories..... | 2 |
| Replacement Parts..... | 4 |
| General Precautions..... | 5 |
| MS2320 Scanner/Diva Scale Design Specifications | 6 |

BASE MODEL CHARACTERISTICS

| | |
|--|---|
| MS2320 Scanner/Diva Scale | 7 |
| Components..... | 7 |
| Dimensions | 8 |
| Connector Panel | 8 |
| Caution and Serial Number Labels | 9 |

INSTALLATION

| | |
|---|----|
| Quick Installation Outline..... | 10 |
| Site Requirements..... | 10 |
| Vertical Clearance | 10 |
| Ventilation and Spacing..... | 10 |
| Service Access..... | 10 |
| Power Installation | 11 |
| Checkout Counter Layout Consideration..... | 11 |
| Unpacking the Unit | 12 |
| MS2320 Package Warning..... | 13 |
| Lifting the Unit by the Handles | 13 |
| MS2320 Mounting Diagram (Two Point Support)..... | 14 |
| MS2320 Mounting Diagram (Three Point Support) | 15 |
| Cable Installation (Interface Specific)..... | 16 |
| RS232 | 16 |
| Full Speed USB..... | 18 |
| IBM OEM..... | 19 |
| Serial Emulation Mode | 19 |
| Keyboard Emulation Mode | 19 |

TABLE OF CONTENTS

| | |
|---|----|
| IBM 46xx | 21 |
| OCIA | 23 |
| Cable Installation (Secondary Metrologic Scanner) | 25 |
| EAS Deactivation | 27 |
| SCANNER OPERATION | |
| Scan Zone | 28 |
| IR Activation Area (IR LED Output) | 30 |
| Indicator Descriptions | 31 |
| Audible | 31 |
| Visual | 31 |
| Failure | 32 |
| Diagnostic Indicator Display; Error Codes | 33 |
| Power Save Modes | 35 |
| Beeper Options and Button Functions | 36 |
| Beeper Tone and Volume Control | 36 |
| The Multi-Function Button | 36 |
| Startup | 37 |
| Power-Up Test Mode | 37 |
| Configuration Mode | 37 |
| SCALE OPERATION | |
| Scale Zeroing | 38 |
| Calibration | 39 |
| Tools Required | 39 |
| Scale Calibration Methods | 39 |
| Priming the Scale for Calibration (lbs. & kg) | 40 |
| Scale Calibration Procedure (lbs. & kg) with Remote Display | 41 |
| Bar Code Calibration Procedure without Remote Display | 44 |
| Calibration Verification | 48 |
| U.S. Pounds (lbs.) | 48 |
| Kilograms (kg) | 49 |
| Security Seal Installation | 50 |
| Pressure Sensitive Security Seal | 50 |
| Wire Security Seal (Conversion Kit 46-00359) | 51 |

TABLE OF CONTENTS

MAINTENANCE

| | |
|---|----|
| Platter / Horizontal Scan Window Replacement..... | 52 |
| Vertical Scan Window Replacement | 53 |
| Daily Maintenance..... | 53 |

TROUBLESHOOTING

| | |
|---|----|
| Troubleshooting Symptom / Solution Chart..... | 54 |
| RS232 Demonstration Program | 56 |

DEFAULT SETTINGS

| | |
|-------------------------------|----|
| Communication Parameters..... | 57 |
|-------------------------------|----|

SCANNER AND CABLE TERMINATIONS

| | |
|--------------------------------------|----|
| Scanner Pinout Connections..... | 64 |
| Cable Connector Configurations | 66 |

REGULATORY COMPLIANCE

| | |
|--------------------------|----|
| Safety | 68 |
| EMC | 69 |
| Weights & Measures | 70 |

| | |
|-----------------------|----|
| LIMITED WARRANTY..... | 71 |
|-----------------------|----|

| | |
|--------------|----|
| PATENTS..... | 72 |
|--------------|----|

| | |
|-------------|----|
| INDEX | 73 |
|-------------|----|

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Metrologic/MS2320 StratosH Diva Scale user ma](https://the-checkout-tech.com/manuals/Metrologic/MS2320%20StratosH%20Diva%20Scale%20user%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)