



METROLOGIC INSTRUMENTS, INC.
MS6720 Hand-Held Laser Scanner
Installation and User's Guide



TABLE OF CONTENTS

Introduction.....	1
Scanner and Accessories	2
Quick Start.....	3
Operational Test.....	4
MS6720 Installation: Powered by External Power Supply	5
MS6720 Installation: Powered by Host Device	6
MS6720-47 Keyboard Wedge Installation to the PC	8
MS6720 Optional Stands	9
Scanner Parts.....	11
Audible Indicators.....	12
Failure Modes	13
Visual Indicators	14
Scanner Labels.....	15
Maintenance.....	15
Depth of Field Specifications	
Normal Depth of Field.....	16
Short Depth of Field	17
Extended Depth of Field.....	18
Optional Depth of Field.....	19
Normal Depth of Field.....	20
Short Depth of Field	20
Scan Pattern Specifications	
Projection Axis	21
Omnidirectional Scan Volume.....	21
Cross-Sectional Scan Pattern	22
Troubleshooting Guide	23
Applications and Protocols	28
Appendix A	
Design Specifications	29
Appendix B	
Default Settings	31

TABLE OF CONTENTS

Appendix C	
Pin Assignments for the Coil Cable.....	35
Pin Assignmentsf or the MCA951	36
Pin Assignmentsf or the MS6720-47 Keyboard Wedge Cable.....	37
Appendix D	
Limited Warranty	38
Appendix E	
Notices.....	39
Appendix F	
Patents	41
Index	42

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)