

MS9530 VOYAGER RF

BASE STATION MANUAL

TABLE OF CONTENTS

INTRODUCTION	4
DESCRIPTION	- 5 -
GENERAL CHARACTERISTICS	- 6 -
INTERFACE PORT	- 7 -
PHYSICAL CHARACTERISTICS	- 8 -
INSTALLATION	- 9 -
KEYBOARD WEDGE MODE	- 10 -
RS232C MODE	- 11 -
CONFIGURATION	- 12 -
DOWNLOADING RS232 CONFIGURATION MODE	- 14 -
BARCODE MENU	- 15 -
STARTING BARCODE CONFIGURATION	- 15 -
ENTER/EXIT Configuration	- 15 -
SYSTEM COMMAND	- 16 -
Return to default	- 16 -
Modify Parameters	- 16 -
Update modified parameters	- 17 -
Recall last configuration	- 17 -
Display Prom version	- 17 -
Beeper activation	- 18 -
WEDGE PROGRAMMING	- 19 -
Terminal type	- 19 -
Keyboard country type	- 19 -
End of message control codes	- 21 -
Caps Lock activation	- 23 -
Auto Caps Lock Detection	- 23 -
Alt Mode activation	- 24 -
Numeric keypad activation	- 24 -
Control character activation	- 25 -
RS 232 OUTPUT	- 26 -
WAND EMULATION	- 27 -
Same as read barcode	- 27 -
Different as read barcode	- 27 -
High speed transmission	- 27 -
Low speed transmission	- 27 -

<u>BARCODE PARAMETERS</u>	- 28 -
<i>Minimum Length</i>	- 28 -
<u>RS-232 OUTPUT PARAMETERS</u>	- 29 -
<i>Baud Rate</i>	- 29 -
<i>Data Bits</i>	30
<i>Parity</i>	30
<i>Stop bits</i>	31
<i>RTS / CTS Output</i>	31
<i>ACK / NAK Output</i>	32
<i>XON / XOFF Output</i>	32
<i>RS232 End of Message Control</i>	33
<u>DATA FORMAT</u>	34
<i>Mobile ID</i>	35
<i>Preambles</i>	36
<i>Postambles</i>	36
<i>Character Substitution</i>	37
<i>Character Substitution: Advanced</i>	38
<i>Inter Character Delay</i>	41
<i>Editing Functions</i>	42
Remove all Masks.....	42
Mask Selection.....	42
Remove one Mask.....	43
Mask definition.....	43
Mask Functions.....	43
Delay of the "Delay Character".....	44
<u>EML</u>	50
<i>EML Frame Data Packet description</i>	51
<i>EML Packets</i>	51
<i>DATA Packet</i>	51
<i>ACK Packet</i>	51
<i>NACK Packet</i>	51
<i>SHORT BEEP Packet</i>	52
<i>LONG BEEP Packet</i>	52
<i>ERROR BEEP Packet</i>	52
<i>RESET Packet</i>	53
EML Process.....	53

APPENDIX.....	55
APPENDIX B	56
APPENDIX C.....	64
APPENDIX D.....	65
BASE STATION CONNECTION LIST	68
SAMPLES SHEET	- 74 -
QUICK START GUIDE.....	- 75 -

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*