



MetroSelect[®]

Single-Line Scanner

Configuration Guide



Table of Contents

Introduction

Bar Code Configuration Methods.....	1-1
Single-Code Method	1-1
Multi-Code Method	1-1
Need to Start Over?	1-2

Code Types and Decode Rules

UPC/EAN.....	2-1
Code 128	2-2
Code 39	2-2
2 of 5 Codes	2-4
Codabar	2-6
Code 93	2-6
Code 11	2-6
Telepen.....	2-7
Plessey Codes	2-7
Additional Decode Features.....	2-8
Configurable Code Lengths	2-9

Supplements 3-1

GS1 Databar 4-1

GS1 Databar Limited	4-2
GS1 Databar Expanded.....	4-2

ISBT Code 128 Implementation

Configuration Mode	5-1
Concatenation Configuration Mode	5-2
Pre-Defined Concatenation Configuration Mode	5-2
User-Defined Concatenation Configuration Mode	5-3

Communications 6-1

Scanner Operation

Configuration Mode Options	7-1
Scan Buffers	7-1
Redundant Scans	7-2
Miscellaneous Decode Features	7-2
Same Symbol Timeouts	7-3
LED Options	7-3
Beeper Options	7-4
Data Transmission Delays.....	7-6
Communication Timeout Options	7-7
Host Scanner Commands	7-8
Test Modes.....	7-10

Prefixes/Suffixes

User Configurable Prefixes, All Data	8-1
User Configurable ID Characters, Code Specific	8-2
Standard Prefix Characters	8-4
Standard Suffix Characters	8-6
Longitudinal Redundancy Check	8-7
Block Check Character.....	8-7
Character Replacements.....	8-8
User Configurable Suffixes, All Data	8-9
Special Formats	8-10

Code Formatting

UPC/EAN Formatting	9-1
Codabar Formatting	9-3
Code 39 Formatting.....	9-4
Code 11 Formatting.....	9-4
Telepen	9-4
Plessey.....	9-5
2 of 5 Code Formatting.....	9-5

RS232

Parity Features	10-1
Baud Rate.....	10-1
Data/Stop Bits.....	10-2
Hardware Handshaking	10-2
Software Handshaking.....	10-4
Miscellaneous	10-5

Keyboard

Enable Keyboard Emulation	11-1
Country/Scan Code Table Selects.....	11-1
Keyboard/System Type.....	11-2
'Dumb' Terminal Selections	11-3
Special Keyboard Features.....	11-4
InterScan Code Delays.....	11-6
Control Sets	11-7

OCIA..... 12-1**Light Pen Parameters..... 13-1**

Set Narrow Element Width.....	13-2
-------------------------------	------

IBM 46xx Configuration

IBM Port.....	14-1
IBM Reserve Codes.....	14-1

USB..... 15-1**Code Bytes Usage**

Code Bytes 0-9	16-1
Reserved Codes	16-2
Code Type Table	16-2
ASCII Reference Table	16-3
Extended Key Code Reference Table	16-7

MS9520 Voyager® and MS9540 VoyagerCG® Series

Activation Range 17-1
Stand Scan Modes 17-1
CodeGate® Status 17-1
Laser/Scan Modes 17-2
Same Symbol Time Outs..... 17-3
MS9520/9540-00 Laser Emulation Mode 17-4

MS9524 and MS9544 VoyagerPDF® Series

PDF CodeGate Status..... 18-1
MicroPDF and Composite Code Handling..... 18-1

MS9535 VoyagerBT 19-1

MS9535-5M VoyagerBT..... 20-1

Inventory Quantity Bar Codes 20-3

IS4125 and IS4225 Scan Engines 21-1

IS4823 and IS4825 Scan Engines 22-1

Operating Modes 22-1

Miscellaneous Features

Custom Defaults 23-1
Serial Program Mode 23-2

Contact Information 24-1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Metrologic/MS95xx Series programming manual.](https://the-checkout-tech.com/manuals/Metrologic/MS95xx%20Series%20programming%20manual)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)