



MetroSelect[®]

Single-Line Scanner

Configuration Guide



Table of Contents

Introduction

| | |
|-------------------------------------|-----|
| Bar Code Configuration Methods..... | 1-1 |
| Single-Code Method | 1-1 |
| Multi-Code Method | 1-1 |
| Need to Start Over? | 1-2 |

Code Types and Decode Rules

| | |
|---------------------------------|-----|
| UPC/EAN..... | 2-1 |
| Code 128 | 2-2 |
| Code 39 | 2-2 |
| 2 of 5 Codes | 2-4 |
| Codabar | 2-6 |
| Code 93 | 2-6 |
| Code 11 | 2-6 |
| Telepen..... | 2-7 |
| Plessey Codes | 2-7 |
| Additional Decode Features..... | 2-8 |
| Configurable Code Lengths | 2-9 |

Supplements 3-1

GS1 Databar 4-1

| | |
|---------------------------|-----|
| GS1 Databar Limited | 4-2 |
| GS1 Databar Expanded..... | 4-2 |

ISBT Code 128 Implementation

| | |
|---|-----|
| Configuration Mode | 5-1 |
| Concatenation Configuration Mode | 5-2 |
| Pre-Defined Concatenation Configuration Mode | 5-2 |
| User-Defined Concatenation Configuration Mode | 5-3 |

Communications 6-1

Scanner Operation

| | |
|-------------------------------------|------|
| Configuration Mode Options | 7-1 |
| Scan Buffers | 7-1 |
| Redundant Scans | 7-2 |
| Miscellaneous Decode Features | 7-2 |
| Same Symbol Timeouts | 7-3 |
| LED Options | 7-3 |
| Beeper Options | 7-4 |
| Data Transmission Delays..... | 7-6 |
| Communication Timeout Options | 7-7 |
| Host Scanner Commands | 7-8 |
| Test Modes..... | 7-10 |

Prefixes/Suffixes

| | |
|--|------|
| User Configurable Prefixes, All Data | 8-1 |
| User Configurable ID Characters, Code Specific | 8-2 |
| Standard Prefix Characters | 8-4 |
| Standard Suffix Characters | 8-6 |
| Longitudinal Redundancy Check | 8-7 |
| Block Check Character..... | 8-7 |
| Character Replacements..... | 8-8 |
| User Configurable Suffixes, All Data | 8-9 |
| Special Formats | 8-10 |

Code Formatting

| | |
|-----------------------------|-----|
| UPC/EAN Formatting | 9-1 |
| Codabar Formatting | 9-3 |
| Code 39 Formatting..... | 9-4 |
| Code 11 Formatting..... | 9-4 |
| Telepen | 9-4 |
| Plessey..... | 9-5 |
| 2 of 5 Code Formatting..... | 9-5 |

RS232

| | |
|----------------------------|------|
| Parity Features | 10-1 |
| Baud Rate..... | 10-1 |
| Data/Stop Bits..... | 10-2 |
| Hardware Handshaking | 10-2 |
| Software Handshaking..... | 10-4 |
| Miscellaneous | 10-5 |

Keyboard

| | |
|--------------------------------------|------|
| Enable Keyboard Emulation | 11-1 |
| Country/Scan Code Table Selects..... | 11-1 |
| Keyboard/System Type..... | 11-2 |
| 'Dumb' Terminal Selections | 11-3 |
| Special Keyboard Features..... | 11-4 |
| InterScan Code Delays..... | 11-6 |
| Control Sets | 11-7 |

OCIA..... 12-1**Light Pen Parameters..... 13-1**

| | |
|-------------------------------|------|
| Set Narrow Element Width..... | 13-2 |
|-------------------------------|------|

IBM 46xx Configuration

| | |
|------------------------|------|
| IBM Port..... | 14-1 |
| IBM Reserve Codes..... | 14-1 |

USB..... 15-1**Code Bytes Usage**

| | |
|---|------|
| Code Bytes 0-9 | 16-1 |
| Reserved Codes | 16-2 |
| Code Type Table | 16-2 |
| ASCII Reference Table | 16-3 |
| Extended Key Code Reference Table | 16-7 |

MS9520 Voyager® and MS9540 VoyagerCG® Series

Activation Range 17-1
Stand Scan Modes 17-1
CodeGate® Status 17-1
Laser/Scan Modes 17-2
Same Symbol Time Outs..... 17-3
MS9520/9540-00 Laser Emulation Mode 17-4

MS9524 and MS9544 VoyagerPDF® Series

PDF CodeGate Status..... 18-1
MicroPDF and Composite Code Handling..... 18-1

MS9535 VoyagerBT 19-1

MS9535-5M VoyagerBT..... 20-1

Inventory Quantity Bar Codes 20-3

IS4125 and IS4225 Scan Engines 21-1

IS4823 and IS4825 Scan Engines 22-1

Operating Modes 22-1

Miscellaneous Features

Custom Defaults 23-1
Serial Program Mode 23-2

Contact Information 24-1

Honeywell Scanning & Mobility
90 Coles Road
Blackwood, NJ 08012-4683



00-02544 Rev J
June 2009
Printed in China