

NCR RealScan 7802 Price Verifier
Release 1.0
User Guide



497-0425530
Issue I

Table of Contents

Chapter 1: Introduction

What's in this Manual	1-11
NCR RealScan 7802 Configurations.....	1-12
The RealScan 7802 Description	1-14
Technical Knowledge Required	1-15
Installation	1-15
Operation	1-15
Application Program Interface (API).....	1-15
Technical Assistance.....	1-15
Service Responsibility	1-16

Chapter 2: Hardware Installation

Items Shipped with the RealScan 7802.....	2-1
Mounting the RealScan 7802	2-2
Mounting to a Wall	2-2
Mounting to Column.....	2-3
Mounting to a Pole.....	2-3
Mounting to a Stand.....	2-4
Wiring the RealScan 7802.....	2-5
Wiring the Ethernet Model	2-5
Wiring the RF Wireless Model.....	2-6
Entering the ESS ID	2-6
Load the ESS ID as follows.....	2-6
Setting up a Wireless RF Link.....	2-7
Adding a Serial Printer	2-7
Wiring and Configuring the Serial Port.....	2-8
Sending Data to the Printer.....	2-8
Wiring Precautions	2-9

Chapter 3: Software Installation

Introduction	3-1
Server Install	3-1
Unit Configuration.....	3-2
NCR RealScan 7802 Software Updates.....	3-2
V3.XX Software	3-2
V4.XX Software	3-2

Chapter 4: Network Configuration

Introduction	4-1
Network Activity	4-1
NCR RealScan 7802 Configuration	4-3
Quick Start	4-3
Configuration Information Screens.....	4-3
UnitConfig Program	4-5
Using Unit Configuration.....	4-6
Configuration Rules.....	4-7
WEP Network Security	4-8
WEP Types	4-8
WEP Description	4-8
Setting WEP.....	4-8
Before You Start.....	4-8
Procedure.....	4-9
Network Diagnostics	4-10
Diagnostic Configurations	4-10
Diagnostic Screens and Messages	4-10
Internal Error.....	4-11
Transfer Error	4-11
Data Transfer.....	4-11
File Unavailable.....	4-11
No Attribute.....	4-11
Connect Error.....	4-11
Connect Fail	4-11
Connect Timeout	4-11
Refused.....	4-12
Logon.....	4-12
Protocol Fail	4-12
Share Unavailable.....	4-12
Host Resolution	4-12
Transfer	4-12

Chapter 5: Interfacing to the Back Office Server

Overview	5-2
Software Developers Kit (SDK)	5-2
ProductInfo Protocol Description	5-2
Protocol Implementation Rules	5-4
NCR RealScan 7802 Implementation Rules	5-5
NCR RealScan 7802 Supported Modes	5-6
Fixed Unit Identification.....	5-6

BuildInfo	5-6
ProductName	5-6
Serialnumber	5-6
User Configurable Unit identification	5-6
UnitID.....	5-6
UnitIP	5-6
Unitmask	5-6
GatewayIP	5-6
UserName.....	5-6
Password.....	5-6
Setup for Windows Networking (SMB)	5-7
Domain	5-7
DNS	5-7
NetworkName	5-7
WINSServerIP.....	5-7
WindowsServ	5-7
ShareName	5-7
RealScan 7802 FTP Server Configuration.....	5-7
FTPUserName	5-7
FTPPassword.....	5-7
FTPSuperName	5-7
FTPSuperPwd.....	5-7
Setup for FTP, QFX, NTP, PRODUCTINFO	5-8
ServerType	5-8
FTPServerIP	5-8
QFXPort	5-8
QFXServer.....	5-8
QFXTIMEOUT	5-8
NTPHost.....	5-8
NPTZOffset.....	5-8
SloppiIP	5-8
SloppiPort.....	5-8
SloppiTimeout.....	5-8
Product Query configuration	5-9
IgnoreAckNak	5-9
IgnoreResponseChars	5-9
QueryPadTo.....	5-9
QueryPrefix	5-9
SendError.....	5-9
SendResponse.....	5-9
SendUnitID.....	5-9

Trivialcomm	5-9
Presentation configuration	5-9
TextCols	5-9
TextRows.....	5-9
TextHPos	5-10
TextVPos	5-10
TextBacknd	5-10
TextForegnd	5-10
TextDisplay	5-10
FontFile	5-10
MsgChecking.....	5-10
MsgUnavail	5-10
POStimeout	5-10
ShowShortPoll.....	5-10
ShowLongPoll	5-11
TextTransparent.....	5-11
Multiple Windows	5-11
Showtime.....	5-11
DelayNextImage.....	5-11
@ x,y	5-11
Real Time Clock Display.....	5-11
ClockFontFile.....	5-11
ClockHPos.....	5-11
ClockVPos.....	5-11
Clock_Fcolor.....	5-11
Clock_Bcolor.....	5-11
ClockFormat.....	5-12
ScanShowClock.....	5-12
ClockTransparent	5-12
Miscellaneous configuration.....	5-12
DateTime	5-12
EventEnd	5-12
EventStart	5-12
WallPaperEvent.....	5-12
User1	5-13
RegisterINI	5-13
RegisterStart	5-13
DisplaySetup	5-13
DisplaySetup2	5-13
DisplayAll	5-13
NoBarCodes	5-13

Version	5-13
Diversity	5-13
Wireless	5-13
FlashHash	5-14
WEPEncryption.....	5-14
WEPKeyIndex.....	5-14
WEPKey1, WEPKey2, WEPKey3, WEPKey4.....	5-14
Port2Function	5-14
BypassNCRPrefix.....	5-14
ExtCharacterSet.....	5-15
Command modes	5-15
Commit.....	5-15
Invalidate	5-15
Restart.....	5-15
TextReset.....	5-15
Programmatic Modes.....	5-15
GiveHelpText	5-15
Timeout	5-16
UnitStatus	5-16
QFX Quick File Transfer Protocol	5-17
Tokens.....	5-17
INFO.....	5-17
SEND.....	5-17
DIFF	5-17
ERRR.....	5-17
INFO exchange.....	5-17
Request	5-17
Response.....	5-17
Response.....	5-17
Request	5-18
Response.....	5-18
Response.....	5-18
Request	5-18
Response.....	5-18
Response.....	5-18
Using Graphics Characters.....	5-19
Using the Touch Screen	5-20
Introduction.....	5-20
Touch Screen Description	5-20
Configuring Scanvue for Input Devices	5-20
General	5-20

Enable Multiplexer	5-20
Start Event and End Event Masks	5-21
Touch Screen.....	5-21
Data Bytes (Parameters)	5-21
Structure of EVNT packet.....	5-21
Example (shown in hexadecimal form).....	5-22
New Touch Screen Modes.....	5-22

Chapter 6: RealScan 7802-2000 Vacuum Fluorescent Display

Description	6-1
Operation.....	6-2
Text Slideshow	6-2
Changing Character Sets.....	6-2
Customer Messages	6-3
Changing Messages	6-3
Creating Customer Messages on VF Display Models	6-4
Network Messages.....	6-5
Example 1:.....	6-6
Example 2:.....	6-7
Greeting Message	6-8

Chapter 7: Programming the RealScan 7802-3000

NCR 7802-3000 Programming Bar Code Tags.....	7-2
CONFIGURATION DEFAULT	7-2
LABEL IDENTIFIER.....	7-2
SAVE CONFIGURATION AND RESET	7-3
SET RS-232 PARAMETERS (BAUD RATE)	7-3
SET RS-232 PARAMETERS (PARITY).....	7-4
SET RS-232 PARAMETERS (STOP / BIT).....	7-4
SET RS-232 PARAMETERS (RTS / CTS)	7-6
SET RS-232 PARAMETERS (BCC)	7-7
SET RS-232 PARAMETERS (PREFIX)	7-7
SET RS-232 PARAMETERS (TERMINATOR).....	7-8
HEX CODES (0 to 9)	7-8
HEX CODES (A to F)	7-10
FONT SETS.....	7-11

Chapter 8: Using the Touch Screen

Introduction	8-1
Touch Screen Description.....	8-1
Configuring ScanVue for Input Devices.....	8-2

General.....	8-2
Enable Multiplexer	8-2
Start Event and End Event Masks.....	8-2
Touch Screen	8-2
Data Bytes (Parameters)	8-2
Structure of EVNT packet	8-3
Example (shown in hexadecimal form)	8-3
New Touch Screen Modes.....	8-3

Chapter 9: Frequently Asked Questions

Chapter 10 Troubleshooting

Audible Indicators.....	10-1
Troubleshooting Flow Charts	10-1

Appendix A: Configuring with Barcodes

Barcode Reader Settings	A-1
Recommended Scanner Settings.....	A-1
Configuring the NCR RealScan 7802.....	A-1

Appendix B: NCR RealScan 7802 Initialization File

Overview	B-1
Real Time Clock.....	B-2
Rules for the realscan.ini File	B-2
Sections & Commands.....	B-3
Example of Initialization File.....	B-6

Appendix C: Creating a Slideshow

Introduction	C-1
Creating a Slideshow File	C-1
Using Multiple Graphic Windows	C-1
Rules	C-2
Section & Commands	C-2
Multiple Windows Commands.....	C-3
Example of Slideshow File	C-3
Example 1	C-3
Example 2.....	C-5

Appendix D: Font and Language Sets

Graphics (TFT) Display Models	D-1
Vacuum Fluorescent (V) Display Models	D-2

Appendix E: ProductInfo Protocol

Introduction	E-1
Protocol Types	E-1
Symmetry	E-1
Errors	E-2
Status Requests	E-2
Client Mode Changes.....	E-2
Packet Types	E-3
Nominal Mode Packets	E-3
General	E-3
Terminate Connection	E-3
Capability Query	E-3
Capability Response	E-4
Mode Set/Query	E-4
Mode Response	E-4
Error Report.....	E-5
Product Query.....	E-6
Data	E-6
Registration	E-6
Event.....	E-7
Client Requirements.....	E-8
Capabilities	E-8
Modes	E-8

Appendix F: Mounting Bracket Outlines

Appendix G: Application Notes

Wallpaper	G-1
Description.....	G-1
Creating Wallpaper.....	G-2
Using Wallpaper	G-3
Text Over Graphics (Mixed Mode) Operation	G-4
Default Text Setting.....	G-4
Single TIB.....	G-4

Appendix H: Regulatory Information

Safety Warnings.....	H-1
Servicing.....	H-1
Fuse Replacement.....	H-1
Power Supply Cord Used as Disconnect Means	H-1
Grounding Instructions	H-1

Radio Frequency Interference Statements	H-2
Federal Communications Commission (FCC)	H-2
Information to User	H-2
Wireless Units	H-2
Canadian Department of Communications	H-2
Wireless Units	H-3
Voluntary Control Council for Interference (VCCI)	H-3
International Radio Frequency Interference Statement	H-3
European Union Countries.....	H-3
Laser Safety	H-3
Laser Safety Label.....	H-4
Laser Power.....	H-4
Declaration of Conformity.....	H-4

Revision Record

Issue	Date	Remarks
A	Jun 2002	First Issue
B	Jul 2002	Added Service Responsibility (page 8) and updated Appendix A
C	Sep 2002	Added Serial Printer information
D	Dec 2002	Updated to software version 5.0
E	Jun 2003	Updated Chapter 5, Using the Touch Screen
F	Sep 2003	Updated Chapter 1 Configuration information
G	Oct 2003	Added Chapter 7 Using the Touch Screen
H	Nov 2003	Added Chapter 8 Frequently Asked Questions

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/NCR/7802 user manual.html](https://the-checkout-tech.com/manuals/NCR/7802%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)