

NCR RealScan 72 (7872)

Release 3.0

User Guide



B005-0000-1179

Issue N

Table of Contents

Chapter 1: Overview

| | |
|--------------------------------------|------|
| RealScan 72 Features | 1-1 |
| Base Models | 1-2 |
| Scan Doctor | 1-3 |
| Volume Adjust Button | 1-4 |
| Not-On-File | 1-4 |
| Voice Messages | 1-4 |
| Window Maintenance Indicator | 1-5 |
| Remote Displays | 1-6 |
| Decode Types | 1-7 |
| PACESETTER | 1-7 |
| Power Supply | 1-8 |
| Bi-Optic Scanning | 1-10 |
| How Does the Scanner Work? | 1-11 |
| Servicing | 1-13 |
| Discriminating Among Bar Codes | 1-14 |

Chapter 2: Site Preparation

| | |
|----------------------------------|-----|
| Customer Responsibilities | 2-1 |
| Environment Considerations | 2-2 |
| Installation Location | 2-3 |
| Checkstand Cutout | 2-3 |
| RealScan 72-1xxx/2xxx | 2-4 |
| RealScan 72-03xx/05xx/06xx | 2-5 |
| RealScan 72-5xxx | 2-6 |
| Cable Connections | 2-7 |
| Dual Cable Installations | 2-8 |

| | |
|---|------|
| RealScan 25 Remote Compact Display Dimensions | 2-10 |
| Hole Requirements for Cables | 2-10 |
| Physical Characteristics | 2-11 |
| Service Clearance | 2-11 |
| Scanner Weight | 2-12 |
| Preparing the Site | 2-13 |
| Power Considerations..... | 2-15 |
| Power Application..... | 2-15 |
| Power Transient Protection..... | 2-15 |
| Checkstand Wiring..... | 2-16 |

Chapter 3: Installation

| | |
|--|------|
| Special Installations..... | 3-1 |
| Peripheral Device Installation | 3-2 |
| RealScan 32 Hand-Held Scanner | 3-2 |
| Program the RealScan 72..... | 3-2 |
| Programming the RealScan 32..... | 3-3 |
| RealScan 35/36 Hand Held Scanner | 3-4 |
| Program the RealScan 72..... | 3-4 |
| Programming the RealScan 35/36 Hand Held Scanner..... | 3-5 |
| RealScan 37 Hand-Held Scanner | 3-5 |
| Program the RealScan 72..... | 3-6 |
| Programming the RealScan 37 Hand Held Scanner..... | 3-7 |
| Programming the RealScan 37-1000 Hand-Held Scanner ... | 3-9 |
| Metrologic MS951 | 3-10 |
| Program the RealScan 72..... | 3-10 |
| Programming the Metrologic MS951..... | 3-11 |
| Verify Installation..... | 3-13 |
| Symbol Technologies LS4000 | 3-13 |
| Program the RealScan 72..... | 3-13 |
| Programming the Symbol Technologies LS4000..... | 3-14 |

| | |
|--|------|
| Symbol Technologies LS 4071 Wireless Hand-Held Scanner | 3-17 |
| Programming the Symbol Technologies LS 4071..... | 3-17 |
| Programming the RealScan 72..... | 3-18 |
| Communication Protocol Strapping | 3-19 |
| Determine Communication Protocol..... | 3-19 |
| Strapping on the Digital Board..... | 3-20 |
| Communications Protocol..... | 3-21 |
| Scale Type | 3-22 |
| Scale Power Frequency | 3-22 |
| NCR 2170 Host Terminals | 3-22 |
| Setting up the NCR 2170 Terminal | 3-22 |
| IBM Communications | 3-23 |
| Scale Address for IBM Communications | 3-23 |
| Wincor-Nixdorf Beetle Terminal | 3-24 |
| Gilbarco Terminal..... | 3-25 |
| Wayne Terminal..... | 3-26 |
| Flash Latest Firmware..... | 3-26 |

Chapter 4: Operation

| | |
|--------------------------|-----|
| Label Orientation..... | 4-1 |
| Active Scan Zone..... | 4-2 |
| Bar Code Quality..... | 4-3 |
| Sample Bar Codes..... | 4-4 |
| Multiple Reads | 4-5 |
| Good Read Tone | 4-6 |
| Changing Volume | 4-6 |
| Changing Frequency | 4-6 |
| Scale Zero Button..... | 4-7 |
| Cleaning Procedure..... | 4-8 |
| Scanner Body | 4-9 |

| | |
|--|------|
| Vertical Scan Window | 4-9 |
| Top Plate/Horizontal Scan Window | 4-9 |
| Operating Instructions..... | 4-10 |
| Not-On-File Error..... | 4-10 |
| Scanning Procedure | 4-10 |
| Turning the RealScan 72 On and Off | 4-11 |
| Scanner/Scale Models | 4-11 |
| Scanner Only Models | 4-12 |
| Weighing Procedure..... | 4-12 |

Chapter 5: Programming

| | |
|-------------------------------------|------|
| How to Program the RealScan 72..... | 5-1 |
| Creating the Program | 5-1 |
| Write the Program | 5-1 |
| Enter the Program | 5-2 |
| Save the Program..... | 5-2 |
| Programming Mode | 5-3 |
| Programming Tags | 5-5 |
| Abort..... | 5-5 |
| Default..... | 5-6 |
| End..... | 5-6 |
| Hex 0 – Hex F | 5-6 |
| Programming Mode | 5-7 |
| Save and Reset | 5-7 |
| Program Entry Example..... | 5-7 |
| Enter All Parameters | 5-8 |
| Enter Specific Parameters | 5-10 |
| Program Defaults | 5-12 |
| Programming Tips | 5-15 |
| Parameter Descriptions | 5-17 |
| Communications Protocol | 5-17 |

| | |
|------------------------------------|------|
| Casio Dual Cable | 5-17 |
| IBM 1520 Bar Code Reader..... | 5-17 |
| IBM Hand Held Bar Code Reader..... | 5-18 |
| IBM Slot Scanner..... | 5-18 |
| OCIA NCR Dual Cable..... | 5-18 |
| OCIA NCR Long..... | 5-19 |
| OCIA NCR Short (Datachecker)..... | 5-19 |
| OCIA Non-NCR Dual Cable..... | 5-20 |
| OCIA Single Cable..... | 5-20 |
| RS-232..... | 5-20 |
| TEC Dual Cable..... | 5-20 |
| Good Read tone..... | 5-21 |
| Not-On-File Tone Volume..... | 5-21 |
| Tone Frequency (Hertz)..... | 5-21 |
| Tone Length (Milliseconds)..... | 5-21 |
| Tone On/Off | 5-22 |
| Tone Volume | 5-22 |
| Timers | 5-22 |
| Lockout Time (Milliseconds) | 5-22 |
| Restart Lockout Timer | 5-23 |
| Active Time (Minutes) | 5-23 |
| Bar Codes-1 | 5-23 |
| UPC/EAN | 5-23 |
| Version D | 5-24 |
| Extend UPC-A to EAN-13 | 5-24 |
| Extend UPC-E to UPC-A | 5-24 |
| Periodical Codes | 5-24 |
| Periodical Code Extension | 5-25 |
| Send Data..... | 5-25 |
| Bar Codes-2..... | 5-26 |
| Code 39..... | 5-26 |

| | |
|--|------|
| Minimum Characters Allowed | 5-26 |
| Full ASCII | 5-26 |
| Check Digit Present | 5-27 |
| Transmit Check Digit | 5-27 |
| Allow 1-or 2-Character Tags | 5-27 |
| Bar Codes-3 | 5-27 |
| Interleaved 2 of 5 | 5-28 |
| Bar Code Length | 5-28 |
| Value 1 and 2 | 5-28 |
| Check Digit Present | 5-29 |
| Transmit Check Digit | 5-29 |
| Bar Codes-4 | 5-29 |
| Code 128 | 5-29 |
| Minimum Data Characters Allowed | 5-30 |
| UCC 128 | 5-30 |
| Partial Decoding | 5-30 |
| Tone | 5-30 |
| Tone Length | 5-30 |
| Tone Frequency | 5-31 |
| Code 128 Stitch Enable | 5-31 |
| Scans Required | 5-31 |
| Overlap Characters | 5-31 |
| Minimum Segment Size | 5-31 |
| Bar Codes-5 | 5-32 |
| GS1 DataBar Enable | 5-32 |
| Scans Required on GS1 DataBar 14 | 5-32 |
| Scans Required on GS1 DataBar E | 5-32 |
| UCC-128 Emulation Mode | 5-33 |
| Bar Codes-6 | 5-33 |
| ISBN-10 and ISBN-13 | 5-33 |
| ISSN | 5-34 |

| | |
|---------------------------------------|------|
| Label Identifiers | 5-34 |
| Identifier Type..... | 5-34 |
| Common Byte 1 and Common Byte 2 | 5-35 |
| Bar Code Type..... | 5-36 |
| Common Byte..... | 5-36 |
| Unique Identifier | 5-37 |
| RS-232 Parameters-1 | 5-38 |
| Baud Rate..... | 5-38 |
| Parity | 5-38 |
| Stop Bits and Character Length..... | 5-39 |
| Handshake..... | 5-39 |
| RS-232 Parameters-2 | 5-40 |
| BCC Options..... | 5-40 |
| Interface Control..... | 5-40 |
| Check Digit..... | 5-41 |
| RS-232 Prefix Byte..... | 5-41 |
| Prefix Byte..... | 5-42 |
| ASCII Code..... | 5-42 |
| RS-232 Terminator Byte | 5-42 |
| Terminator Byte | 5-42 |
| ASCII Code..... | 5-43 |
| RS-232 Communications Options..... | 5-43 |
| Good Weigh Tone..... | 5-43 |
| Normal or Eavesdrop Mode | 5-43 |
| Message Delay | 5-44 |
| Scanner or Scanner/Scale Format | 5-44 |
| Scale Parameters | 5-46 |
| Model Number..... | 5-46 |
| IBM Address..... | 5-46 |
| Miscellaneous Parameters | 5-47 |
| Host Tone Control..... | 5-47 |

| | |
|---|------|
| IBM Retransmit Control | 5-47 |
| Enable/Disable Voice Messages..... | 5-48 |
| IBM-485 / IBM-USB Tag Data Format | 5-49 |
| Dual Cable Interface | 5-49 |
| Avery Scale Emulation..... | 5-50 |
| PACESETTER Information | 5-51 |
| PACESETTER Plus | 5-51 |
| Mode 1 – Inquiry | 5-51 |
| Mode 2 – Real Time | 5-52 |
| Mode 3 – Normal | 5-54 |
| Host Access to Tallies..... | 5-56 |
| Host Reset of Tallies | 5-59 |
| PACESETTER III | 5-60 |
| PACESETTER III Correction..... | 5-61 |
| PACESETTER III Detection..... | 5-61 |
| PACESETTER III Tallies | 5-62 |
| Firmware Flashing (for RealScan 72 SA Scanners) | 5-63 |
| Obtaining New Firmware..... | 5-63 |
| Acquiring and Installing the EasyFlash Software | 5-63 |
| Acquiring and Installing the NCR RealScan Flash Tool for Windows | 5-65 |
| Firmware Flashing Procedure | 5-68 |
| Operating EasyFlash Software..... | 5-69 |
| Operating NCR RealScan Flash Tool..... | 5-71 |
| Flash Utility Notes | 5-73 |
| Checking RealScan 72 Scanner Firmware Level | 5-73 |
| EasyFlash Firmware Flash Troubleshooting Guide..... | 5-76 |
| NCR Flash Tool Firmware Flash Troubleshooting Guide | 5-80 |
| Programming Worksheets | 5-81 |
| Communications Protocol | 5-82 |
| Single ASIC..... | 5-82 |

| | |
|--|-------|
| Super ASIC | 5-83 |
| Good Read Tone..... | 5-84 |
| Timers | 5-85 |
| Single ASIC..... | 5-85 |
| Super ASIC | 5-86 |
| Bar Codes-1..... | 5-87 |
| Single ASIC..... | 5-87 |
| Super ASIC | 5-88 |
| Bar Codes-2..... | 5-89 |
| Bar Codes-3..... | 5-90 |
| Bar Codes-4..... | 5-91 |
| Bar Codes-5..... | 5-92 |
| Bar Codes-6..... | 5-93 |
| Label Identifiers | 5-94 |
| Number System Character | 5-95 |
| RS-232 Parameters-1 | 5-96 |
| RS-232 Parameters-2 | 5-97 |
| Single ASIC..... | 5-97 |
| Super ASIC | 5-98 |
| RS-232 Prefix Byte..... | 5-99 |
| RS-232 Terminator Byte | 5-100 |
| RS-232 Communications Options..... | 5-101 |
| Scale Parameters | 5-101 |
| Miscellaneous Parameters | 5-102 |
| Single ASIC..... | 5-102 |
| Super ASIC | 5-103 |
| Code 128 Tone Length | 5-104 |
| Code 128 Tone Frequency | 5-104 |
| Code 128 Tone..... | 5-105 |
| Code 128 Minimum and Maximum Tag Length..... | 5-105 |
| Code 39 Tone Length | 5-106 |

| | |
|---|-------|
| Code 128 Stitch..... | 5-106 |
| Code 39 Tone Frequency | 5-107 |
| Code 39 Tone..... | 5-107 |
| Code 39 Quiet Zone..... | 5-107 |
| Code 39 InterCharacter Gap Check | 5-108 |
| Code 39 Halves | 5-108 |
| Code 39 Stitch..... | 5-108 |
| Code 39 CD Length1 | 5-109 |
| Code 39 CD Length2 | 5-109 |
| Interleaved 2 of 5 Tone Length..... | 5-110 |
| Interleaved 2 of 5 Tone Frequency | 5-110 |
| Interleaved 2 of 5 Tone..... | 5-111 |
| Interleaved 2 of 5 CD Length1 | 5-111 |
| Interleaved 2 of 5 CD Length2..... | 5-111 |
| GS1 DataBar Tone Length | 5-112 |
| GS1 DataBar Tone Frequency | 5-112 |
| GS1 DataBar Tone..... | 5-113 |
| GS1 DataBar-E AI 93 to Code 39 Tag Data Conversion .. | 5-113 |
| GS1 DataBar-E AI 94 to UCC-128 Tag Data Conversion | 5-113 |
| GS1 DataBar-E AI 94 to Code-128 Tag Data Conversion | 5-113 |
| GS1 DataBar-E AI 95 to Interleaved 2 of 5 Tag Data Conversion..... | 5-114 |
| Number of Coupon Scans Required | 5-114 |
| Number of UPC/EAN Scans Required..... | 5-115 |
| Number of Code 39 Scans Required | 5-115 |
| Number of Interleaved 2 of 5 Scans Required..... | 5-115 |
| Number of Code 128 Scans Required | 5-116 |
| Number of Code 39 Overlaps Required..... | 5-116 |
| Number of Interleaved 2 of 5 Overlaps Required..... | 5-116 |
| Number of Minimum Code 39 Characters in Code 39 Partial | 5-117 |

| | |
|---|-------|
| Number of Code 128 Overlaps Required..... | 5-117 |
| Number of Minimum Interleaved 2 of 5 Characters in Interleaved 2 of 5 Partial..... | 5-117 |
| Number of Minimum Code 128 Characters in Code 128 Partial | 5-118 |
| Command-type Disable | 5-118 |
| Ignore RS-232 Commands from POS..... | 5-118 |
| GS1 DataBar Coupon Support..... | 5-118 |
| GS1 DataBar AI 8110 coupons | 5-119 |
| EAN-13 98 coupons | 5-119 |
| EAN-13 99 coupons | 5-119 |
| Dual Cable Interface | 5-120 |
| Single ASIC..... | 5-120 |
| Special Programming..... | 5-121 |
| Speak the Programmed Bar Codes..... | 5-121 |
| Speak the Serial Number | 5-121 |
| Good Read Tone Presets | 5-122 |
| Programming Multi-Symbol Scanning..... | 5-123 |
| JAN Magazine Code..... | 5-124 |
| GS1 DataBar..... | 5-124 |
| Enable/Disable GS1 DataBar..... | 5-124 |
| Send GS1 DataBar 14 as EAN-13 Data..... | 5-125 |
| ASCII Code Chart..... | 5-126 |

Chapter 6: Troubleshooting

| | |
|------------------------|-----|
| Error Codes | 6-1 |
| Scanner Problems | 6-3 |
| Scale Problems | 6-4 |

Appendix A: Additional Scale-related Diagnostic Functions

Appendix B: Scale Calibration Procedures

Appendix C: Technical Support

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/NCR/7872 user manual.html](https://the-checkout-tech.com/manuals/NCR/7872%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)