




# RealScan 7883 Installation and Owner Guide

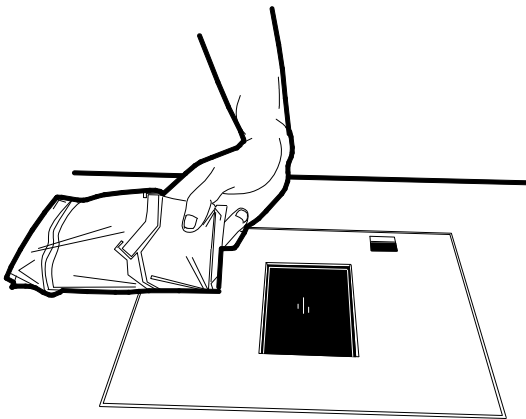

12623

497-0424789  
Release I  
August 2007

**Information Products  
RSD-Atlanta**

# Contents

- Contents .....3
- Revision Record .....5
- Obtaining Additional Information .....6
- Obtaining Technical Assistance .....6
- NCR RealScan 7883 Mountings .....7
- Installation Instructions .....8
- Step 1 - Installing Power Supply and Interface Cables.....9
  - Connecting the Cables to an NCR RealScan 7883 ..... 9
  - Auxiliary RS-232 Port ..... 12
  - Special Installations ..... 13
- Step 2 - Setting Program Parameters and Verifying Host Connection.....16
  - Turning on the RealScan 7883..... 16
  - Flash Latest Firmware – 7883-1200 or 1694/5 ..... 16
  - Programming the RealScan 7883..... 16
  - Programming Defaults..... 17
  - Programming for USB Connection..... 19
  - Reduced Space Symbology ..... 20
  - Making Other Program Changes ..... 21
  - Scan Sample Tags..... 22
  - Determining Label Quality ..... 23
- Step 3 - Setting RealScan 7883 Scan Zone .....24
  - Horizontal - Pass-by Scanning..... 25
  - Vertical - Pass-by Scanning..... 25
  - Vertical - Presentation Scanning from Top..... 26
  - Vertical - Presentation Scanning from Bottom ..... 26
- Step 4 - Mounting the RealScan 7883 .....27
  - Rubber Feet..... 27
  - Plastic Top Plate ..... 27
  - Vertical Mounting Bracket ..... 29
  - Checkstand Cutout..... 30
  - Checkpoint Cable..... 30
  - Cable Clamps..... 30
- Operating the Scanner.....31
- Cleaning the Scanner .....32
- Correcting Scanner Problems .....33
- Interface Information.....35
  - Interface Connector..... 35
  - Most Common Interface Cables ..... 35
  - Communications Protocol..... 36
  - Programming Worksheet ..... 36
  - Checkstand Hole – RealScan 7883 Horizontal Mount..... 37
  - Checkstand Hole – RealScan 7883 Flat Mount ..... 38
  - Ventilation Requirements ..... 38
  - Electrical Wiring..... 39
- NCR RealScan 7883, METTLER TOLEDO® Scale, & Sensormatic ScanMax™HS.....40
  - NCR Components ..... 40
  - METTLER TOLEDO Components ..... 41
  - Sensormatic Components ..... 41
  - System Construction ..... 42
  - Configuring the Scale ..... 43
  - Installing the Scanner..... 44
  - Connecting Sensormatic Components ..... 45
  - Routing the Cables..... 46
  - Completing the Installation..... 47

Calibrating the METTLER TOLEDO® Scale.....	48
Sensormatic Deactivation Indicators .....	50
Sensormatic Programmable Functions.....	50
Troubleshooting.....	51
Programming Worksheets.....	53
ASCII Code Chart.....	61
Regulatory Information .....	62
Federal Communications Commission (FCC) Radio Frequency Interference Statement .....	62
Voluntary Control Council for Interference (VCCI) Radio Frequency Interference Statement .....	62
Canadian Department of Communications Radio Frequency Interference Statement.....	62
Identification Labels .....	62
CE Mark Applicability.....	63
Declaration of Conformity.....	64
Laser Safety.....	65
Laser Safety Label.....	65
Laser Module Label.....	65
Laser Power.....	66
Programming Tags.....	67
Volume Adjustment.....	67
Reset.....	67
Default.....	67
Programming Mode.....	68
End.....	68
Save and Reset.....	68
Abort.....	69
Diagnostic Mode.....	69
RS-232 Temporary Service Mode .....	69
Mode 1.....	70
Mode 2.....	70
Reset Tallies.....	70
Firmware Flashing.....	71
Hex 0.....	71
Hex 1.....	71
Hex 2.....	72
Hex 3.....	72
Hex 4.....	72
Hex 5.....	73
Hex 6.....	73
Hex 7.....	73
Hex 8.....	74
Hex 9.....	74
Hex A.....	74
Hex B.....	75
Hex C.....	75
Hex D.....	75
Hex E.....	76
Hex F.....	76

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/NCR/7883 installation and owner manual.html](https://the-checkout-tech.com/manuals/NCR/7883%20installation%20and%20owner%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)