



# **NCR 7890 Presentation Scanner**

## User's Guide

BD20-0901-A  
Release G  
November 1998



---

# Contents

---

## Chapter 1

### **Introducing the 7890 Scanner**

The NCR 7890 Presentation Scanner .....	1-1
Using Your Scanner .....	1-3
Laser Scanning .....	1-4

---

## Chapter 2

### **Site Requirements for Your 7890 Scanner**

#### Understanding Your 7890 Scanner

Requirements .....	2-1
Physical Considerations .....	2-1
Environmental Considerations .....	2-3
Power Considerations .....	2-4
Scanner Location .....	2-4

---

## Chapter 3

### **Installing Your 7890 Scanner**

Installing Your 7890 Scanner .....	3-1
Overview .....	3-1
Preparing for Installation .....	3-1
Installing the Scanner .....	3-2
Preparing for Installation .....	3-3
What is in the Box .....	3-3
Reporting a Damaged Scanner .....	3-3

## Contents

Interpreting the 7890 Product Number .....	3-4
Identifying Scanner Module Cables .....	3-4
Identifying Interface Cables .....	3-5
Determining Scanner Location .....	3-6
Identifying Available Kits .....	3-7
Determining the Communication Protocol .....	3-9
Installing the Scanner .....	3-11
Connecting the Scanner Module Cable .....	3-12
Connecting the Power Module .....	3-12
Modifying the Scanner Program .....	3-13
Connecting the Interface Cable .....	3-13

---

### Chapter 4

#### **Operating Your 7890 Scanner**

The 7890 Scanner Components .....	4-1
Presentation Scanning .....	4-2
Pick-Up Scanning .....	4-5
Label Orientation .....	4-6
Scan Pattern Location .....	4-6
Label Rotation .....	4-7
Distance from Scanner .....	4-8
Read Indicators .....	4-9
Status Indicator .....	4-9
Audible Indicator .....	4-9
Indicator Functions .....	4-10
Bar Code Quality .....	4-11
Taking Care of Your Scanner .....	4-13
Scanner Operation Summary .....	4-14
1 Scan the Bar Code Label .....	4-14
2 Observe the Read Indication .....	4-14

---

Chapter 5

**Programming Your 7890 Scanner**

Overview - Programming Your Scanner .....	5-1
Preparing for Your Program .....	5-1
Completing the Worksheets .....	5-1
Entering Your Program .....	5-2
Requirements .....	5-2
Helps .....	5-2
Suggestion .....	5-2
Programming Considerations .....	5-3
Programming Worksheets .....	5-3
Programming Tags .....	5-3
Programming Mode .....	5-5
Entering Your Program .....	5-6
Communications Protocol .....	5-7
Protocol .....	5-7
Sample Program .....	5-8
Entering the Program .....	5-8
Good Read Tone .....	5-10
Tone On/Off .....	5-10
Tone Frequency .....	5-10
Tone Length .....	5-11
Parameter Shortcuts .....	5-11
Sample Program .....	5-12
Entering the Program .....	5-12
Timers .....	5-16
Lockout Time .....	5-16
Restart Lockout Timer .....	5-16
Active Time .....	5-17
Multiplier .....	5-17
Parameter Shortcuts .....	5-18
Sample Program .....	5-18
Entering the Program .....	5-19
Bar Codes - 1 .....	5-22
Code 128 .....	5-22

## Contents

UPC/EAN .....	5-22
Parameter Shortcuts .....	5-25
Sample Program .....	5-25
Entering the Program .....	5-26
Bar Codes - 2 .....	5-32
Code 39 .....	5-32
Parameter Shortcuts .....	5-33
Sample Program .....	5-34
Entering the Program .....	5-35
Bar Codes - 3 .....	5-39
Interleaved 2 of 5 .....	5-39
Parameter Shortcuts .....	5-41
Sample Program .....	5-41
Entering the Program .....	5-42
Bar Codes - 4 .....	5-47
Code 128 .....	5-47
Minimum Data Characters Allowed .....	5-47
UCC 128 .....	5-48
Parameter Shortcuts .....	5-48
Sample Program .....	5-49
Entering the Program .....	5-50
Label Identifiers .....	5-52
Identifier Type .....	5-52
Common Byte 1 and Common Byte 2 .....	5-55
Bar Code Type .....	5-55
Common Byte .....	5-56
Unique Identifier .....	5-56
Version Number .....	5-57
Parameter Shortcuts .....	5-57
Sample Program .....	5-58
Entering the Program .....	5-59
Additional Bar Code Options .....	5-66
UPC Number System Character .....	5-66
Sample Program .....	5-66
Entering the Program .....	5-67

## Contents

RS-232 Parameters - 1 .....	5-68
Baud Rate .....	5-68
Parity .....	5-68
Stop Bits and Character Length .....	5-68
Handshake .....	5-69
Parameter Shortcuts .....	5-70
Sample Program .....	5-70
Entering the Program .....	5-71
RS-232 Parameters - 2 .....	5-74
BCC Option .....	5-74
Interface Control .....	5-74
Check Digit .....	5-75
VLI and Bit 6 EOM .....	5-75
Retransmit on ACK/NAK Timer	
Expiration .....	5-76
Parameter Shortcuts .....	5-76
Sample Program .....	5-77
Entering the Program .....	5-78
RS-232 Prefix Byte .....	5-81
Prefix Byte .....	5-81
ASCII Code .....	5-81
Parameter Shortcuts .....	5-81
Sample Program .....	5-82
Entering the Program .....	5-82
RS-232 Terminator Byte .....	5-85
Terminator Byte .....	5-85
ASCII Code .....	5-85
Parameter Shortcuts .....	5-86
Sample Program .....	5-86
Entering the Program .....	5-86
Communications Options .....	5-89
Send IBM Tags in Hex or ASCII .....	5-89
Maintain or Drop OCIA Tag Message	
Data .....	5-89
Retries on IBM Message .....	5-90

## Contents

RS-232 Mode: Normal or Eavesdrop .....	5-90
RS-232 Delay .....	5-91
OCIA NCR Short Soft Rest .....	5-91
Sample Program .....	5-92
Entering the Program .....	5-93
Clone Programming .....	5-95
Scanner Programming Summary .....	5-97
Creating the program .....	5-97
Entering the Program .....	5-98
Saving the Program .....	5-99
Cloning the Program .....	5-99

---

### Chapter 6

#### **Troubleshooting Your 7890 Scanner**

Fault Identification .....	6-1
Repairing Your 7890 Scanner .....	6-4
Interface Switch .....	6-5
Switch Function .....	6-5
Changing the Interface Switch Setting .....	6-6
Fuse .....	6-7

---

### Appendix A

#### **Programming Worksheets**

Overview - Programming Worksheets .....	A-1
Purpose .....	A-1
Format .....	A-1
Defaults .....	A-1
Shortcuts .....	A-2
ASCII Characters .....	A-2
Program Entry .....	A-2

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*