



---

# **Magellan<sup>®</sup> 8100/8100Ω 8200/8200Ω**



Model 8204 shown

---

## ***Product Reference Guide***

# TABLE OF CONTENTS

|                                                         |                |
|---------------------------------------------------------|----------------|
| <b>Section 1. Introduction</b>                          | <b>1-1</b>     |
| Manual Overview                                         | 1-2            |
| How to Use This Manual                                  | 1-3            |
| Manual Conventions                                      | 1-3            |
| Scanner and Scanning-Scale Nomenclature                 | 1-4            |
| Connectors                                              | 1-5            |
| Physical Parameters                                     | 1-6            |
| Scanning                                                | 1-6            |
| Weighing                                                | 1-6            |
| Rated Weight Capacity                                   | 1-6            |
| Minimum Increment                                       | 1-6            |
| Maximum Static Weight (Overload)                        | 1-6            |
| Automatic Zero Maintenance                              | 1-7            |
| Warm-Up Time                                            | 1-7            |
| Thermal Equilibrium                                     | 1-7            |
| Power-up                                                | 1-7            |
| User Configurable Warm-up                               | 1-7            |
| Electrical Specifications                               | 1-9            |
| Power Supply                                            | 1-9            |
| Laser and Product Safety                                | 1-10           |
| Labeling                                                | 1-12           |
| Bar Codes Supported                                     | 1-14           |
| <br><b>Section 2. Site Preparation and Installation</b> | <br><b>2-1</b> |
| Pre-Installation Considerations                         | 2-2            |
| Checkstand Design                                       | 2-3            |
| Scanner Installation                                    | 2-4            |
| Scanner Maintenance                                     | 2-4            |
| Ergonomic References                                    | 2-4            |
| Scanner Usage                                           | 2-4            |
| Site Preparation Overview                               | 2-5            |
| Ventilation and Spacing                                 | 2-7            |
| Service Access                                          | 2-8            |
| Power Installation                                      | 2-9            |
| Grounding                                               | 2-9            |

|                                                       |            |
|-------------------------------------------------------|------------|
| Checkstand Preparation .....                          | 2-10       |
| Liquid Spills and Moisture .....                      | 2-10       |
| Counter Cutout .....                                  | 2-11       |
| Checkstand Mounting .....                             | 2-17       |
| Installation Overview .....                           | 2-17       |
| Unpacking .....                                       | 2-17       |
| Operational Verification .....                        | 2-19       |
| Diagnostic Modes .....                                | 2-21       |
| Scanner Diagnostic Mode .....                         | 2-21       |
| Scale Diagnostic Mode .....                           | 2-22       |
| Cables & Connections .....                            | 2-22       |
| Remote Scale Display Placement/Installation .....     | 2-24       |
| Lighting Considerations .....                         | 2-24       |
| Viewing Angle .....                                   | 2-25       |
| Placing and Installing the Remote Scale Display ..... | 2-26       |
| (Short Pedestal Base ONLY) .....                      | 2-26       |
| Changing Weighing Modes .....                         | 2-29       |
| Set-Up & Installation .....                           | 2-29       |
| Set-up .....                                          | 2-29       |
| Installation .....                                    | 2-31       |
| System Power-Up Recap .....                           | 2-33       |
| <b>Section 3. Operation and Maintenance .....</b>     | <b>3-1</b> |
| Scanning Items .....                                  | 3-1        |
| Proper Scanning Technique .....                       | 3-2        |
| Proper Weighing Technique .....                       | 3-3        |
| Operational Controls .....                            | 3-4        |
| Operational Modes .....                               | 3-4        |
| Power-Up/Selftest & Pre-Operation .....               | 3-4        |
| Power-Up/Selftest .....                               | 3-4        |
| Error Reporting .....                                 | 3-5        |
| Operational Configuration .....                       | 3-5        |
| Operating Mode .....                                  | 3-6        |
| Normal Operation .....                                | 3-6        |
| Sleep Mode .....                                      | 3-6        |
| Additional Functions .....                            | 3-7        |
| Programming .....                                     | 3-7        |

|                                                   |            |
|---------------------------------------------------|------------|
| Diagnostic Mode .....                             | 3-7        |
| Scanner and Scale Reset .....                     | 3-7        |
| Scale Adjustments .....                           | 3-8        |
| Zeroing the Scale .....                           | 3-8        |
| Calibrating the Scale .....                       | 3-8        |
| Operational Maintenance .....                     | 3-10       |
| Vertical Scan Window Replacement .....            | 3-11       |
| Horizontal Scan Window Replacement (WRG) .....    | 3-13       |
| <b>Section 4. Problem Isolation.....</b>          | <b>4-1</b> |
| Power-Up Selftest .....                           | 4-1        |
| Operational Tests .....                           | 4-1        |
| Diagnostic Tests .....                            | 4-2        |
| Diagnostic Procedures .....                       | 4-2        |
| Error Codes .....                                 | 4-3        |
| Scale Error Reporting .....                       | 4-6        |
| Flowcharts .....                                  | 4-8        |
| <b>Section 5. Calibration .....</b>               | <b>5-1</b> |
| Description of Calibration Sequence .....         | 5-2        |
| Motion Test .....                                 | 5-3        |
| Automatic Zero Setting Test .....                 | 5-3        |
| Preparing the Scanner/Scale for Calibration ..... | 5-4        |
| Calibrating the Scale (Pounds & Kilograms) .....  | 5-4        |
| Calibration Verification (U.S. Pounds) .....      | 5-8        |
| Increasing-Load Test (Phase 1) .....              | 5-9        |
| Shift Test .....                                  | 5-9        |
| Increasing- Load Test (Phase 2) .....             | 5-11       |
| Blanking Test .....                               | 5-11       |
| Decreasing-Load Test .....                        | 5-12       |
| Return to Zero Test .....                         | 5-12       |
| Calibration Verification (Kilograms) .....        | 5-13       |
| Increasing-Load Test (Phase 1) .....              | 5-13       |
| Shift Test (Metric) .....                         | 5-14       |
| Increasing- Load Test (Phase 2) .....             | 5-15       |
| Blanking Test .....                               | 5-16       |
| Decreasing-Load Test .....                        | 5-17       |
| Return to Zero Test .....                         | 5-17       |

|                                               |            |
|-----------------------------------------------|------------|
| <b>Section 6. Programming</b>                 | <b>6-1</b> |
| Introduction to Label Programming             | 6-1        |
| Understanding the Basics                      | 6-1        |
| Integrating the Scanner With Your Host System | 6-1        |
| Customizing Your Scanner's Operation          | 6-2        |
| Programming Overview                          | 6-3        |
| Programming via Handheld Device               | 6-3        |
| What Is Programming Mode?                     | 6-4        |
| Entering and Exiting Programming Mode.        | 6-4        |
| Programming Session                           | 6-5        |
| Programming Sequence                          | 6-7        |
| LED and Beeper Indicators                     | 6-9        |
| If You Make a Mistake...                      | 6-9        |
| Return to Factory Settings                    | 6-9        |
| Test Mode                                     | 6-10       |
| General Scanner and Scale Features            | 6-11       |
| Double Read Timeout                           | 6-11       |
| Laser Timeout                                 | 6-13       |
| Motor Timeout                                 | 6-15       |
| Green LED Idle State                          | 6-18       |
| Scanner Button Options                        | 6-19       |
| Power-up Beep Control                         | 6-21       |
| Good Read Beep Control                        | 6-23       |
| Good Read Beep Frequency                      | 6-24       |
| Good Read Beep Length                         | 6-26       |
| Good Read Beep Volume                         | 6-27       |
| Good Read When to Indicate                    | 6-30       |
| Scale Enable                                  | 6-32       |
| Scale Country Mode                            | 6-33       |
| Scale Enforced Zero Return                    | 6-35       |
| Scale Interface Type                          | 6-37       |
| Scale Motion Level Filter                     | 6-39       |
| Scale LED Enable                              | 6-41       |
| Remote Display — Enable/Disable               | 6-42       |
| EAS Active State                              | 6-43       |
| EAS Timeout                                   | 6-44       |
| Aux Port Mode                                 | 6-45       |

|                                                 |      |
|-------------------------------------------------|------|
| Productivity Index Reporting (PIR) .....        | 6-47 |
| Interface Related Features .....                | 6-48 |
| Interface Type .....                            | 6-48 |
| RS-232 Interface Selection .....                | 6-50 |
| RS-232 Wincor-Nixdorf Interface Selection ..... | 6-51 |
| RS-232 Single Cable Interface Selection .....   | 6-52 |
| IBM Port 17 Interface Selection .....           | 6-53 |
| IBM USB Interface Selection .....               | 6-54 |
| Maximum Host-Transmitted Message Length .....   | 6-55 |
| Number of Host Transmission Buffers .....       | 6-56 |
| Global Prefix .....                             | 6-57 |
| Global Suffix .....                             | 6-59 |
| IBM Features .....                              | 6-61 |
| IBM Interface Options .....                     | 6-61 |
| IBM Scale Address .....                         | 6-62 |
| IBM Transmit Labels in Code 39 Format .....     | 6-64 |
| IBM USB Interface Options .....                 | 6-65 |
| IBM USB Scanner Device Type .....               | 6-67 |
| RS-232 Features .....                           | 6-68 |
| RS-232 Baud Rate .....                          | 6-68 |
| RS-232 Number of Data Bits .....                | 6-72 |
| RS-232 Number of Stop Bits .....                | 6-73 |
| RS-232 Parity .....                             | 6-74 |
| RS-232 Hardware Control .....                   | 6-76 |
| RS-232 Intercharacter Delay .....               | 6-78 |
| RS-232 Software Flow Control .....              | 6-79 |
| RS-232 Host Echo .....                          | 6-80 |
| RS-232 Host Echo Quiet Interval .....           | 6-81 |
| RS-232 Ignore Host Commands .....               | 6-82 |
| RS-232 TTL .....                                | 6-83 |
| RS-232 TTL Invert .....                         | 6-84 |
| RS-232 Beep on ASCII BEL .....                  | 6-85 |
| RS-232 Beep After Weigh .....                   | 6-86 |
| RS-232 Beep on Not on File .....                | 6-87 |
| RS-232 ACK NAK Enable .....                     | 6-88 |
| RS-232 ACK Character .....                      | 6-90 |
| RS-232 NAK Character .....                      | 6-91 |

|                                                  |       |
|--------------------------------------------------|-------|
| RS-232 Retry on ACK NAK Timeout .....            | 6-92  |
| RS-232 ACK NAK Timeout Value .....               | 6-93  |
| RS-232 ACK NAK Retry Count .....                 | 6-94  |
| RS-232 ACK NAK Error Handling .....              | 6-95  |
| RS-232 Label ID Control .....                    | 6-97  |
| Single Cable RS-232 Options .....                | 6-99  |
| Single Cable RS-232 Scanner Only Protocol .....  | 6-100 |
| Single Cable RS-232 RTS CTS Selection .....      | 6-101 |
| Single Cable RS-232 Use BCC .....                | 6-104 |
| Single Cable RS-232 Use ACK/NAK .....            | 6-105 |
| Single Cable RS-232 Use STX .....                | 6-106 |
| Set Single Cable RS-232 STX Character .....      | 6-107 |
| Single Cable RS-232 Use ETX .....                | 6-108 |
| Set Single Cable RS-232 ETX Character .....      | 6-109 |
| Single Cable RS-232 PSC Extensions .....         | 6-110 |
| Symbology Programming .....                      | 6-111 |
| UPC-A Enable .....                               | 6-111 |
| UPC-A Number System Character Transmission ..... | 6-112 |
| UPC-A Check Character Transmission .....         | 6-113 |
| Expand UPC-A to EAN-13 .....                     | 6-114 |
| UPC/EAN AIM ID .....                             | 6-115 |
| UPC-A Label ID .....                             | 6-116 |
| UPC-A 2-Digit Supplemental Label ID .....        | 6-117 |
| UPC-A 5-Digit Supplemental Label ID .....        | 6-118 |
| UPC-A 128 Supplemental Label ID .....            | 6-119 |
| UPC-E Enable .....                               | 6-120 |
| UPC-E Number System Character Transmission ..... | 6-121 |
| UPC-E Check Character Transmission .....         | 6-122 |
| Expand UPC-E to UPC-A .....                      | 6-123 |
| Expand UPC-E to EAN-13 .....                     | 6-124 |
| UPC-E Label ID .....                             | 6-125 |
| UPC-E 2-Digit Supplemental Label ID .....        | 6-126 |
| UPC-E 5-Digit Supplemental Label ID .....        | 6-127 |
| UPC-E 128 Supplemental Label ID .....            | 6-128 |
| EAN-13 Enable .....                              | 6-129 |
| EAN-13 First Character Transmission .....        | 6-130 |
| EAN-13 Check Character Transmission .....        | 6-131 |

|                                            |       |
|--------------------------------------------|-------|
| EAN-13 ISBN Conversion Enable .....        | 6-132 |
| EAN 13 Label ID .....                      | 6-133 |
| EAN-13 2-Digit Supplemental Label ID ..... | 6-134 |
| EAN-13 5-Digit Supplemental Label ID ..... | 6-135 |
| EAN-13 128 Supplemental Label ID .....     | 6-136 |
| Bookland AIM ID .....                      | 6-137 |
| Bookland Label ID .....                    | 6-138 |
| EAN-8 Enable .....                         | 6-139 |
| EAN-8 Check Character Transmission .....   | 6-140 |
| Expand EAN-8 to EAN-13 .....               | 6-141 |
| EAN 8 Label ID .....                       | 6-142 |
| EAN-8 2-Digit Supplemental Label ID .....  | 6-143 |
| EAN-8 5-Digit Supplemental Label ID .....  | 6-144 |
| EAN-8 128 Supplemental Label ID .....      | 6-145 |
| EAN-8 Decoding Levels .....                | 6-146 |
| Other UPC/EAN Options .....                | 6-149 |
| UPC/EAN Reconstruction .....               | 6-150 |
| Price Weight Check .....                   | 6-151 |
| Enable EAN Two Label .....                 | 6-154 |
| Addons .....                               | 6-155 |
| UPC-A and EAN-13 Decoding Levels .....     | 6-157 |
| GTIN Enable .....                          | 6-160 |
| GTIN Label ID .....                        | 6-161 |
| GTIN 2-Digit Supplemental Label ID .....   | 6-162 |
| GTIN 5-Digit Supplemental Label ID .....   | 6-163 |
| GTIN Code 128 Supplemental Label ID .....  | 6-164 |
| RSS-14 Enable .....                        | 6-165 |
| RSS-14 Check Character Transmission .....  | 6-166 |
| RSS-14/EAN-128 Emulation .....             | 6-167 |
| RSS-14 2D Component Enable .....           | 6-168 |
| RSS-14 AIM ID .....                        | 6-169 |
| RSS-14 Label ID .....                      | 6-170 |
| RSS Expanded Enable .....                  | 6-171 |
| RSS Expanded EAN-128 Emulation .....       | 6-172 |
| RSS Expanded 2D Component Enable .....     | 6-173 |
| RSS Expanded AIM ID .....                  | 6-174 |
| RSS Expanded Label ID .....                | 6-175 |



|                                                       |       |
|-------------------------------------------------------|-------|
| RSS Expanded Length Control .....                     | 6-176 |
| RSS Expanded Maximum Label Length .....               | 6-177 |
| RSS Expanded Minimum Label Length .....               | 6-178 |
| RSS Expanded Fixed Length 1 .....                     | 6-179 |
| RSS Expanded Fixed Length 2 .....                     | 6-180 |
| Code 39 Enable .....                                  | 6-181 |
| Code 39 Start Stop Character Transmission .....       | 6-182 |
| Code 39 Check Character Calculation .....             | 6-183 |
| Code 39 Check Character Transmission .....            | 6-184 |
| Code 39 Full ASCII .....                              | 6-185 |
| Code 39 AIM ID .....                                  | 6-186 |
| Code 39 Label ID .....                                | 6-187 |
| Code 39 Length Control .....                          | 6-188 |
| Code 39 Maximum Label Length .....                    | 6-189 |
| Code 39 Minimum Label Length .....                    | 6-190 |
| Code 39 Fixed Length 1 .....                          | 6-191 |
| Code 39 Fixed Length 2 .....                          | 6-192 |
| Code 39 Stitching .....                               | 6-193 |
| Pharmacode 39 Enable .....                            | 6-194 |
| Pharmacode 39 Start Stop Character Transmission ..... | 6-195 |
| Pharmacode 39 Check Character Transmission .....      | 6-196 |
| Pharmacode 39 Label ID .....                          | 6-197 |
| Code 128 Enable .....                                 | 6-198 |
| Code 128 Transmit Function Characters .....           | 6-199 |
| Convert Code128 to Code 39 .....                      | 6-200 |
| Code 128 AIM ID .....                                 | 6-201 |
| Code 128 Label ID .....                               | 6-202 |
| Code 128 Length Control .....                         | 6-203 |
| Code 128 Maximum Label Length .....                   | 6-204 |
| Code 128 Minimum Label Length .....                   | 6-205 |
| Code 128 Fixed Length 1 .....                         | 6-206 |
| Code 128 Fixed Length 2 .....                         | 6-207 |
| Code 128 Stitching .....                              | 6-208 |
| EAN-128 Enable .....                                  | 6-209 |
| EAN 128 AIM ID .....                                  | 6-210 |
| EAN 128 Label ID .....                                | 6-211 |
| Interleaved 2 of 5 (I 2 OF 5) Enable .....            | 6-212 |

|                                                 |       |
|-------------------------------------------------|-------|
| I 2 of 5 Check Character Calculation .....      | 6-213 |
| I 2 of 5 Check Character Transmission .....     | 6-214 |
| I 2 of 5 AIM ID .....                           | 6-215 |
| I 2 of 5 Label ID .....                         | 6-216 |
| I 2 of 5 Length Control .....                   | 6-217 |
| I 2 of 5 Maximum Label Length .....             | 6-218 |
| I 2 of 5 Minimum Label Length .....             | 6-219 |
| I 2 of 5 Fixed Length 1 .....                   | 6-220 |
| I 2 of 5 Fixed Length 2 .....                   | 6-221 |
| I 2 of 5 Stitching .....                        | 6-222 |
| Codabar Enable .....                            | 6-223 |
| Codabar Start Stop Character Transmission ..... | 6-224 |
| Codabar Start Stop Character Set .....          | 6-225 |
| Codabar Start Stop Character Match .....        | 6-227 |
| Codabar Check Character Calculation .....       | 6-228 |
| Codabar Check Character Transmission .....      | 6-229 |
| Codabar AIM ID .....                            | 6-230 |
| Codabar Label ID .....                          | 6-231 |
| Codabar Length Control .....                    | 6-232 |
| Codabar Maximum Label Length .....              | 6-233 |
| Codabar Minimum Label Length .....              | 6-234 |
| Codabar Fixed Length 1 .....                    | 6-235 |
| Codabar Fixed Length 2 .....                    | 6-236 |
| Codabar Stitching .....                         | 6-237 |
| Code 93 Enable .....                            | 6-238 |
| Code 93 AIM ID .....                            | 6-239 |
| Code 93 Label ID .....                          | 6-240 |
| Code 93 Length Control .....                    | 6-241 |
| Code 93 Maximum Label Length .....              | 6-242 |
| Code 93 Minimum Label Length .....              | 6-243 |
| Code 93 Fixed Length 1 .....                    | 6-244 |
| Code 93 Fixed Length 2 .....                    | 6-245 |
| Code 93 Stitching .....                         | 6-246 |
| MSI/Plessey Enable .....                        | 6-247 |
| MSI/Plessey Check Character Calculation .....   | 6-248 |
| MSI/Plessey Number of Check Characters .....    | 6-249 |
| MSI/Plessey Check Character Transmission .....  | 6-250 |

|                                                                |            |
|----------------------------------------------------------------|------------|
| MSI/Plessey AIM ID .....                                       | 6-251      |
| MSI/Plessey Label ID .....                                     | 6-252      |
| MSI/Plessey Length Control .....                               | 6-253      |
| MSI/Plessey Maximum Label Length .....                         | 6-254      |
| MSI/Plessey Minimum Label Length .....                         | 6-255      |
| MSI/Plessey Fixed Length 1 .....                               | 6-256      |
| MSI/Plessey Fixed Length 2 .....                               | 6-257      |
| MSI/Plessey Stitching .....                                    | 6-258      |
| Standard 2 of 5 Enable .....                                   | 6-259      |
| Standard 2 of 5 Check Character Calculation .....              | 6-260      |
| Standard 2 of 5 Check Character Transmission .....             | 6-261      |
| Standard 2 of 5 AIM ID .....                                   | 6-262      |
| Standard 2 of 5 Label ID .....                                 | 6-263      |
| Standard 2 of 5 Length Control .....                           | 6-264      |
| Standard 2 of 5 Maximum Label Length .....                     | 6-265      |
| Standard 2 of 5 Minimum Label Length .....                     | 6-266      |
| Standard 2 of 5 Fixed Length 1 .....                           | 6-267      |
| Standard 2 of 5 Fixed Length 2 .....                           | 6-268      |
| Standard 2 of 5 Stitching .....                                | 6-269      |
| <b>Appendix A. LED/Beeper Indications &amp; Controls .....</b> | <b>A-1</b> |
| <b>Appendix B. Cable Information .....</b>                     | <b>B-1</b> |
| <b>Appendix C. Keypad .....</b>                                | <b>C-1</b> |
| <b>Appendix D. Host Commands .....</b>                         | <b>D-1</b> |
| <b>Appendix E. Factory Defaults .....</b>                      | <b>E-1</b> |
| <b>Appendix F. Handheld Data Format Requirements .....</b>     | <b>F-1</b> |
| Handheld Data Format Requirements General .....                | F-1        |
| PSC Handheld Data Format Requirements .....                    | F-2        |
| RSS-14 .....                                                   | F-2        |
| RSS Expanded .....                                             | F-2        |
| UPC-A .....                                                    | F-2        |
| UPC-A with 2-Digit Supplemental .....                          | F-2        |
| UPC-A with 5-Digit Supplemental .....                          | F-3        |
| UPC-A with Code 128 Supplemental .....                         | F-3        |

|                                         |      |
|-----------------------------------------|------|
| UPC-E .....                             | F-3  |
| UPC-E with 2-Digit Supplemental .....   | F-4  |
| UPC-E with 5-Digit Supplemental .....   | F-4  |
| UPC-E with Code 128 Supplemental .....  | F-4  |
| EAN-8 .....                             | F-5  |
| EAN-8 with 2-Digit Supplemental .....   | F-5  |
| EAN-8 with 5-Digit Supplemental .....   | F-5  |
| EAN-8 with Code 128 Supplemental .....  | F-5  |
| EAN-13 .....                            | F-6  |
| EAN-13 with 2-Digit Supplemental .....  | F-6  |
| EAN-13 with 5-Digit Supplemental .....  | F-6  |
| EAN-13 with Code 128 Supplemental ..... | F-6  |
| Code 39 .....                           | F-7  |
| Code 39-Pharmacode .....                | F-7  |
| I 2 of 5 .....                          | F-7  |
| Codabar .....                           | F-8  |
| Code 128 .....                          | F-8  |
| MSI/Plessey .....                       | F-9  |
| Code 93 .....                           | F-9  |
| PDF417 .....                            | F-9  |
| AIM Formats .....                       | F-10 |
| UPC-A .....                             | F-10 |
| UPC-E .....                             | F-10 |
| EAN-13 .....                            | F-10 |
| EAN-8 .....                             | F-10 |
| 2-Digit Supplemental .....              | F-11 |
| 5-Digit Supplemental .....              | F-11 |
| Code 128 Supplemental .....             | F-12 |
| Bookland .....                          | F-12 |
| Code 39 .....                           | F-12 |
| Codabar .....                           | F-13 |
| MSI/Plessey .....                       | F-13 |
| Code 93 .....                           | F-13 |
| RSS-14 .....                            | F-14 |
| RSS Expanded .....                      | F-14 |
| I 2 of 5 .....                          | F-14 |
| Code 128 / EAN128 .....                 | F-15 |



This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/PSC/Magellan-8100 and 8200 programming man](https://the-checkout-tech.com/manuals/PSC/Magellan-8100%20and%208200%20programming%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)