



**QUICKSCAN™**  
*6000/6000 plus*

## *Handheld Laser Scanner*



***PROGRAMMING GUIDE***

# Contents

## Introduction

|   |   |
|---|---|
| Understanding the Basics .....                  | 1 |
| Integrating Peripherals With Host Systems ..... | 1 |
| Changing Interfaces .....                       | 2 |
| Customizing Your Scanner Operation .....        | 4 |
| Programming Overview .....                      | 5 |
| What Is Programming Mode? .....                 | 5 |
| How To Program Using Bar Codes .....            | 5 |
| The Programming Session .....                   | 6 |
| Scanner Response When In Programming Mode ..... | 6 |
| If You Make a Mistake... ..                     | 7 |
| Return to Factory Settings .....                | 7 |
| Where To Go From Here .....                     | 8 |

## Interface Selection

### IBM

|   |    |
|---|----|
| IBM 4683/84 • 4693/94 Port 5B Interface Selection .....       | 9  |
| IBM 4683/84 • 4693/94 Port 9A, 9B, 9C, 9E I/F Selection ..... | 10 |
| IBM 4682/92 Port E Interface Selection .....                  | 11 |

### OCIA

|   |    |
|---|----|
| PSC OCIA1 Interface Selection .....                         | 12 |
| NCR OCIA Eight Bit (short format) Interface Selection ..... | 12 |
| NCR OCIA Nine Bit (long format) Interface Selection .....   | 12 |
| SNI OCIA Interface Selection .....                          | 12 |
| OCIA Options .....  | 13 |

### Wand Emulation

|  |    |
|--|----|
| Wand Emulation Interface Selection ..... | 14 |
|--|----|

### RS-232

|                                      |    |
|--------------------------------------|----|
| RS-232 Interface Selection .....     | 16 |
| SNI RS-232 Interface Selection ..... | 16 |
| Hardware Control .....               | 19 |
| Software Control .....               | 20 |
| RS-232 ACK/NAK Options .....         | 21 |

### Keyboard Wedge

|   |    |
|---|----|
| PC Keyboard Wedge Interface Selection .....           | 24 |
| PC Keyboard Wedge Interface Selection—continued ..... | 25 |
| Connect to a Laptop/No Keyboard Attached .....        | 26 |
| Caps Lock .....                                       | 27 |
| Country Mode .....                                    | 28 |
| Intercharacter Delay .....                            | 30 |

|   |    |
|---|----|
| Label Transmit Format Configuration Items ..... | 32 |
| Prefix & Suffix .....                           | 32 |
| Non-Symbology Specific Items .....              | 34 |
| ASCII Character Set .....                       | 38 |
| Symbology-Specific Label I.D. ....              | 39 |

## Symbologies

|   |    |
|---|----|
| Symbology Options Overview .....                              | 47 |
| Symbology Selection .....                                     | 49 |
| UPC/EAN Options .....   | 52 |
| UPC/EAN Expansion .....                                       | 53 |
| UPC/EAN Add-Ons .....   | 54 |
| C128 and Custom Add-Ons .....                                 | 54 |
| Price/Weight Check Digit .....                                | 55 |
| Code 39 Options .....   | 58 |
| Code 128 Options .....  | 62 |
| Interleaved 2 of 5 .....                                      | 63 |
| Check Digit and Variable Length Label Selections .....        | 64 |
| Standard 2 of 5 .....   | 67 |
| Check Digit and Variable Length Label Selections .....        | 68 |
| Setting Standard 2 of 5 Fixed and Minimum Label Lengths ..... | 69 |
| Codabar Options .....   | 72 |
| Codabar Check Digit & Variable Length .....                   | 73 |
| Codabar Start/Stop Character .....                            | 74 |
| Codabar Fixed Length .....                                    | 75 |
| MSI/Plessey   |    |
| MSI/Plessey Check Digit .....                                 | 77 |
| MSI/Plessey Fixed Length .....                                | 78 |

## General Features

|                                 |    |
|---------------------------------|----|
| Good Read Beeper Settings ..... | 80 |
| Read Verification .....         | 82 |
| Low Power Mode .....            | 85 |
| Debug Mode .....                | 86 |
| AutoSense® Stand Mode .....     | 86 |

## Appendix A

|                                     |    |
|-------------------------------------|----|
| Host Programming .....              | 87 |
| Creating MultiFunction Labels ..... | 87 |
| Need More Information? .....        | 87 |

## Appendix B

|                        |    |
|------------------------|----|
| Sample Bar Codes ..... | 88 |
|------------------------|----|

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)