




Magellan® 8500

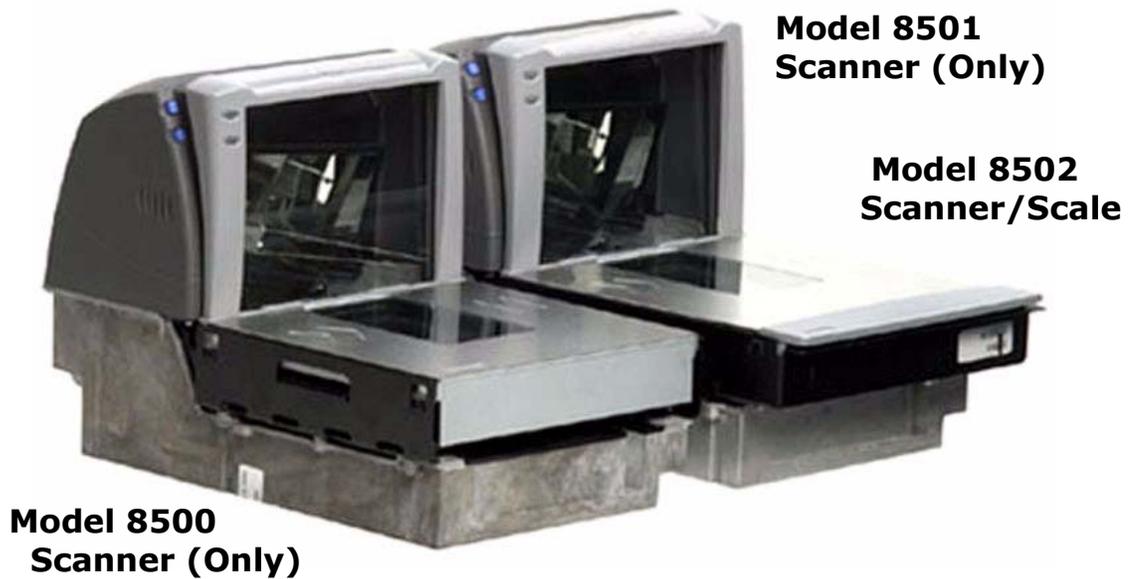

**Model 8500
Scanner (Only)**

**Model 8501
Scanner (Only)**

**Model 8502
Scanner/Scale**

Modular Level Service Manual

Contents

Section 1. Introduction	1-1
About This Manual	1-1
Manual Overview	1-1
How To Use This Manual	1-2
Manual Conventions	1-2
About the Magellan 8500	1-3
Nomenclature	1-5
Controls and Indicators	1-6
Scale Zero Push Button	1-7
Volume/Tone Push Button	1-7
Connectors	1-8
Specifications	1-9
Operational Parameters	1-9
Scanning	1-9
Weighing (Model 8502 Only)	1-9
Warm-Up Time	1-10
User Configurable Warm-up	1-10
Electrical	1-11
Power Supply	1-11
Scanner Power Consumption	1-11
Environmental Specification	1-12
Physical Specifications	1-13
Laser and Product Safety	1-13
Radio Frequency Interference	1-14
Product Labeling	1-15
Agency Compliance	1-16
User Maintenance	1-17
References	1-17
Contacting PSC	1-17
Section 2. Theory of Operation	2-1
Scanning Terminology	2-1
Functional Overview	2-4
Laser Scanning — Outgoing Beam Path	2-4
Laser Scanning — Return Beam Path	2-5
Signal Processing	2-6
Functional Block Diagram	2-7
Modes Of Operation	2-8
Pre-operational Mode	2-8
Power-Up Selftest	2-8
Error Reporting	2-8
Operational Modes	2-8
Normal Operation	2-8
Sleep Mode	2-8
Additional Modes	2-9
Programming Mode	2-9
Diagnostic Mode	2-9
Geiger Mode	2-9
Scale Calibration Mode	2-9
Limited-Scanning Mode	2-9
Additional Functions	2-10
Reset	2-10
Scale Adjustment	2-10

Major Subassemblies	2-11
Optional Features	2-12

Section 3. Problem Isolation	3-1
Problem Isolation	3-1
Safety Precautions	3-2
Tools and Material	3-2
Pre-Troubleshooting Steps	3-3
Internal Diagnostics	3-4
Power-Up Selftest	3-4
Operational Test	3-4
Diagnostic Tests	3-4
Error Mode	3-5
Using the Error Messages	3-7
Troubleshooting Flowcharts	3-8
Using the Flowcharts	3-8
No Power	3-10
Conditions	3-10
Before you begin	3-10
Procedure	3-10
Test Point Locations	3-13
FRU Failure	3-14
Conditions	3-14
Procedures	3-14
Configuration Error	3-16
Condition	3-16
Procedure	3-16
Interface Failures	3-18
Condition	3-18
Procedures	3-18
No Motor	3-21
Condition	3-21
Procedures	3-21
No Laser	3-23
Condition	3-23
Procedures	3-23
Scale Failure	3-25
Conditions	3-25
Scale Error Reporting	3-25
Procedures	3-26
Remote Display Failure	3-30
Condition	3-30
Procedures	3-30
Poor or No Reading	3-32
Condition	3-32
Before You Begin	3-32
Procedure	3-32
Control Panel Failure	3-35
Conditions	3-35
Procedure	3-35

Section 4. Removal/Replacement	4-1
Overview	4-1
Section Contents	4-1

Service Precautions	4-5
Tools and Materials	4-6
Weight Sets (Scanner/Scale only)	4-6
Materials	4-7
ElectroStatic Discharge (ESD) Procedures	4-7
ESD Setup and Equipment	4-7
ESD Procedures	4-8
Hardware	4-8
Removal and Replacement Procedures	4-9
4.1 Miscellaneous Service Procedures	4-9
4.1.1 Cleaning	4-9
4.1.2 Harness Connector Latches	4-10
4.1.3 Slip Rivets	4-11
4.2 L-Shaped Platter (L-Platter)	4-12
4.2.1 Removing the L-Platter	4-12
4.2.2 Replacing the L-Platter	4-13
4.3 Vertical Weigh Platter	4-13
4.3.1 Removing the Vertical Weigh Platter	4-13
4.3.2 Replacing the Vertical Weigh Platter	4-14
4.4 Vertical Platter Window	4-14
4.4.1 Removing the Vertical Platter Window	4-15
4.4.2 Replacing the Vertical Platter Window	4-16
4.5 Produce Rail	4-16
4.5.1 Removing the Produce Rail	4-16
4.5.2 Replacing the Produce Rail	4-17
4.6 Bonnet.....	4-17
4.6.1 Removing the Bonnet	4-17
4.6.2 Replacing the Bonnet	4-19
4.7 Upper Scan Mirrors Assembly.....	4-20
4.7.1 Removing the Upper Scan Mirrors Assembly	4-20
4.7.2 Replacing the Upper Scan Mirror Assembly	4-21
4.8 Control Panel with Metal Bracket Assembly	4-22
4.8.1 Removing the Control Panel Assembly	4-22
4.8.2 Replacing the Control Panel Assembly	4-23
4.9 Speaker	4-24
4.9.1 Removing the Speaker	4-24
4.9.2 Replacing the Speaker	4-25
4.10 Vertical Mirror Assembly	4-25
4.10.1 Removing the Vertical Mirror Assembly	4-26
4.10.2 Replacing the Vertical Mirror Assembly	4-26
4.11 Interface Board	4-27
4.11.1 Removing the Interface Board	4-27
4.11.2 Replacing the Interface Board	4-28
4.12 Bottom Cover.....	4-28
4.12.1 Removing the Bottom Cover	4-28
4.12.2 Replacing the Bottom Cover	4-29
4.13 Motor Harness.....	4-29
4.13.1 Removing the Motor Harness	4-29
4.13.2 Replacing the Motor Harness	4-30
4.14 Motor Assembly.....	4-31
4.14.1 Removing the Motor Assembly	4-31
4.14.2 Replacing the Motor Assembly	4-32
4.15 Analog Board Harnesses	4-33

4.15.1 Removing the Analog Board Harnesses	4-33
4.15.2 Replacing the Analog Board Harnesses	4-33
4.16 Analog Boards.....	4-34
4.16.1 Removing the Analog Boards	4-34
4.16.2 Replacing the Analog Boards	4-35
4.17 Main Board	4-36
4.17.1 Removing the Main Board	4-36
4.17.2 Replacing the Main Board	4-37
4.18 VLDM Assemblies	4-37
4.18.1 Removing the VLDM Assembly	4-37
4.18.2 Replacing the VLDM Assembly	4-38
4.19 VLDM Harnesses.....	4-39
4.19.1 Removing the VLDM Harnesses	4-39
4.19.2 Replacing the VLDM Harnesses	4-40
4.20 Interconnect Harness.....	4-41
4.20.1 Removing the Interconnect Harness	4-41
4.20.2 Replacing the Interconnect Harness	4-42
4.21 Calibration Switch Cover.....	4-43
4.21.1 Removing the Calibration Switch Cover	4-43
4.21.2 Replacing the Calibration Switch Cover	4-44
4.22 Scale Harness	4-45
4.22.1 Removing the Scale Harness	4-45
4.22.2 Replacing the Scale Harness	4-46
4.23 Scale Spider Assembly	4-48
4.23.1 Removing the Scale Spider Assembly	4-48
4.23.2 Replacing the Scale Spider Assembly	4-49
4.24 Load Cell Cover	4-51
4.24.1 Removing the Load Cell Cover	4-51
4.24.2 Replacing the Load Cell Cover	4-52
4.25 Scale Mounting Bracket	4-53
4.25.1 Removing the Scale Mounting Bracket	4-53
4.25.2 Replacing the Scale Mounting Bracket	4-54
4.26 Platter Brackets.....	4-55
4.26.1 Removing the Platter Brackets	4-55
4.26.2 Replacing the Platter Brackets	4-55
4.27 Horizontal Mirror Assembly	4-56
4.27.1 Removing the Horizontal Mirror Assembly	4-56
4.27.2 Replacing the Horizontal Mirror Assembly	4-57
4.28 Collection Mirrors	4-58
4.28.1 Removing the Collection Mirrors	4-58
4.28.2 Replacing the Collection Mirrors	4-60
4.29 Scale Load Cell.....	4-61
4.29.1 Removing the Scale Load Cell	4-61
4.29.2 Replacing the Scale Load Cell	4-63
4.30 Back Support Rail.....	4-64
4.30.1 Removing the Back Support Rail	4-64
4.30.2 Replacing the Back Support Rail	4-64
EAS Antenna (Optional)	4-65
Troubleshooting the EAS Antenna	4-65
Removing the EAS Antenna	4-65
Replacing the EAS Antenna Wire	4-66

Section 5. Calibration Procedures 5-1

Description of Calibration Sequence	5-2
Motion Test	5-2
Automatic Zero Setting Test	5-3
Preparing the Scanner/Scale for Calibration	5-3
Calibrating the Scale (Pounds & Kilograms)	5-4
Calibration Verification (Pounds)	5-6
Increasing-Load Test (Phase 1)	5-6
Shift Test	5-7
Increasing- Load Test (Phase 2)	5-7
Blanking Test	5-8
Decreasing-Load Test	5-8
Return to Zero Test	5-8
Calibration Verification (Kilograms)	5-9
Increasing-Load Test (Phase 1)	5-9
Shift Test (Metric)	5-10
Increasing- Load Test (Phase 2)	5-11
Blanking Test	5-11
Decreasing-Load Test	5-11
Return to Zero Test	5-12

.....	A-1
Replaceable Parts	A-1
List of Field Replaceable Units	A-3

.....	B-1
Harness/Cable Information	B-1
Electrical Harnesses	B-1
50-Pin Split Harness	B-1
Peripheral Ports/Connectors	B-3
Connector Pinouts	B-3

.....	C-1
Glossary of Terms	C-1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/PSC/magellan 8500 Modular Level service manu](https://the-checkout-tech.com/manuals/PSC/magellan%208500%20Modular%20Level%20service%20manual)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)