



Magellan[®] 8200

Scanner & Scanner/Scale

**Model Shown is the
Magellan[®] 8202
Scanner/Scale**



Modular Level Service Manual

CONTENTS

Section 1. Introduction	1-1
About This Manual	1-1
Manual Overview	1-1
How To Use This Manual	1-2
Manual Conventions	1-2
About the Magellan® 820x	1-3
Controls and Indicators	1-3
LED Indicators and Speaker	1-5
Volume/Tone Push Button	1-6
Scale Zero Push Button	1-7
Nomenclature	1-8
Ports and Connectors	1-9
Specifications	1-10
Operational Parameters	1-10
Scanning	1-10
Weighing (Model 8202 Only)	1-10
Warm-Up Time	1-11
User Configurable Warm-up	1-11
Electrical	1-12
Power Supply	1-12
Environmental Specification	1-13
Operational	1-13
Storage	1-13
Physical Specifications	1-14
Laser and Product Safety	1-14
Radio Frequency Interference	1-15
Product Labeling	1-16
Agency Compliance	1-17
User Maintenance	1-18
Contacting PSC	1-18
PSC Website Technical Support	1-18
Reseller Technical Support	1-18
E-Mail Technical Support	1-18
Telephone Technical Support	1-19
PSC Solutions Group	1-19
Section 2. Theory of Operation	2-1
Scanning Terminology	2-1
Functional Overview	2-4
Laser Scanning — Outgoing Beam Path	2-4
Laser Scanning — Return Beam Path	2-5
Signal Processing	2-6
Functional Block Diagram	2-7
Modes Of Operation	2-8
Pre-operational Mode	2-8
Power-Up Selftest	2-8
Operational Modes	2-8
Normal Operation	2-8
Sleep Mode	2-9

Programming Mode	2-9
Diagnostic Mode	2-9
Scale Calibration Mode	2-10
Additional Functions	2-10
Reset	2-10
Scale Adjustments	2-11
Major Subassemblies	2-11
Optional Features	2-12

Section 3. Problem Isolation	3-1
Problem Isolation	3-1
Safety Precautions	3-2
Tools and Material	3-2
Pre-Troubleshooting Steps	3-3
Internal Diagnostics	3-4
Power-Up Selftest	3-4
Operational Test	3-4
Diagnostic Tests	3-5
Error Mode	3-6
FRU Error Codes	3-7
Using the Error Messages	3-7
Troubleshooting Flowcharts	3-9
Using the Flowcharts	3-9
No Power	3-11
Conditions	3-11
Before you begin	3-11
Procedure	3-11
Test Point Locations	3-16
Fails Selftest	3-17
Conditions	3-17
Procedures	3-17
Configuration Error	3-19
Condition	3-19
Procedure	3-19
Digital/Interface Board and Interface Failures	3-21
Condition	3-21
Procedures: Digital Interface Board	3-21
Procedures: Interface Errors	3-21
No Motor	3-24
Condition	3-24
Procedures	3-24
No Laser	3-26
Condition	3-26
Procedures	3-26
Scale Failure	3-28
Conditions	3-28
Scale Error Reporting	3-28
Procedures	3-29
Remote Display Failure	3-34
Condition	3-34
Procedures	3-34
Poor or No Reading	3-36
Condition	3-36

Before You Begin	3-36
Procedure	3-36
Operator Panel Failure	3-40
Conditions	3-40
Before You Begin	3-40
Procedure: No Audio	3-40
Procedure: No Status LEDs	3-41
Procedure: Button Failure	3-41

Section 4. Removal/Replacement	4-1
Overview	4-1
Section Contents	4-1
Service Precautions	4-4
Tools and Materials	4-5
Weight Sets (Scanner/Scale only)	4-6
Materials	4-6
ElectroStatic Discharge (ESD) Procedures	4-6
ESD Setup and Equipment	4-7
ESD Procedures	4-7
Hardware	4-8
Removal and Replacement Procedures	4-9
4.1 Miscellaneous Service Procedures	4-9
4.1.1 Cleaning the Exterior Surfaces	4-9
4.1.2 Harness Connector Latches	4-10
4.1.3 Slip Rivets	4-11
Important Information	4-12
4.2 L-Platter.....	4-12
4.2.1 Removing the L-Platter	4-12
4.2.2 Replacing the L-Platter	4-13
4.3 Vertical Scan Window.....	4-13
4.3.1 Removing the Vertical Scan Window	4-13
4.3.2 Replacing the Vertical Scan Window	4-14
4.4 Horizontal Scan Window	4-14
4.4.1 Removing the Horizontal Scan Window	4-15
4.4.2 Replacing the Horizontal Scan Window	4-15
4.5 Bottom Cover	4-16
4.5.1 Removing the Bottom Cover	4-16
4.5.2 Replacing the Bottom Cover	4-16
4.6 Bonnet.....	4-17
4.6.1 Removing the Bonnet	4-17
4.6.2 Replacing the Bonnet	4-18
4.7 Operator's Panel.....	4-19
4.7.1 Removing the Operator's Panel	4-19
4.7.2 Replacing the Operator's Panel	4-20
4.8 Speaker	4-20
4.8.1 Removing the Speaker	4-20
4.8.2 Replacing the Speaker	4-21
4.9 Operator's Panel Harness	4-21
4.9.1 Removing the Operator's Panel Harness	4-21
4.9.2 Replacing the Operator's Panel Harness	4-22
4.10 Digital I/F Board.....	4-23
4.10.1 Removing the Digital/Interface Board	4-23
4.10.2 Replacing the Digital I/F Board	4-24

4.11 Motor/Facet Wheel Assembly	4-24
4.11.1 Removing the Motor/Facet Wheel Assembly	4-24
4.11.2 Replacing the Motor/Facet Wheel Assembly	4-25
4.12 Right Analog Board	4-25
4.12.1 Removing the Right Analog Board	4-25
4.12.2 Replacing the Right Analog Board	4-26
4.13 Left Analog Board	4-27
4.13.1 Removing the Left Analog Board	4-27
4.13.2 Replacing the Left Analog Board	4-29
4.14 Optics Assembly	4-30
4.14.1 Removing the Optics Assembly	4-30
4.14.2 Replacing the Optics Assembly	4-32
4.15 VLDM Assembly	4-33
4.15.1 Removing the VLDM Assembly	4-33
4.15.2 Replacing the VLDM Assembly	4-35
4.16 Collection Lenses	4-36
4.16.1 Removing the Collection Lenses	4-36
4.16.2 Replacing the Collection Lenses	4-38
4.17 Mounts (Front and Back)	4-38
4.17.1 Removing the Mounts	4-38
4.17.2 Replacing the Mounts	4-39
4.18 Spider Assembly	4-40
4.18.1 Removing the Spider Assembly	4-40
4.18.2 Replacing the Spider Assembly	4-41
4.18.3 Adjusting the Load Stops.	4-43
4.19 Scale Cover	4-45
4.19.1 Removing the Scale Cover	4-45
4.19.2 Replacing the Scale Cover	4-46
4.20 Scale Board	4-47
4.20.1 Removing the Scale Board	4-47
4.20.2 Replacing the Scale Board	4-48
4.21 Calibration Switch	4-48
4.21.1 Removing the Calibration Switch	4-49
4.21.2 Replacing the Calibration Switch	4-50
4.22 Load Cell Cover	4-50
4.22.1 Removing the Load Cell Cover	4-50
4.22.2 Replacing the Load Cell Cover	4-51
4.23 Load Cell	4-52
4.23.1 Removing the Load Cell	4-52
4.23.2 Replacing the Load Cell	4-53
4.24 Scale Mount	4-54
4.24.1 Removing the Scale Mount	4-55
4.24.2 Replacing the Scale Mount	4-56

Section 5. Calibration Procedures	5-1
Description of Calibration Sequence	5-2
Motion Test	5-3
Automatic Zero Setting Test	5-3
Preparing the Scanner/Scale for Calibration	5-3
Calibrating the Scale (Pounds & Kilograms)	5-4
Calibration Verification (Pounds)	5-5
Increasing-Load Test (phase I)	5-6
Shift Test	5-6

Increasing- Load Test (phase II)	5-7
Blanking Test	5-7
Decreasing-Load Test	5-8
Return to Zero Test	5-8
Completing the Calibration Process	5-8
Calibration Verification (Kilograms)	5-9
Increasing-Load Test (phase I)	5-9
Shift Test (Metric)	5-10
Increasing- Load Test (phase II)	5-11
Blanking Test	5-11
Decreasing-Load Test	5-12
Return to Zero Test	5-12
Completing the Calibration Process	5-12

Appendix A: Replaceable Parts	A-1
List of Field Replaceable Units	A-3

Appendix B: Harness/Cable Information	B-1
Electrical Harnesses	B-1
Harness Connections	B-1
Peripheral Ports/Connectors	B-3
Connector Pinouts	B-3

Appendix C: Glossary of Terms	C-1
--	------------

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/PSC/magellan 8200 Modular Level service manu](https://the-checkout-tech.com/manuals/PSC/magellan%208200%20Modular%20Level%20service%20manual)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)