


# LS1900 Series

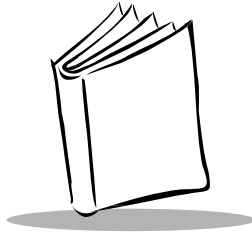

## Product Reference Guide





# Contents

## About This Guide

 
Introduction . . . . .	ix
Chapter Descriptions . . . . .	ix
Notational Conventions . . . . .	x
Related Publications . . . . .	x
Service Information . . . . .	x
Symbol Support Center . . . . .	xi
LS1900 Series Warranty . . . . .	xiii
LS1900 Series Warranty Coverage and Procedure . . . . .	xiv
General . . . . .	xiv

## Chapter 1. Getting Started

Introduction . . . . .	1-1
Unpacking Your Scanner . . . . .	1-2
Setting Up the LS1900 Series Scanner . . . . .	1-3
Installing the Interface Cable . . . . .	1-3
Removing the Interface Cable . . . . .	1-4
Connecting to a Host . . . . .	1-4

## Chapter 2. Scanning

Introduction . . . . .	2-1
Beeper Definitions . . . . .	2-2
LED Definitions . . . . .	2-3
Scanning in Hand-Held Mode . . . . .	2-4
Scanning with the LS190xx . . . . .	2-4
Aiming . . . . .	2-5
Decode Zones . . . . .	2-6
Scanning in Hands-Free Mode . . . . .	2-8
Assembling the Stand . . . . .	2-8



Mounting the Stand (optional) . . . . . 2-9  
Scanning in the Stand . . . . . 2-10


### Chapter 3. Maintenance and Technical Specifications

 Introduction . . . . . 3-1  
Maintenance . . . . . 3-1  
Troubleshooting . . . . . 3-2  
Technical Specifications . . . . . 3-3  
LS1900 Series Signal Descriptions . . . . . 3-5

### Chapter 4. Programming the Scanner

Introduction . . . . . 4-1  
Scanning Sequence Examples . . . . . 4-2  
Errors While Scanning . . . . . 4-2  
Standard Default Parameters . . . . . 4-3  
Parameter Descriptions . . . . . 4-10  
    Set Default Parameter . . . . . 4-10  
    Trigger Mode . . . . . 4-11  
    Beeper Tone . . . . . 4-12  
    Beeper Volume . . . . . 4-13  
    Laser On Time . . . . . 4-14  
    Power Mode . . . . . 4-15  
    Beep After Good Decode . . . . . 4-16  
    Transmit “No Read” Message . . . . . 4-17  
    Linear Code Type Security Level . . . . . 4-18  
    Bi-directional Redundancy . . . . . 4-20  
    Host Types . . . . . 4-21  
    Enable/Disable UPC-E/UPC-A/UPC-E1 . . . . . 4-50  
    Enable/Disable EAN-8/EAN-13 . . . . . 4-51  
    Enable/Disable Bookland EAN . . . . . 4-52  
    Decode UPC/EAN Supplementals . . . . . 4-53  
    Decode UPC/EAN Supplemental Redundancy . . . . . 4-54  
    Transmit UPC-A/UPC-E/UPC-E1 Check Digit . . . . . 4-55  
    UPC-A Preamble . . . . . 4-56  
    UPC-E Preamble . . . . . 4-57  
    UPC-E1 Preamble . . . . . 4-58  
    Convert UPC-E to UPC-A . . . . . 4-59  
    Convert UPC-E1 to UPC-A . . . . . 4-60  
    EAN Zero Extend . . . . . 4-61  
    Convert EAN-8 to EAN-13 Type . . . . . 4-62  
    UPC/EAN Security Level . . . . . 4-63  
    UPC/EAN Coupon Code . . . . . 4-65

Random Weight Check Digit . . . . .	4-66
Linear Supplementals . . . . .	4-67
Enable/Disable Code 128 . . . . .	4-68
Enable/Disable UCC/EAN-128 . . . . .	4-69
Enable/Disable ISBT 128 . . . . .	4-70
Enable/Disable Code 39 . . . . .	4-71
Enable/Disable Trioptic Code 39 . . . . .	4-72
Convert Code 39 to Code 32 . . . . .	4-73
Code 32 Prefix . . . . .	4-74
Set Lengths for Code 39 . . . . .	4-75
Code 39 Check Digit Verification . . . . .	4-77
Transmit Code 39 Check Digit . . . . .	4-78
Enable/Disable Code 39 Full ASCII . . . . .	4-79
Code 39 Buffering (Scan & Store) . . . . .	4-80
Enable/Disable Code 93 . . . . .	4-83
Set Lengths for Code 93 . . . . .	4-84
Code 11 . . . . .	4-86
Set Lengths for Code 11 . . . . .	4-87
Code 11 Check Digit Verification . . . . .	4-89
Transmit Code 11 Check Digits . . . . .	4-90
Enable/Disable Interleaved 2 of 5 . . . . .	4-91
Set Lengths for Interleaved 2 of 5 . . . . .	4-92
I 2 of 5 Check Digit Verification . . . . .	4-94
Transmit I 2 of 5 Check Digit . . . . .	4-95
Convert I 2 of 5 to EAN-13 . . . . .	4-96
Enable/Disable Discrete 2 of 5 . . . . .	4-97
Set Lengths for Discrete 2 of 5 . . . . .	4-98
Enable/Disable Codabar . . . . .	4-100
Set Lengths for Codabar . . . . .	4-101
CLSI Editing . . . . .	4-103
NOTIS Editing . . . . .	4-104
Enable/Disable MSI Plessey . . . . .	4-105
Set Lengths for MSI Plessey . . . . .	4-106
MSI Plessey Check Digits . . . . .	4-108
Transmit MSI Plessey Check Digit . . . . .	4-109
MSI Plessey Check Digit Algorithm . . . . .	4-110
RSS 14 . . . . .	4-111
Transmit Code ID Character . . . . .	4-113
Intercharacter Delay . . . . .	4-114
Pause Duration . . . . .	4-115
Prefix/Suffix Values . . . . .	4-116
Scan Data Options . . . . .	4-117
Numeric Bar Codes . . . . .	4-119
Cancel . . . . .	4-121



## Chapter 5. Advanced Data Formatting

Introduction . . . . .	5-1
Rules: Criteria Linked to Actions. . . . .	5-1
Using ADF Bar Codes. . . . .	5-2
Special Commands . . . . .	5-2
Begin New Rule . . . . .	5-2
Save Rule . . . . .	5-2
Erase . . . . .	5-2
Quit Entering Rules . . . . .	5-3
Disable Rule Set . . . . .	5-3
Criteria. . . . .	5-3
Code Types . . . . .	5-3
Code Lengths . . . . .	5-3
Message Containing A Specific Data String . . . . .	5-3
Specific String at Start . . . . .	5-3
Specific String, Any Location . . . . .	5-3
Any Message OK. . . . .	5-3
Rule Belongs To Set . . . . .	5-4
Actions . . . . .	5-4
Send Data . . . . .	5-4
Setup Field(s) . . . . .	5-4
Modify Data . . . . .	5-5
Pad Data With Spaces. . . . .	5-6
Pad Data With Zeros . . . . .	5-6
Beeps. . . . .	5-6
Send Keystroke (Control Characters and Keyboard Characters) . . . . .	5-6
Turn On/Off Rule Sets . . . . .	5-6
ADF Bar Code Menu Example . . . . .	5-6
Rule 1: The Code 128 Scanning Rule . . . . .	5-7
Rule 2: The UPC Scanning Rule . . . . .	5-7
Alternate Rule Sets . . . . .	5-8
Rules Hierarchy (in Bar Codes) . . . . .	5-9
Default Rules . . . . .	5-10
Special Commands . . . . .	5-11
Begin New Rule . . . . .	5-11
Save Rule . . . . .	5-11
Erase . . . . .	5-12
Quit Entering Rules . . . . .	5-12
Disable Rule Set . . . . .	5-13
Criteria. . . . .	5-14
Code Types . . . . .	5-14
Code Lengths . . . . .	5-16
Specific Data String . . . . .	5-20

Numeric Keypad . . . . .	5-21
Rule Belongs To Set . . . . .	5-22
Actions . . . . .	5-23
Send Data . . . . .	5-23
Setup Fields . . . . .	5-26
Send Preset Value . . . . .	5-31
Modify Data . . . . .	5-32
Pad Data with Spaces . . . . .	5-33
Pad Data with Zeros . . . . .	5-37
Beeps . . . . .	5-41
Control Characters . . . . .	5-42
Keyboard Characters . . . . .	5-46
Send ALT Characters . . . . .	5-58
Send Command Characters . . . . .	5-62
Send Special Characters . . . . .	5-64
Send Keypad Characters . . . . .	5-65
Send Function Key . . . . .	5-69
Turn On/Off Rule Set . . . . .	5-75
Alphanumeric Keyboard . . . . .	5-76

## Appendix A. Programming Reference

Symbol Code Identifiers . . . . .	A-1
AIM Code Identifiers . . . . .	A-2
Prefix / Suffix Values . . . . .	A-5
ASCII Character Set . . . . .	A-8
Keyboard Maps . . . . .	A-14

## Glossary

## Index

## Feedback

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Symbol/LS1900 Series Product Reference Guide](https://the-checkout-tech.com/manuals/Symbol/LS1900%20Series%20Product%20Reference%20Guide/)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)