


LS1900 Series



Product Reference Guide

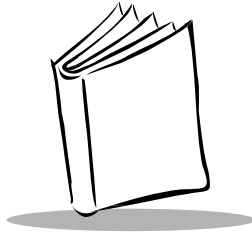



Contents

About This Guide


Introduction	ix
Chapter Descriptions	ix
Notational Conventions	x
Related Publications	x
Service Information	x
Symbol Support Center	xi
LS1900 Series Warranty	xiii
LS1900 Series Warranty Coverage and Procedure	xiv
General	xiv

Chapter 1. Getting Started

Introduction	1-1
Unpacking Your Scanner	1-2
Setting Up the LS1900 Series Scanner	1-3
Installing the Interface Cable	1-3
Removing the Interface Cable	1-4
Connecting to a Host	1-4

Chapter 2. Scanning

Introduction	2-1
Beeper Definitions	2-2
LED Definitions	2-3
Scanning in Hand-Held Mode	2-4
Scanning with the LS190xx	2-4
Aiming	2-5
Decode Zones	2-6
Scanning in Hands-Free Mode	2-8
Assembling the Stand	2-8

 

Mounting the Stand (optional) 2-9
Scanning in the Stand 2-10


Chapter 3. Maintenance and Technical Specifications

Introduction 3-1
Maintenance 3-1
Troubleshooting 3-2
Technical Specifications 3-3
LS1900 Series Signal Descriptions 3-5

Chapter 4. Programming the Scanner

Introduction 4-1
Scanning Sequence Examples 4-2
Errors While Scanning 4-2
Standard Default Parameters 4-3
Parameter Descriptions 4-10
 Set Default Parameter 4-10
 Trigger Mode 4-11
 Beeper Tone 4-12
 Beeper Volume 4-13
 Laser On Time 4-14
 Power Mode 4-15
 Beep After Good Decode 4-16
 Transmit “No Read” Message 4-17
 Linear Code Type Security Level 4-18
 Bi-directional Redundancy 4-20
 Host Types 4-21
 Enable/Disable UPC-E/UPC-A/UPC-E1 4-50
 Enable/Disable EAN-8/EAN-13 4-51
 Enable/Disable Bookland EAN 4-52
 Decode UPC/EAN Supplementals 4-53
 Decode UPC/EAN Supplemental Redundancy 4-54
 Transmit UPC-A/UPC-E/UPC-E1 Check Digit 4-55
 UPC-A Preamble 4-56
 UPC-E Preamble 4-57
 UPC-E1 Preamble 4-58
 Convert UPC-E to UPC-A 4-59
 Convert UPC-E1 to UPC-A 4-60
 EAN Zero Extend 4-61
 Convert EAN-8 to EAN-13 Type 4-62
 UPC/EAN Security Level 4-63
 UPC/EAN Coupon Code 4-65

Random Weight Check Digit	4-66
Linear Supplementals	4-67
Enable/Disable Code 128	4-68
Enable/Disable UCC/EAN-128	4-69
Enable/Disable ISBT 128	4-70
Enable/Disable Code 39	4-71
Enable/Disable Trioptic Code 39	4-72
Convert Code 39 to Code 32	4-73
Code 32 Prefix	4-74
Set Lengths for Code 39	4-75
Code 39 Check Digit Verification	4-77
Transmit Code 39 Check Digit	4-78
Enable/Disable Code 39 Full ASCII	4-79
Code 39 Buffering (Scan & Store)	4-80
Enable/Disable Code 93	4-83
Set Lengths for Code 93	4-84
Code 11	4-86
Set Lengths for Code 11	4-87
Code 11 Check Digit Verification	4-89
Transmit Code 11 Check Digits	4-90
Enable/Disable Interleaved 2 of 5	4-91
Set Lengths for Interleaved 2 of 5	4-92
I 2 of 5 Check Digit Verification	4-94
Transmit I 2 of 5 Check Digit	4-95
Convert I 2 of 5 to EAN-13	4-96
Enable/Disable Discrete 2 of 5	4-97
Set Lengths for Discrete 2 of 5	4-98
Enable/Disable Codabar	4-100
Set Lengths for Codabar	4-101
CLSI Editing	4-103
NOTIS Editing	4-104
Enable/Disable MSI Plessey	4-105
Set Lengths for MSI Plessey	4-106
MSI Plessey Check Digits	4-108
Transmit MSI Plessey Check Digit	4-109
MSI Plessey Check Digit Algorithm	4-110
RSS 14	4-111
Transmit Code ID Character	4-113
Intercharacter Delay	4-114
Pause Duration	4-115
Prefix/Suffix Values	4-116
Scan Data Options	4-117
Numeric Bar Codes	4-119
Cancel	4-121

 

Chapter 5. Advanced Data Formatting

Introduction	5-1
Rules: Criteria Linked to Actions.	5-1
Using ADF Bar Codes.	5-2
Special Commands	5-2
Begin New Rule	5-2
Save Rule	5-2
Erase	5-2
Quit Entering Rules	5-3
Disable Rule Set	5-3
Criteria.	5-3
Code Types	5-3
Code Lengths	5-3
Message Containing A Specific Data String	5-3
Specific String at Start	5-3
Specific String, Any Location	5-3
Any Message OK.	5-3
Rule Belongs To Set	5-4
Actions	5-4
Send Data	5-4
Setup Field(s)	5-4
Modify Data	5-5
Pad Data With Spaces.	5-6
Pad Data With Zeros	5-6
Beeps.	5-6
Send Keystroke (Control Characters and Keyboard Characters)	5-6
Turn On/Off Rule Sets	5-6
ADF Bar Code Menu Example	5-6
Rule 1: The Code 128 Scanning Rule	5-7
Rule 2: The UPC Scanning Rule	5-7
Alternate Rule Sets	5-8
Rules Hierarchy (in Bar Codes)	5-9
Default Rules	5-10
Special Commands	5-11
Begin New Rule	5-11
Save Rule	5-11
Erase	5-12
Quit Entering Rules	5-12
Disable Rule Set	5-13
Criteria.	5-14
Code Types	5-14
Code Lengths	5-16
Specific Data String	5-20

Numeric Keypad	5-21
Rule Belongs To Set	5-22
Actions	5-23
Send Data	5-23
Setup Fields	5-26
Send Preset Value	5-31
Modify Data	5-32
Pad Data with Spaces	5-33
Pad Data with Zeros	5-37
Beeps	5-41
Control Characters	5-42
Keyboard Characters	5-46
Send ALT Characters	5-58
Send Command Characters	5-62
Send Special Characters	5-64
Send Keypad Characters	5-65
Send Function Key	5-69
Turn On/Off Rule Set	5-75
Alphanumeric Keyboard	5-76

Appendix A. Programming Reference

Symbol Code Identifiers	A-1
AIM Code Identifiers	A-2
Prefix / Suffix Values	A-5
ASCII Character Set	A-8
Keyboard Maps	A-14

Glossary

Index

Feedback

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)