


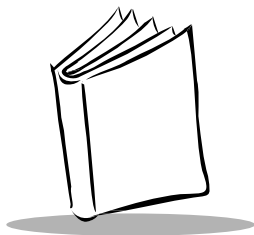

# Product Reference Guide



# Contents

## About This Guide

 
Introduction . . . . .	.xi
Chapter Descriptions . . . . .	.xi
Notational Conventions . . . . .	xiii
Related Publications . . . . .	xiii
Service Information . . . . .	xiii
Symbol Support Center . . . . .	xiv

## Chapter 1. Getting Started

Introduction . . . . .	1-1
Unpacking Your Scanner . . . . .	1-2
Setting Up the Scanner . . . . .	1-3
Installing the Interface Cable . . . . .	1-3
Connecting Power (if required) . . . . .	1-4
Synapse Interface . . . . .	1-4
Connecting a Synapse Cable Interface . . . . .	1-6
Configuring Your Scanner . . . . .	1-6
Removing the Interface Cable . . . . .	1-7

## Chapter 2. Scanning

Introduction . . . . .	2-1
Scanning in Single-Line Mode . . . . .	2-2
Scanning in Omni Mode . . . . .	2-3
Beeper Definitions . . . . .	2-7
Selecting Beeper Volume using Trigger . . . . .	2-8
LED Definitions . . . . .	2-9
Aiming . . . . .	2-10
Decode Zone . . . . .	2-11
Integrated Electronic Article Surveillance (EAS) . . . . .	2-12



Deactivation Antenna for Checkpoint EAS Systems . . . . .	2-12
EAS Deactivation Range . . . . .	2-12
LS 9208 Host Interface Cables and EAS . . . . .	2-13
Different Checkpoint EAS Models . . . . .	2-13
Checkpoint Contact Information . . . . .	2-13
Mounting Template . . . . .	2-15

## Chapter 3. Maintenance and Technical Specifications

Introduction . . . . .	3-1
Maintenance . . . . .	3-1
Troubleshooting . . . . .	3-2
Technical Specifications . . . . .	3-4
Scanner Signal Descriptions . . . . .	3-7

## Chapter 4. User Preferences

Introduction . . . . .	4-1
Scanning Sequence Examples . . . . .	4-2
Errors While Scanning . . . . .	4-2
User Preferences Default Parameters . . . . .	4-3
User Preferences . . . . .	4-5
Set Default Parameter . . . . .	4-5
Beeper Tone . . . . .	4-6
Beeper Volume . . . . .	4-7
Volume Change Trigger Delay . . . . .	4-8
Laser On Time . . . . .	4-9
Beep After Good Decode . . . . .	4-10
Low Power Blink . . . . .	4-11
Scan Pattern Mode . . . . .	4-12
Single-Line Aim Duration . . . . .	4-13
Timeout Between Decodes . . . . .	4-15
Time Delay to Low Power Mode . . . . .	4-16
Linear UPC/EAN Decode . . . . .	4-18

## Chapter 5. Keyboard Wedge Interface

Introduction . . . . .	5-1
Connecting a Keyboard Wedge Interface . . . . .	5-2
Keyboard Wedge Default Parameters . . . . .	5-3
Keyboard Wedge Host Types . . . . .	5-4
Keyboard Wedge Host Types . . . . .	5-4
Keyboard Wedge Country Types (Country Codes) . . . . .	5-6
Ignore Unknown Characters . . . . .	5-10

 
Keystroke Delay	5-11
Intra-Keystroke Delay	5-12
Alternate Numeric Keypad Emulation	5-13
Caps Lock On	5-14
Caps Lock Override	5-15
Convert Wedge Data	5-16
Function Key Mapping	5-17
FN1 Substitution	5-18
Send Make Break	5-19
Keyboard Maps	5-20
ASCII Character Set	5-23

## Chapter 6. RS-232 Interface

Introduction	6-1
Connecting an RS-232 Interface	6-3
RS-232 Default Parameters	6-3
RS-232 Host Parameters	6-5
RS-232 Host Types	6-7
Baud Rate	6-10
Parity	6-12
Check Receive Errors	6-14
Hardware Handshaking	6-15
Software Handshaking	6-18
Host Serial Response Time-out	6-21
RTS Line State	6-23
Stop Bit Select	6-24
Data Bits	6-25
Beep on <BEL>	6-26
Intercharacter Delay	6-27
Nixdorf Beep/LED Options	6-29
Ignore Unknown Characters	6-30
ASCII / Character Set	6-31

## Chapter 7. USB Interface

Introduction	7-1
Connecting a USB Interface	7-2
USB Default Parameters	7-4
USB Host Parameters	7-5
USB Device Type	7-5
USB Country Keyboard Types (Country Codes)	7-6
USB Keystroke Delay	7-10
USB CAPS Lock Override	7-11



USB Ignore Unknown Characters . . . . .	7-12
Emulate Keypad . . . . .	7-13
USB Keyboard FN1 Substitution . . . . .	7-14
Function Key Mapping . . . . .	7-15
Simulated Caps Lock . . . . .	7-16
Convert Case . . . . .	7-17
ASCII Character Set . . . . .	7-18

## Chapter 8. IBM 468X/469X Interface

Introduction . . . . .	8-1
Connecting to an IBM 468X/469X Host . . . . .	8-2
IBM Default Parameters . . . . .	8-3
IBM 468X/469X Host Parameters . . . . .	8-4
Port Address . . . . .	8-4
Convert Unknown to Code 39 . . . . .	8-6

## Chapter 9. Wand Emulation Interface

Introduction . . . . .	9-1
Connecting Using Wand Emulation . . . . .	9-2
Wand Emulation Default Parameters . . . . .	9-3
Wand Emulation Host Parameters . . . . .	9-4
Wand Emulation Host Types . . . . .	9-4
Leading Margin (Quiet Zone) . . . . .	9-5
Polarity . . . . .	9-6
Ignore Unknown Characters . . . . .	9-7
Convert All Bar Codes to Code 39 . . . . .	9-8
Convert Code 39 to Full ASCII . . . . .	9-9

 
## Chapter 10. 123Scan

Introduction . . . . .	10-1
Communication With the 123Scan PC Based Configuration Tool . . . . .	10-1
123Scan Parameter . . . . .	10-2

## Chapter 11. Symbologies

Introduction . . . . .	11-1
Scanning Sequence Examples . . . . .	11-2
Errors While Scanning . . . . .	11-2
Symbology Default Parameters . . . . .	11-3
UPC/EAN . . . . .	11-8
Enable/Disable UPC-A/UPC-E . . . . .	11-8

Enable/Disable UPC-E1 .....	11-9
Enable/Disable EAN-13/JAN-13/EAN-8/JAN-8 .....	11-10
Enable/Disable Bookland EAN .....	11-11
Decode UPC/EAN Supplementals .....	11-12
UPC/EAN Supplemental Redundancy .....	11-15
Transmit UPC-A/UPC-E/UPC-E1 Check Digit .....	11-16
UPC-A Preamble .....	11-18
UPC-E Preamble .....	11-19
UPC-E1 Preamble .....	11-20
Convert UPC-E to UPC-A .....	11-21
Convert UPC-E1 to UPC-A .....	11-22
EAN Zero Extend .....	11-23
UCC Coupon Extended Code .....	11-24
Code 128 .....	11-25
Enable/Disable Code 128 .....	11-25
Enable/Disable UCC/EAN-128 .....	11-26
Enable/Disable ISBT 128 .....	11-27
Code 128 Decode Performance .....	11-28
Code 128 Decode Performance Level .....	11-29
Code 39 .....	11-30
Enable/Disable Code 39 .....	11-30
Enable/Disable Trioptic Code 39 .....	11-31
Convert Code 39 to Code 32 .....	11-32
Code 32 Prefix .....	11-33
Set Lengths for Code 39 .....	11-34
Code 39 Check Digit Verification .....	11-36
Transmit Code 39 Check Digit .....	11-37
Enable/Disable Code 39 Full ASCII .....	11-38
Code 39 Buffering (Scan & Store) .....	11-39
Code 39 Decode Performance .....	11-43
Code 39 Decode Performance Level .....	11-44
Code 93 .....	11-45
Enable/Disable Code 93 .....	11-45
Set Lengths for Code 93 .....	11-46
Code 11 .....	11-48
Code 11 .....	11-48
Set Lengths for Code 11 .....	11-49
Code 11 Check Digit Verification .....	11-51
Transmit Code 11 Check Digits .....	11-52
Interleaved 2 of 5 (ITF) .....	11-53
Enable/Disable Interleaved 2 of 5 .....	11-53
Set Lengths for Interleaved 2 of 5 .....	11-54
I 2 of 5 Check Digit Verification .....	11-56
Transmit I 2 of 5 Check Digit .....	11-57



Convert 1 2 of 5 to EAN-13 . . . . .	11-58
Discrete 2 of 5 (DTF) . . . . .	11-59
Enable/Disable Discrete 2 of 5 . . . . .	11-59
Set Lengths for Discrete 2 of 5 . . . . .	11-60
Chinese 2 of 5 . . . . .	11-62
Enable/Disable Chinese 2 of 5 . . . . .	11-62
Codabar (NW - 7) . . . . .	11-63
Enable/Disable Codabar . . . . .	11-63
Set Lengths for Codabar . . . . .	11-64
CLSI Editing . . . . .	11-66
NOTIS Editing . . . . .	11-67
MSI . . . . .	11-68
Enable/Disable MSI . . . . .	11-68
Set Lengths for MSI . . . . .	11-69
MSI Check Digits . . . . .	11-71
Transmit MSI Check Digit(s) . . . . .	11-72
MSI Check Digit Algorithm . . . . .	11-73
RSS (Reduced Space Symbology) . . . . .	11-74
RSS 14 . . . . .	11-74
RSS Limited . . . . .	11-75
RSS Expanded . . . . .	11-76
Convert RSS to UPC/EAN . . . . .	11-77
Symbology - Specific Security Levels . . . . .	11-80
Redundancy Level . . . . .	11-80
Security Level . . . . .	11-83
Symbology - Intercharacter Gap . . . . .	11-85

## Chapter 12. Miscellaneous Scanner Options

Introduction . . . . .	12-1
Scanning Sequence Examples . . . . .	12-2
Errors While Scanning . . . . .	12-2
Miscellaneous Default Parameters . . . . .	12-3
Miscellaneous Scanner Parameters . . . . .	12-4
Transmit Code ID Character . . . . .	12-4
Prefix/Suffix Values . . . . .	12-5
FN1 Substitution Values . . . . .	12-8
Scan Data Options . . . . .	12-9
Transmit "No Read" Message . . . . .	12-12

## Chapter 13. Advanced Data Formatting

 
Introduction .....	13-1
Rules: Criteria Linked to Actions .....	13-1
Using ADF Bar Codes .....	13-2
ADF Bar Code Menu Example .....	13-2
Rule 1: The Code 128 Scanning Rule .....	13-3
Rule 2: The UPC Scanning Rule .....	13-4
Alternate Rule Sets .....	13-4
Rules Hierarchy (in Bar Codes) .....	13-5
Default Rules .....	13-6
Special Commands .....	13-7
Pause Duration .....	13-7
Begin New Rule .....	13-7
Save Rule .....	13-8
Erase .....	13-8
Quit Entering Rules .....	13-9
Disable Rule Set .....	13-10
Criteria .....	13-12
Code Types .....	13-12
Code Lengths .....	13-20
Message Containing A Specific Data String .....	13-30
Actions .....	13-34
Send Data .....	13-34
Setup Field(s) .....	13-42
Modify Data .....	13-53
Pad Data with Zeros .....	13-66
Beeps .....	13-76
Send Keystroke (Control Characters and Keyboard Characters) .....	13-77
Send Right Control Key .....	13-162
Send Graphic User Interface Characters .....	13-163
Turn On/Off Rule Sets .....	13-175
Alphanumeric Keyboard .....	13-178

## Appendix A. Standard Default Parameters

## Appendix B. Programming Reference

Symbol Code Identifiers .....	B-1
AIM Code Identifiers .....	B-3





## Appendix C. Sample Bar Codes

Code 39 .....	.C-1
UPC/EAN .....	.C-1
UPC-A, 100 % .....	.C-1
EAN-13, 100 % .....	.C-2
Code 128 .....	.C-2
Interleaved 2 of 5 .....	.C-2
RSS 14 .....	.C-3

## Appendix D. Numeric Bar Codes

0, 1 .....	.D-1
2, 3, 4 .....	.D-2
5, 6, 7 .....	.D-3
8, 9 .....	.D-4
Cancel .....	.D-5

## Glossary

## Index

## Feedback

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)