


QT-2100

Versatile Intelligent Terminal

Installation & Down Recovery Manual

Version 1.0 February 2002

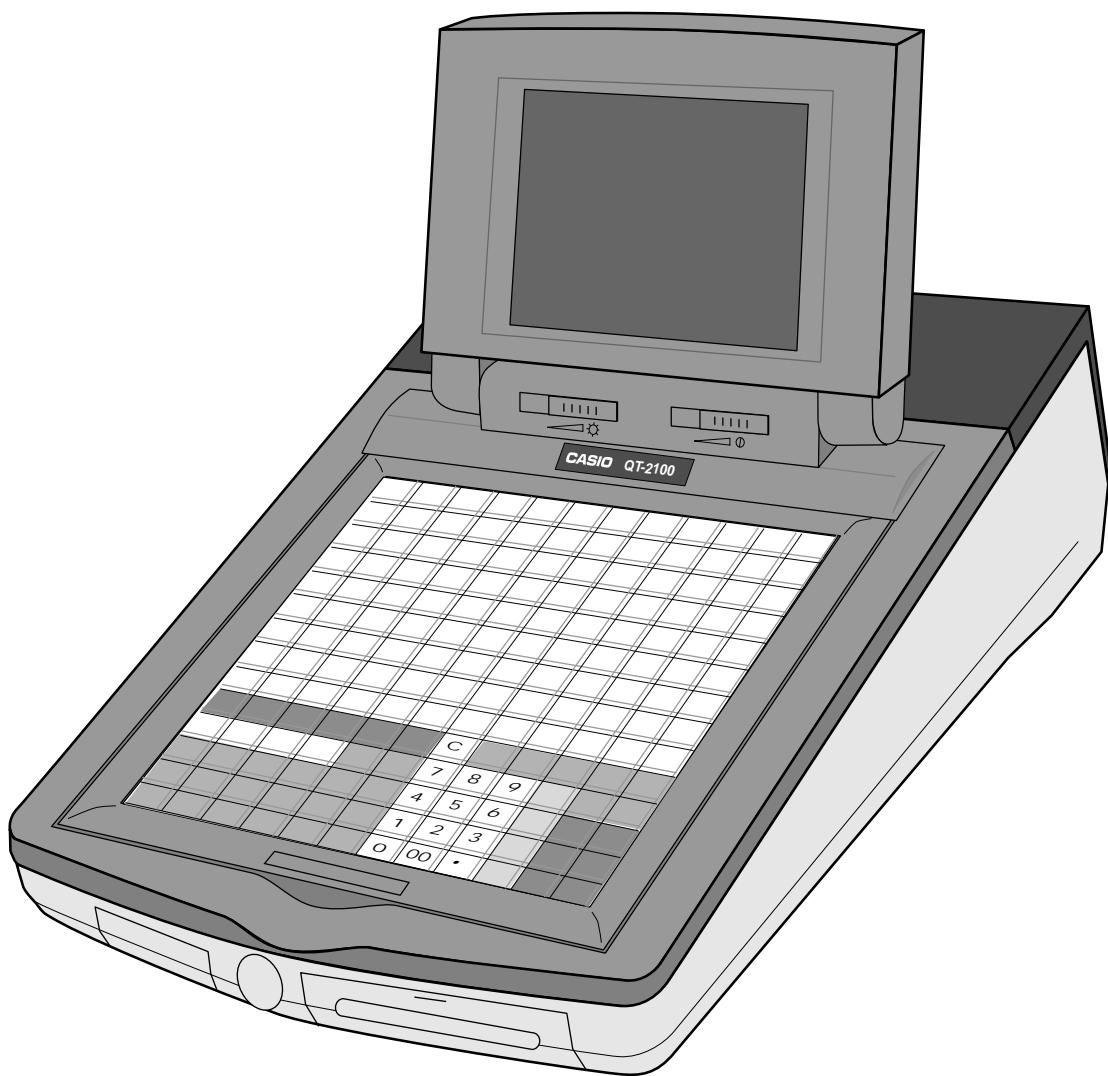

CASIO®

1. System installation	I-6
1-1. How to load IPL (Initial Program Loading)	I-6
1-1-1. From PC to QT-2100 terminal via RS-232C	I-6
1-1-2. From one QT-2100 to QT-2100 terminals via inline	I-7
1-1-3. From CF card to QT-2100 terminal	I-7
1-2. How to install QT-2100 system	I-8
1-2-1. QT-2100 stand alone system (with printer)	I-8
1-2-2. QT-2100 master/satellite system (with local printer)	I-8
1-2-3. QT-2100 master/satellite system (with remote printer).....	I-9
1-2-4. Printer DIP switch configuration	I-10
2. System down and recovery	I-11
2-1. Measures to prevent trouble	I-12
2-2. Master terminal failure	I-13
2-2-1. Check tracking master terminal failure	I-13
2-2-1-1. Detection of check tracking master terminal failure.....	I-13
2-2-1-2. Master failure during check tracking operation	I-14
2-2-2. Remote printer failure	I-15
2-2-2-1. Detection of remote printer failure	I-15
2-2-2-2. Master printer failure during printing on remote printer	I-15
2-3. Recovery processing	I-16
2-3-1. Master/backup master down detection	I-16
2-3-2. When both master and backup master go down	I-16
2-4. Master failure during X/Z collection/consolidation or terminal data transfer	I-16
2-5. Satellite terminal down	I-16

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)