

# QT-8000

## *Touch screen Point of Sale Terminal* **Reference Manual**

Version 1.0 November 2004



**CASIO®**

# Contents

<b>1. Introduction .....</b>	<b>4</b>
1.1 General description .....	4
1.2 QT-8000 specifications .....	4
1.3 System overview .....	6
1.4 I/O outlets .....	7
<b>2. System configuration .....</b>	<b>8</b>
2.1 Disassembling QT-8000 .....	8
2.2 Table standing .....	9
<b>3. I/O connector .....</b>	<b>10</b>
3.1 COM port connector .....	10
3.2 DC jack input .....	10
3.3 VGA connector .....	10
3.4 LAN connector .....	11
3.5 Parallel port connector .....	11
3.6 Keyboard & PS/2 mouse connector .....	11
3.7 Universal serial bus connector .....	12
3.8 Audio connector .....	12
<b>4. Mother board setting .....</b>	<b>13</b>
4.1 Overview and jumper switch .....	13
4.2 Jumper setting .....	14
4.2.1 CMOS function selection (JP7) .....	14
4.2.2 COM port RI & voltage selection (JP2) .....	15
4.2.3 Other jumper default setting .....	16
4.3 Connectors .....	17
4.3.1 Board connection diagram .....	17
4.3.2 Reset connector .....	18
4.3.3 Hard disk drive connector .....	18
4.3.4 Daughter board connector .....	19
4.3.5 Power and HDD LED connector .....	19
4.3.6 Sound connector for internal speaker .....	20
4.3.7 Inverter connector .....	20
4.3.8 CPU fan connector .....	20
4.3.9 System fan connector .....	20
4.3.10 LVDS connector .....	20
4.3.11 Universal serial bus connector for touch panel .....	21
4.3.12 DC switch connector button .....	21
<b>5. Installing operating system / drivers .....</b>	<b>22</b>
5.1 Preparation .....	22
5.2 Installing operating system .....	22
5.3 Installing drivers for QT-8000 .....	23
5.3.1 Installing procedure .....	23
5.3.1.1 Chipset driver .....	23
5.3.1.2 Network driver .....	25
5.3.1.3 Touch panel driver .....	26
5.3.1.4 Sound driver .....	29
5.3.1.5 Video driver .....	30
5.3.1.6 USB driver .....	32

5.3.2	Confirming driver installation -----	33
5.3.2.1	Device manager window .....	33
5.3.2.2	In case of the device does not work normally .....	33
5.3.3	Touch panel utility -----	34
5.3.3.1	Overview of the utility .....	34
5.3.3.2	Calibration .....	35
<b>6.</b>	<b>System BIOS.....</b>	<b>37</b>
6.1	How to enter BIOS setup -----	37
6.2	BIOS setup screen -----	37
6.3	How to return to the default value -----	37
6.4	BIOS setting table -----	39
6.5	Updating BIOS -----	42
6.5.1	Procedure -----	42

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)