


TECHNICAL MANUAL

(without price)

TERMINAL SLIP PRINTER

SP-1300

FEB. 2000

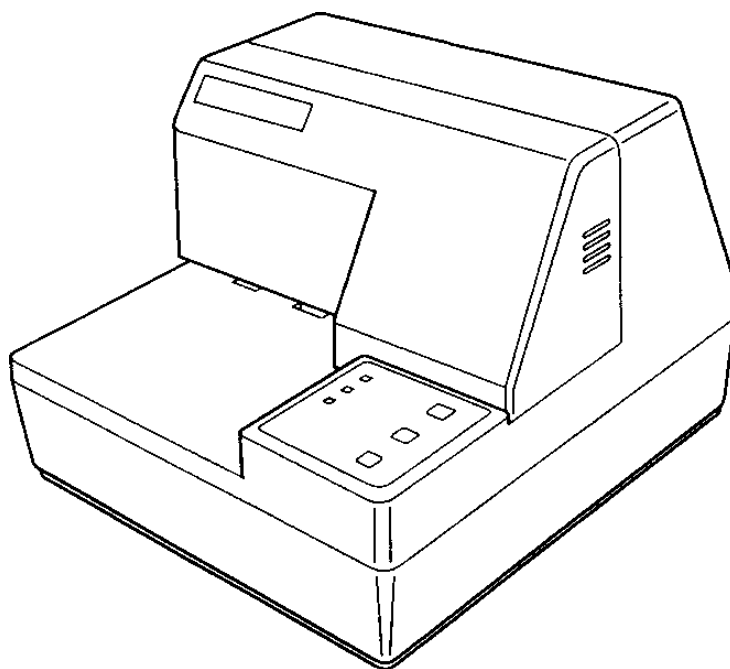

CASIO®

CHAPTER 1. ADJUSTMENTS

Some of the features of this printer require minor adjustments in order to ensure optimal performance. This chapter explains how to make these adjustments. Please make sure to check that all of these adjustments are maintained whenever the printer is serviced or parts are changed.

- 1. Tools and measures 2**
- 2. Adjusting the gap between the print head and platen 3**
 - 2-1 Measuring the gap between the print head and platen 3**
 - 2-2 Adjusting the gap between the print head and platen 4**
- 3. Adjusting the dot alignment 5**
 - 3-1 Adjustment A 5**
 - 3-2 Adjustment B 6**
 - 3-3 Adjusting the solenoid gap 7**
 - 3-4 Adjusting the cam position 8**

CHAPTER 2. PARTS REPLACEMENT

This chapter explains disassembly and reassembly of the printer. Note the following precautions during disassembly and reassembly.

1. Disconnect the printer power cord plug from the wall outlet before servicing it.
2. Assembly is the reverse of disassembly unless otherwise specified.
3. After reassembly, coat the screw heads with locking sealant.
4. Lubrication information is not provided in this chapter. Refer to Section 3.2.

1. Upper Case Unit	10
2. Printer Mechanism	10
3. Control Panel Board Unit	11
4. Main Logic Board Unit	11
5. Paper Detector BD Unit	12
6. Terminal Board Timing Detector BD Unit	12
7. Carriage Motor Unit	13
8. Paper Feed Motor Unit.....	13
9. Print Head	14
10. Drive Shaft Unit	14

CHAPTER 3. MAINTENANCE AND LUBRICATION

1. Maintenance	16
1-1. Cleaning	16
1-2. Checks	16
2. Lubrication	17
2-1. Type of oil	17
2-2. Lubrication method	17
2-3. Lubrication locations	17

CHAPTER 4. PARTS LIST

HOW TO USE PARTS LIST

- (1) Ref.No.
This column shows the drawing number of the illustration.
- (2) Part No.
Parts numbers must be notified when ordering replacement parts. Parts described as “NPN” have no parts number and are not in stock, i.e., unavailable.
- (3) Parts Name
Parts names must be notified when ordering replacement parts.
- (4) Q'TY
This column shows the number of the part used as indicated in the figure.
- (5) Remarks
When differences in specifications exist depending on location/destination.
Note: Basically, only the parts accompanied by the part number in Parts List can be supplied.

1. Printer Assembly	21
1-1. Disassembly Drawing	21
1-2. Parts List for Printer Case	22
2. Printer Mechanism	23
2-1. Disassembly Drawing	23
2-2. Parts List	25
3. Upper Case Unit	27
4. Wiring Scheme of Printer	28
5. Main Logic Board	29
5-1. Circuit Diagram	29
5-2. Parts List	34
6. Operation Panel Board	38

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*