

# SERVICE MANUAL

(without price)

ELECTRONIC CASH REGISTER

## TE-3000S/4000F/4500F

(EX-466/566/567)

JULY. 2003



TE-3000S



TE-4000F



TE-4500F

# CASIO®

## CONTENTS

TE-3000S/4000F/4500F	PAGE
1. SPECIFICATIONS.....	1
2. CONNECTOR LOCATIONS .....	4
3. MACHINE INITIALIZATION .....	5
4. DISASSEMBLY .....	8
5. CIRCUIT EXPLANATION .....	15
6. OPTION INSTALLATION.....	27
7. IN LINE .....	29
8. ON LINE .....	32
9. DIAGNOSTIC OPERATION .....	34
10. ERROR CODE LIST .....	55
11. IC DATA .....	59
12. PCB LAYOUT .....	69
13. CIRCUIT DIAGRAMS.....	72
14. PARTS LIST .....	92

**To prevent malfunctions caused by the weak batteries, charge the memory protection batteries for over 12-hours before installation or after a long-time vacation (over 30 days).**

- **Before installation, initialize the terminal and leave it turn on over 12-hours.**
- **After a long-time vacation, initialize the terminal and restore the program data if the terminal is in malfunction, and leave it turn on over 12-hours.**
- **Over 48-hours charging makes the batteries fully charged.**

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/casio/TE-3000S and TE-4000F and TE-4500F series](https://the-checkout-tech.com/manuals/casio/TE-3000S%20and%20TE-4000F%20and%20TE-4500F%20series)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)