
Installation manual

February 2004



TE 3000/4000

SuperBoard

devlyx

<u>1</u>	<u>EQUIPMENT SETUP FLOWCHART</u>	<u>1</u>
<u>2</u>	<u>SUPERBOARD II INSTALLATION</u>	<u>2</u>
2.1	SUPERBOARD II KIT	2
2.2	RAM CHARACTERISTICS	2
2.3	WAY TO PROCEED	3
2.4	TO LOAD PROGRAM FLASH EPROM	6
2.5	ECR UPDATING FROM ANOTHER ECR	8
2.6	FLASH EPROM INITIALIZATION	8
<u>3</u>	<u>INLINE SYSTEM</u>	<u>10</u>
3.1	INLINE CABLE	10
3.2	ARCNET CIRCUIT	10
3.3	INLINE CONNECTOR	10
3.4	CONNECTION ARCNET CABLE	11
<u>4</u>	<u>CONNECTORS RS232</u>	<u>11</u>
4.1	PIN LAYOUT ON COM 4	11
4.2	PIN LAYOUT ON COM 5	11
4.3	PC CONNECTION COM 4 OR 5	11
	RS232 PC CABLE	12
4.4	OTHER CABLE CONNECTION	12
	MODEM CABLE COM 4	12
	SERIAL PRINTER CABLE COM 1, 2, 3, 4	12
<u>5</u>	<u>INSTALLATION OF DALLAS CHIP (OPTIONAL)</u>	<u>13</u>
<u>6</u>	<u>ADVICES</u>	<u>13</u>
6.1	MESSAGE "SPB II SERVER..."	13
6.2	MESSAGE "PROCESS ERROR"	13

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/casio/TE-4000 superboard installation manual.htm](https://the-checkout-tech.com/manuals/casio/TE-4000%20superboard%20installation%20manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)