

---

# Installation manual

---

February 2004



**TE 3000/4000**

**SuperBoard**

---

**devlyx**

---

<b><u>1</u></b>	<b><u>EQUIPMENT SETUP FLOWCHART</u></b>	<b><u>1</u></b>
<b><u>2</u></b>	<b><u>SUPERBOARD II INSTALLATION</u></b>	<b><u>2</u></b>
2.1	SUPERBOARD II KIT	2
2.2	RAM CHARACTERISTICS	2
2.3	WAY TO PROCEED	3
2.4	TO LOAD PROGRAM FLASH EPROM	6
2.5	ECR UPDATING FROM ANOTHER ECR	8
2.6	FLASH EPROM INITIALIZATION	8
<b><u>3</u></b>	<b><u>INLINE SYSTEM</u></b>	<b><u>10</u></b>
3.1	INLINE CABLE	10
3.2	ARCNET CIRCUIT	10
3.3	INLINE CONNECTOR	10
3.4	CONNECTION ARCNET CABLE	11
<b><u>4</u></b>	<b><u>CONNECTORS RS232</u></b>	<b><u>11</u></b>
4.1	PIN LAYOUT ON COM 4	11
4.2	PIN LAYOUT ON COM 5	11
4.3	PC CONNECTION COM 4 OR 5	11
	RS232 PC CABLE	12
4.4	OTHER CABLE CONNECTION	12
	MODEM CABLE COM 4	12
	SERIAL PRINTER CABLE COM 1, 2, 3, 4	12
<b><u>5</u></b>	<b><u>INSTALLATION OF DALLAS CHIP (OPTIONAL)</u></b>	<b><u>13</u></b>
<b><u>6</u></b>	<b><u>ADVICES</u></b>	<b><u>13</u></b>
6.1	MESSAGE "SPB II SERVER..."	13
6.2	MESSAGE "PROCESS ERROR"	13

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)