

ELECTRONIC CASH REGISTER

CASIO TK-1100

OPERATOR'S INSTRUCTION MANUAL



Contents

1. Loading Receipt and Journal Paper	4
1-1 Removing Paper Rolls	4
1-2 Loading Paper Rolls	5
2. General Guide	6
2-1 MODE Switch and Keys	6
2-2 Clerk Buttons and Clerk Button Keys	7
2-3 Keyboard and Keys	8
2-4 Displays	12
2-5 Printer	14
2-6 Cash Drawer	16
3. Programming the TK-1100 Cash Registers	17
3-1 Setting the Proper MODE for Programming	17
3-2 Using the Worksheets	18
3-3 Clearing a Machine Lock Up	18
4. PROGRAM 4	19
5. PROGRAM 3	20
6. PROGRAM 2	23
6-1 Programming the Store Machine Number	23
6-2 Programming General Machine Features	24
6-3 Programming Tax Calculations	27
6-4 Programming Department Key Features	30
6-5 Programming Flat-PLUS Key Features	32
6-6 Programming Function Key Features	33
7. PROGRAM 1	39
7-1 Setting the Time and Date	39
7-2 Programming Unit Prices to Department Keys	40
7-3 Programming Unit Prices to Flat-PLUS Keys	41
7-4 Programming Prices or Rates to Function Keys	43
8. Operation	44
9. Registration	45
9-1 Reading the Time and Date	45
9-2 Making Change	46
9-3 Registering Single Item and Cash Tender	46
9-4 Registering Single Item Cash Sales	47
9-5 Repeating Identical Items	50
9-6 Performing Multiplication	51
9-7 Registering Mixed Departments and Flat-PLUS	54
9-8 Registering Discounts and Premiums	55
9-9 Performing Subtraction	56
9-10 Registering Coupon Transactions	58
9-11 Registering Other Payment Media	61
9-12 Registering Taxable Transactions	64
9-13 Changing Between REG1 and REG2	68
9-14 Making Corrections	69

Introduction

Congratulations on your selection of the CASIO TK-1100 electronic cash register. This ECR is the product of the world's most advanced electronic technology, for outstanding versatility and reliability. Simplified operation is made possible by a specially designed keyboard layout and a wide selection of automated, programmable functions.

A specially designed keyboard layout and a bright, easy-to-read display help to take the fatigue out of long hours of operation.

Important

Your new cash register has been carefully tested before shipment to ensure proper operation. Safety devices eliminate worries about breakdowns resulting from operator errors or improper handling. In order to ensure years of trouble-free operation, however, the following points should be noted when handling the cash register.

•Location

Do not locate the cash register near a heater or in areas exposed to direct sunlight, humidity or dust. Locate the cash register on a flat, stable surface.

•Power Cord

The cash register operates on standard household current (120, 220, 230, 240V; 50/60Hz). Do not use an overloaded outlet and be sure that the cord is located where no one will trip over it.

•Cleaning

Clean the exterior of the cash register with a soft cloth which has been dipped in a mild detergent solution and wrung out. Be sure that the cloth is thoroughly wrung out to avoid damage to the printer. Never use paint thinner, benzene, or other volatile solvents.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/casio/TK-1100 user programming manual.html](https://the-checkout-tech.com/manuals/casio/TK-1100%20user%20programming%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)