



**Table of Contents**

**Chapter 1 Overview** ..... **1-1**

    1.1 TeamPoS 2000 Control Unit Flow Diagram ..... 1-2

    1.2 Front Panel LEDs and Switches ..... 1-3

        1.2.1 TeamPoS 2000 Front Panel Switch and LCD Matrix ..... 1-4

    1.3 Intelligent PINs (Product Identification Numbers) ..... 1-5

**Chapter 2 - EXTERNAL VIEW AND ENVIRONMENTAL SPECIFICATIONS** ..... **2-1**

    2.1 Environmental Specifications ..... 2-2

**Chapter 3 DIMENSIONS** ..... **3-1**

    3.1 Standard TeamPoS 2000 15" LCD Stacked Configuration ..... 3-1

    3.2 Compact TeamPoS 2000 12.1" LCD Stacked Configuration Dimensions ..... 3-2

    3.3 Standard TeamPoS 2000 12.1" LCD Stacked Configuration Dimensions ..... 3-2

    3.4 Control Units ..... 3-3

    3.5 Keyboards ..... 3-4

        3.5.1 Model 133UQ Keyboard Dimensions ..... 3-4

        3.5.2 Model 104P Keyboard Dimensions ..... 3-4

        3.5.3 Model 133PQ Keyboard Dimensions ..... 3-5

        3.5.4 Basic Model 92M and 92U Keyboard Dimensions ..... 3-5

        3.5.5 Model 92M & 92U Keyboard with MSR and Display Dimensions ..... 3-6

        3.5.6 Model 92M Keyboard with Vertical Key-Lock Dimensions ..... 3-6

    3.6 Cash Drawers ..... 3-7

        3.6.1 Model TP10 Cash Drawer ..... 3-7

        3.6.2 MP5 Cash Drawer, Compact ..... 3-7

        3.6.3 NF5 Cash Drawer ..... 3-8

        3.6.4 Model NAF Cash Drawer ..... 3-8

    3.7 Displays ..... 3-9

3.7.1	Model D15 LCD Displays ( <i>New Release</i> )	3-9
3.7.2	LCD Bracket Mounting	3-10
3.7.3	Single Stacked D15 LCD	3-10
3.7.4	Single Stacked D15 LCD w/customer display	3-11
3.7.5	Single Dispersed D15 LCD	3-11
3.7.6	Single Dispersed LCD with MSR	3-12
3.7.7	Single Dispersed D15 with Keypad and MSR	3-12
3.8	Models D12 and A12 LCD Displays	3-13
3.8.1	LCD Bracket Mounting	3-14
3.8.2	Single Stacked LCD	3-15
3.8.3	Single Dispersed LCD with dispersed stand	3-15
3.8.4	Single Dispersed LCD – Alternate Mount	3-16
3.8.5	TeamKey	3-16
3.8.6	LCD with MSR (dispersed)	3-17
3.8.7	Dual Stacked LCD	3-17
3.8.8	Other Options	3-18
3.8.9	CRTs, 9"	3-18
3.8.10	CRT, 14"	3-19
3.8.11	VF50 & VF50U Customer Displays (dispersed configuration)	3-20
3.9	Printers	3-21
3.9.1	Model DT50/DT50II Printer	3-21
3.9.2	Model DT50II TranScan Printer	3-21
3.9.3	Model TM-T88III Printer	3-22
3.9.4	Model TM-T90 Printer	3-22
3.9.5	Model A758 & A760 Printers	3-23
3.9.6	Model A794 Printer	3-23

**Chapter 4 SITE PREPARATION ..... 4-1**

- 4.1 Unpacking ..... 4-1
- 4.2 Inspecting the Shipment ..... 4-1
- 4.3 Reporting Shipment Damage ..... 4-2
- 4.4 Returning Equipment ..... 4-2
- 4.5 Using Anti-static Protection ..... 4-2
- 4.6 Preparing for Installation: ..... 4-2
- 4.7 Determining Power Requirements ..... 4-3
- 4.8 General Requirements ..... 4-3
- 4.9 Installation with Other Equipment ..... 4-4
- 4.10 Mains Power Cable ..... 4-5

**Chapter 5 INSTALLATION ..... 5-1**

- 5.1 Cover Removal/Installation Process ..... 5-1
  - 5.1.1 Front Cover ..... 5-1
  - 5.1.2 Side Cover (Left) ..... 5-2
  - 5.1.3 Rear Cover ..... 5-3
  - 5.1.4 Top Cover ..... 5-4
  - 5.1.5 Installing D12 and A12 LCD Brackets ..... 5-7
  - 5.1.6 PCI Add-In Card(s) ..... 5-10
- 5.2 Adding Main Memory ..... 5-11
  - 5.2.1 Memory Configuration ..... 5-11
- 5.3 Accessing and Configuring ..... 5-12
  - 5.3.1 Retail I/O Board Pin layout ..... 5-12
  - 5.3.2 Retail I/O Board Settings ..... 5-13
  - 5.3.3 Printer Jumpers ..... 5-14
  - 5.3.4 PTR (Printer) Connector Signals ..... 5-15
  - 5.3.5 Retail I/O Board. Ports 1 and 2 Connector Signals ..... 5-16
  - 5.3.6 Retail I/O Board.Port 5 Connector Signals ..... 5-16

5.3.7	Retail I/O BoardPorts 3, 4 & 6 Connector Signals	5-17
5.3.8	DRW Connector Signals	5-17
5.4	Installing the TeamCOMBO Board	5-18
5.4.1	TeamCOMBO Board Pin Layout	5-18
5.4.2	TeamCOMBO Board Settings	5-19
5.4.3	TeamCOMBO Board. Ports 1 and 2 Connector Signals	5-20
5.4.4	TeamCOMBO Board. Ports 3 and 4 Connector Signals	5-21
5.4.5	DRW Connector Signals	5-21
5.4.6	TeamCOMBO Board. USB Connectors – 4 Ports	5-22
5.5	TeamUSB Settings	5-23
5.5.1	TeamUSB Board. USB Connectors - 7 Ports	5-24
5.5.2	TeamUSB Board DRW Connector Signals	5-25
5.5.3	TeamUSB Board, Powered USB Connectors - 7 ports	5-25
5.6	Riser Card Connectors	5-26
5.7	CD-ROM/CD-RW/DVD (Media Player) Installation	5-27
5.8	PoS Peripheral Installation	5-29
5.8.1	Model 133UQ Keyboard Unit (programmable)	5-29
5.8.2	Model 92U Keyboard Unit (programmable)	5-30
5.8.3	Model 133PQ Keyboard Unit (not programmable)	5-31
5.8.4	Model 104P Keyboard Unit (Compact Keyboard)	5-33
5.9	Model D15 LCD Stands	5-37
5.9.1	D15 LCD Cable Requirements	5-37
5.9.2	D15 LCD Audio Cable Connections	5-37
5.9.3	D15 LCD Video Data Cable Connections	5-39
5.9.4	D15 LCD Dual Monitor Video Cable Connections	5-40
5.9.5	D15 LCD Power and Data (Touch, MSR and Keypad) Cable Connections	5-41
5.9.6	D15 Cable Summary	5-45

5.9.7 Model D15 LCD Installation ..... 5-46

5.10 Models D12 and A12 LCD Installation ..... 5-54

5.10.1 Model D12 and A12 LCD Stand Option Summary ..... 5-54

5.10.2 12.1" LCD Cable Requirements ..... 5-55

5.10.3 A12/D12 Cable Summary ..... 5-60

5.10.4. D12/A12 LCD Stand and Rotating Arm Assembly ..... 5-61

5.10.5 Model VF50 & VF50U Integrated Customer Display with D12/A12 LCD ..... 5-63

5.10.6 D12/A12 LCD with TeamKey Assembly ..... 5-66

5.10.7 Models D12 and A12 LCD, 12.1” Adjustments ..... 5-70

5.10.8 Model VF50 and VF50U Customer Display Settings ..... 5-71

5.11 Cash Drawers ..... 5-74

5.12 Connecting Retail I/O, TeamCOMBO & TeamUSB Board Cables ..... 5-75

5.12.1 TeamPoS 2000 with Retail I/O Board Connector Layout-A Motherboard ..... 5-76

5.12.2 TeamPoS 2000 with TeamCOMBO Board Connector Layout-A Motherboard ..... 5-78

5.12.3 TeamPoS 2000 with TeamUSB Board Connector Layout  
with A Motherboard ..... 5-79

5.12.4 TeamPoS 2000 M with TeamUSB Board Connector Layout  
with M Motherboard ..... 5-80

**Chapter 6 GENERAL OPERATIONS ..... 6-1**

6.1 System Operations ..... 6-1

6.1.1 General Care and Maintenance ..... 6-1

6.1.2 Power ON and OFF Sequence ..... 6-2

6.1.3 Powering ON ..... 6-2

6.1.4 Powering OFF ..... 6-3

**Chapter 7 MAINTENANCE ..... 7-1**

7.1. Power ON and OFF Sequence ..... 7-1

7.1.1 Powering ON ..... 7-2

7.1.2 Powering OFF ..... 7-3

7.2	PC Board Replacement	7-3
7.3	M Motherboard Layout	7-5
7.3.1	M Motherboard Settings	7-6
7.3.2	Picture of M Motherboard	7-8
7.3.3	A Motherboard Layout	7-9
7.4	A Motherboard Settings	7-10
7.5	Lead Acid Battery Replacement	7-11
7.6	Power Supply Unit Replacement	7-12
7.7	HDD Kit Replacement	7-14
7.8	FDD Unit Replacement	7-16
7.9	CD-ROM/CD-Read/Write/DVD (Media Player) Kit Replacement	7-17
7.10	Operator Panel	7-18
7.10.1	Operator Panel Layout	7-19
7.10.2	Operator Panel Settings	7-19
7.11	Memory (DIMM or SDRAM)	7-20
7.12	Chassis Fan	7-22
7.13	Retail I/O, TeamCOMBO and TeamUSB Board Replacement	7-23
7.14	Riser Card	7-25
<b>Chapter 8 BIOS Setup Procedures - M Motherboard</b>		<b>8-1</b>
8.1	Opening CMOS Setup Screen	8-1
8.1.1	CMOS Settings	8-1
8.1.2	Main Menu - M Motherboard	8-2
8.1.3	Advanced Settings - M Motherboard	8-3
8.1.4	Configure Advanced CPU Settings - M Motherboard	8-4
8.1.5	IDE Configuration - M Motherboard	8-5
8.1.6	Primary IDE Master - M Motherboard	8-6
8.1.7	Primary IDE Slave - M Motherboard	8-7

8.1.8 Secondary IDE Master - M Motherboard ..... 8-8

8.1.9 Floppy configuration - M Motherboard ..... 8-9

8.1.10 Configure Win627 Super IO Chipset - M Motherboard ..... 8-10

8.1.11 Hardware Health Configuration - M Motherboard ..... 8-11

8.1.12 ACPI Settings - M Motherboard ..... 8-12

8.1.13 General ACPI Configuration - M Motherboard ..... 8-13

8.1.14 Advanced ACPI Configuration - M Motherboard ..... 8-14

8.1.15 Event Logging Details - M Motherboard ..... 8-15

8.1.16 Configure Remote Access Type and Parameters - M Motherboard ..... 8-16

8.1.17 USB Configuration - M Motherboard ..... 8-17

8.1.18 Advanced PCI/PnP Settings - M Motherboard ..... 8-18

8.1.19 Boot Settings - M Motherboard ..... 8-19

8.1.20 Boot Settings Configuration - M Motherboard ..... 8-20

8.1.21 Boot Group Priority - M Motherboard ..... 8-21

8.1.22 Boot Device Priority - M Motherboard ..... 8-22

8.1.23 Hard Disk Drives - M Motherboard ..... 8-23

8.1.24 Removable Drive - M Motherboard ..... 8-24

8.1.25 CD ROM Drives - M Motherboard ..... 8-25

8.1.26 Security Settings - M Motherboard ..... 8-26

8.1.27 Advanced Chipset Settings - M Motherboard ..... 8-27

8.1.28 Configure Advanced Settings for NorthBridge - M Motherboard ..... 8-28

8.1.29 Configure Advanced Settings for SouthBridge - M Motherboard ..... 8-29

8.1.30 Advanced SMI Enable/Resume Event controls - M Motherboard ..... 8-31

8.1.31 Clock Margin - M Motherboard ..... 8-32

8.1.32 Exit Options - M Motherboard ..... 8-33

8.2 BIOS Error Messages - M Motherboard ..... 8-34

8.3 BIOS Reflash Instructions - M Motherboard ..... 8-35



<b>Chapter 9 BIOS SETUP PROCEDURES - A Motherboard</b> .....	<b>9-1</b>
9.1 Opening CMOS Setup Screen - A Motherboard .....	9-1
9.1.1 CMOS Settings - A Motherboard .....	9-1
9.1.2 Main Menu - A Motherboard .....	9-1
9.1.3 Standard CMOS Setup - A Motherboard .....	9-2
9.1.4 BIOS Features Setup - A Motherboard .....	9-3
9.1.5 Chipset Features Setup- A Motherboard .....	9-4
9.1.6 Power Management Setup - A Motherboard .....	9-5
9.1.7 PNP/PCI Configuration .....	9-6
9.1.8 Load BIOS Defaults .....	9-7
9.1.9 Load SETUP Defaults .....	9-7
9.1.10 Clock and Sensor .....	9-7
9.1.11 Integrated Peripherals .....	9-9
9.1.12 Supervisor Password .....	9-10
9.1.13 User Password .....	9-10
9.1.14 IDE HDD Auto Detection .....	9-10
9.1.15 Save & Exit SETUP .....	9-10
9.1.16 Exit Without Saving .....	9-10
9.1.17 BIOS Error Messages .....	9-10
9.1.18 BIOS Beep Code .....	9-13
<b>Chapter 10 SPARE AND UPGRADE PARTS LIST</b> .....	<b>10-1</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*