

NCR EasyPoint 7401

Release 2.5

Hardware User's Guide

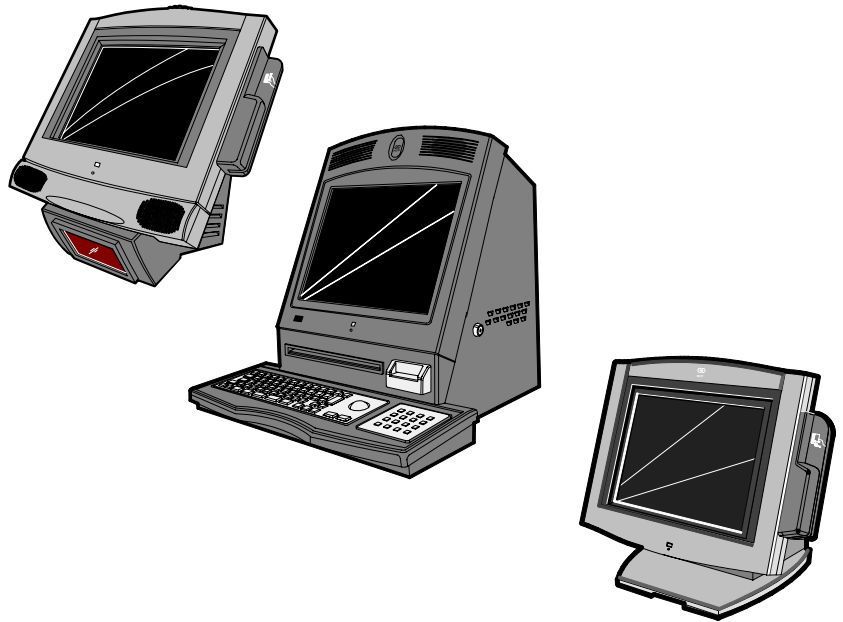


Table of Contents

Chapter 1: 7401-2xxx/3xxx Product Overview

Introduction	1-1
Serial Number/Model Number Label	1-2
Fixed-Angle Mount Label	1-2
Tilt-Mount Label.....	1-3
Model Numbers.....	1-4
Hardware Modules.....	1-5
Base Unit.....	1-5
Hardware Options.....	1-6
Terminal Components not Supported	1-8
System Configuration Diagram	1-9
Kit Configuration Diagram	1-10
Hardware Module Descriptions	1-11
Processor Board	1-11
Processor/Chip Set	1-11
Video Subsystem.....	1-12
Ethernet 10/100Base-T LAN Communications	1-13
Wireless LAN Communications	1-15
Universal Serial Bus.....	1-16
Serial Ports	1-16
Hardware Monitor	1-17
PCI Expansion Header	1-17
IDE Header	1-17
Audio	1-18
Magnetic Stripe Reader	1-18

Touch Screen Controller.....	1-18
Processor Board Connectors.....	1-19
NCR Retail Specific Hardware.....	1-20
Board BIOS.....	1-25
Operator Display	1-29
LCD Adapter Board.....	1-29
LCD Backlight Inverter Module.....	1-29
Touch Screen.....	1-30
Features	1-31
Magnetic Stripe Reader	1-31
Printer Options	1-32
7401-K590 Self-Service Printer.....	1-32
7158 Printer	1-33
7167 Printer	1-33
7194 Printer	1-34
7197 Printer	1-34
Other Integrated Devices and Indicators	1-35
Hard Disk Drive	1-35
Reset Switch	1-35
Internal Speaker	1-36
POS Connector Board.....	1-36
Motion Sensor.....	1-36
Power/Status LED	1-37
Power OK LED	1-37
LAN Status LEDs	1-38
Power Supply	1-38
Uninterruptible Power System (Optional)	1-39
Integrated Scanner Module (Optional)	1-39
Integrated Speaker Module (Optional)	1-39

Compact Flash (Optional).....	1-39
USB RS-232 Port Server	1-40
Integrated CD-ROM Drive (Tilt Mount Model)	1-41
Additional Connectors (Pentium III Board)	1-42
Compatibility	1-43
LAN Communications.....	1-43
Application Programmability.....	1-43
Operating System Information.....	1-43
Migration.....	1-44
Retail Applications	1-44
Retail Peripherals.....	1-44
Retail Systems	1-45
Platform	1-45
Networks	1-45
Platform Load	1-45

Chapter 2: 7401-4xxx Product Overview

Introduction	2-1
Serial Number/Model Number Label	2-2
7401-4xxx Model Numbers	2-2
Hardware Modules.....	2-3
Base Unit.....	2-3
Hardware Options.....	2-4
Terminal Components not Supported	2-5
System Configuration Diagram	2-6
Hardware Module Descriptions	2-7
Processor Board	2-7
Processor/Chip Set	2-7
Video Subsystem.....	2-8

Ethernet 10/100Base-T LAN Communications	2-8
Wireless LAN Communications	2-10
Universal Serial Bus	2-11
Serial Ports	2-11
Hardware Monitor	2-12
PCI Expansion Header	2-12
IDE Header	2-12
Audio	2-13
Magnetic Stripe Reader	2-13
Touch Screen Controller.....	2-13
Processor Board Connectors.....	2-14
NCR Retail Specific Hardware.....	2-15
Board BIOS.....	2-18
Operator Display	2-22
LCD Adapter Board.....	2-22
LCD Backlight Inverter Module.....	2-23
Touch Screen.....	2-23
Features	2-24
Secure Cabinet with Integrated Speakers	2-24
Ruggedized Keyboard with Trackball	2-25
Pin Pad	2-25
Motorized Card Reader	2-26
Magnetic Stripe Reader	2-26
Full Page Printer	2-27
Other Integrated Devices and Indicators.....	2-28
Hard Disk Drive	2-28
Integrated CD-ROM	2-28
Reset Switch	2-28
Compact Flash	2-29

Internal Speaker	2-29
POS Connector Board	2-29
USB Camera	2-29
Motion Sensor	2-30
Power/Status LED	2-30
Power OK LED	2-31
LAN Status LEDs	2-31
Power Supply	2-31
Motorized Card Reader Power Supply	2-32
Full Page Printer Power Supply	2-32
Integrated Speakers	2-32
EasyPoint 45 Pedestal	2-33

Chapter 3: 7401-2xxx/3xxx Hardware Installation

Introduction	3-1
Installation Summary	3-1
Installation Restrictions	3-2
Connecting the Cables	3-3
Fixed-Angle Mount (F504)	3-3
Fixed-Angle Mount (F503)	3-5
Cable Routing	3-7
Cable Connector Identification	3-9
Tilt Mount	3-10
Cable Routing	3-11
Cable Connector Identification	3-12
Installing Peripherals	3-13
Installing a Transaction Printer	3-13
RS-232 Installation	3-13
USB Installation	3-14

7401-K590 Self-Service Printer.....	3-15
Installing a Cash Drawer.....	3-16
Installing a Second Cash Drawer.....	3-17
Installing PC Cards.....	3-18
Mounting a Fixed-Angle Mount Terminal.....	3-21
7401-K522 Pedestal Mount.....	3-22
7401-K521 Wall Mount.....	3-24
7401-K521 Wall Mount with 7401-K530 Pole Brackets.....	3-26
Installing a K501 Tilt Mount Terminal.....	3-33
7401-K533 Wall Mount.....	3-34
Wall Mounting a 7401-K502 Core Module.....	3-35
7401-9212 LCD No-Cabinet (12.1-inch).....	3-37
Installation Guidelines.....	3-38
Mounting Specification Illustrations.....	3-39
7401-9512 LCD No-Cabinet (15-inch).....	3-40
Installation Guidelines.....	3-40
Mounting Specification Illustrations.....	3-41
4055 Uninterruptible Power System (UPS).....	3-43
Installing the UPS.....	3-44
Installing the Power Mon II® Software.....	3-44
Configuring the Power Mon II® Software.....	3-45
Finalizing the Installation.....	3-46
Completing the OS Installation (Win2000).....	3-46
Completing the OS Installation (WinXPe).....	3-46
Completing the OS Installation (WinNT).....	3-47
Completing the OS Installation (Win98) - (Discontinued).....	3-48
Setting Auto-Logon (WinNT Terminal).....	3-49
Installing a Serial Mouse.....	3-54
Calibrating the Touch Screen.....	3-55

Calibration Using MicroTouch (Windows)	3-56
Calibration Using Microcal (DOS)	3-58
Calibration From the BIOS	3-59
Summary	3-60
Out-of-Box Failures	3-60

Chapter 4: 7401-4xxx Hardware Installation

Introduction	4-1
Installation Summary	4-1
U.K. Keyboard Configuration	4-1
Windows 2000	4-1
Windows XPe	4-2
Windows NT	4-3
Installation Restrictions	4-4
Connecting the Cables	4-5
Cable Routing	4-5
Cable Connector Identification	4-5
Installing Peripherals	4-6
Installing the Angled Magnetic Stripe Reader (MSR)	4-7
Installing Country Keyboards	4-8
Using the Full Page Printer	4-13
Loading the Paper	4-13
Removing Paper from the Printer Feed Rolls	4-14
Removing Power from the Printer	4-14
Using the Printer Test and Display Panel	4-15
Display LED Indicators	4-15
Panel Switches	4-16
Full Page Printer Diagnostics and Setup	4-17
Installing a 7401-4xxx on a Table Top Mount	4-18

Mounting Procedures	4-18
Accessing the Mounting Screws	4-20
Installing a 7401-4xxx on the EasyPoint 45 Pedestal.....	4-21
4055 Uninterruptible Power System (UPS)	4-22
Installing the UPS	4-22
Installing the Power Mon II® Software	4-23
Configuring the Power Mon II® Software	4-23
Finalizing the Installation	4-24
Completing the OS Installation (Win2000).....	4-24
Completing the OS Installation (WinXPe).....	4-24
Completing the OS Installation (WinNT).....	4-25
Completing the OS Installation (Win98) - (Discontinued) ..	4-26
Calibrating the Touch Screen	4-27
Calibration Using MicroTouch (Windows)	4-27
Calibration Using Microcal (DOS)	4-29
Calibration from the BIOS	4-30
Summary	4-31
Out-of-Box Failures	4-31

Chapter 5: Setup

Introduction	5-1
Entering Setup without a Keyboard	5-1
Entering Setup Using a Keyboard.....	5-2
How to Select Menu Options.....	5-3
Setting the Date and Time	5-3
Setting Passwords.....	5-4
Configuring a Hard Drive	5-5
Setting Memory Cache.....	5-5
Setting Memory Shadow	5-6

Setting Boot Options	5-6
Allocating Interrupts.....	5-7
Restoring Factory Settings.....	5-7
BIOS Default CMOS Values (7401-22xx/35xx/45xx BIOS Version 2.2.1.x).....	5-8
Main Values	5-8
Advanced Values	5-9
Security Values	5-14
Power Values	5-14
Boot Values	5-14
Exit Values	5-15
Interrupts (7401-22xx/35xx/45xx BIOS Version 2.2.1.x)	5-16
Memory Map (7401-22xx/35xx/45xx BIOS Version 2.2.1.x)	5-17
BIOS Default CMOS Values (7401-26xx/46xx BIOS Version 2.3.x.x)	5-18
Main Values	5-18
Advanced Values	5-19
Security Values	5-24
Power Values	5-24
Boot Values	5-25
Exit Values	5-25
Interrupts (7401-26xx/46xx BIOS Version 2.3.x.x).....	5-26
Memory Map (7401-26xx/46xx BIOS Version 2.3.x.x)	5-27
BIOS Default CMOS Values (7401-21xx/31xx BIOS Version 1.5.0.4 - Discontinued)	5-28
Main Values	5-28
Advanced Values	5-30
I/O Device Configuration.....	5-30
PCI Configuration.....	5-30

Interrupts (7401-21xx/31xx BIOS Version 1.5.0.4 - Discontinued).....	5-31
Memory Map (7401-21xx/31xx BIOS Version 1.5.0.4 - Discontinued).....	5-32

Chapter 6: Operating System Recovery

Introduction	6-1
Prerequisites.....	6-1
Updating Procedures	6-3
Completing the OS Installation (Win2000).....	6-5
Completing the OS Installation (WinXPe).....	6-5
Completing the OS Installation (WinNT).....	6-6
Completing the OS Installation (Win98) – (Discontinued)	6-6
Gold Disk Contents.....	6-8
Microsoft Operating System License Agreements.....	6-8
Operating System Restrictions	6-9
Standby and Hibernate Mode Restriction	6-9
NCR 7401-22xx/25xx/32xx/35xx Win2000 Operating System Recovery Software (<i>Version 02.03.00.01</i>).....	6-9
NCR 7401-26xx/46xx Win2000 Operating System Recovery Software (<i>Version 02.05.00.02</i>)	6-11
NCR 7401-45xx Win2000 Operating System Recovery Software (<i>Version 02.04.00.02</i>)	6-14
NCR 7401-22xx/25xx/32xx/35xx WinXPe Operating System Recovery Software (<i>Version 02.05.00.01</i>).....	6-16
NCR 7401-26xx/46xx WinXPe Operating System Recovery Software (<i>Version 02.05.00.01</i>)	6-18
NCR 7401-/22xx/25xx/26xx/32xx/35xx NT Operating System Recovery Software (<i>Version 02.05.00.02</i>)	6-20

NCR 7401-21xx/31xx NT Operating System Recovery Software (<i>Version 01.04.01.00</i>)	6-22
NCR 7401-4xxx NT Operating System Recovery Software (<i>Version 02.05.00.02</i>).....	6-24
NCR 7401-22xx/25xx/32xx/35xx Win98 Operating System Recovery Software (<i>Version 02.03.00.01</i>).....	6-26
NCR 7401-21xx/31xx Win98 Operating System Recovery Software (<i>Version 01.01.00.00</i>)	6-28
OS Recovery from a Larger Disk Image	6-29

Chapter 7: BIOS Updating Procedures

Introduction	7-1
Prerequisites	7-1
Updating Procedures	7-2
BIOS Crisis Recovery	7-5
Recovery Procedures.....	7-6
Cable/Connector Pin-Out Information	7-8

Chapter 8: NCR 7401 7890/7892 Scanner Differences

Introduction	8-1
Starting the 7401 Scanner Motor and Laser	8-2
Programming the 7401 Scanner Using Programming Tags	8-4
Programming the 7401 Scanner Through the RS-232 Interface	8-5
7401 Scanner Default Settings.....	8-6

Appendix A: Cables

7401 Cables	A-1
-------------------	-----

Appendix B: Feature Kits

7401 Kits..... B-1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/7401 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/7401%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)