


NCR RealPOS 70 (7402)

Release 1.4

User Guide

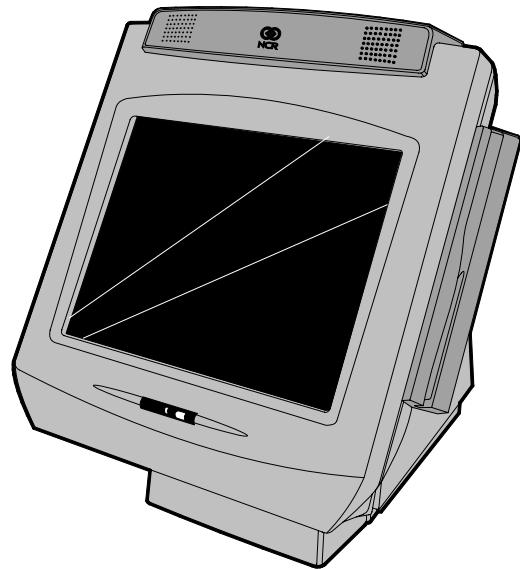

B005-0000-1463
Issue N

Table of Contents

Chapter 1: Product Overview

Introduction	1-1
Optional Configurations	1-2
Model and Serial Numbers.....	1-3
Terminal Dimensions and Weights	1-5
Hinged LCD.....	1-5
Integrated Hardware	1-6
Operating Systems	1-7
Key Service Advantages	1-8
Removable Motherboard Sled	1-8
Removable Power Supply	1-8
Removable Hard Disk.....	1-8
Hardware Module Descriptions	1-9
Motherboard	1-9
Processor/Chip Set	1-9
System Memory.....	1-9
852GME Graphics & Memory Controller Hub	1-10
North Bridge Features	1-10
South Bridge Features	1-11
Video Memory.....	1-12
BIOS Memory	1-12
Video	1-12
USB Port Functionality	1-14
Ethernet LAN.....	1-15
Integrated Audio.....	1-15
Fan Connectors.....	1-16

Cash Drawer Support.....	1-17
MSR	1-17
Retail Daughter Card	1-18
PCI Boards.....	1-18
PCI Riser Board	1-18
PCMCIA Adapter Board.....	1-18
Dual RS-232 Adapter	1-18
Storage Media	1-19
HARD DISK DRIVE.....	1-19
Compact Flash	1-19
Operator Display	1-20
LCD Panel	1-20
LVDS	1-20
Inverter	1-21
Touch Screen.....	1-21
Adjusting the Display Angle.....	1-22
Integrated Customer Display	1-23
2 x 20 VFD	1-23
All Points Addressable Display	1-23
Motion Sensor	1-24
Power Indicator	1-24
Speakers	1-24
Biometrics Module	1-25
Power Management.....	1-26
G3 Mechanical Off.....	1-26
G2/S5 Soft Off.....	1-26
G1 Sleeping.....	1-27
G0 Working	1-27
Wake on LAN	1-28

Compatibility	1-29
LAN Communications.....	1-29
Application Programmability.....	1-29
Operating System Information.....	1-29
System Configuration Diagram	1-30

Chapter 2: Installing the Terminal

Introduction	2-1
Installation Summary.....	2-1
Installation Restrictions.....	2-2
Peripheral Cable Routing.....	2-3
Installing Peripherals.....	2-4
Accessing the Cable Connectors.....	2-5
Cable Connector Identification.....	2-6
PS/2 Keyboard/Mouse Cable Connections	2-7
Mouse Installation Restriction.....	2-7
Opening the Display Cabinet	2-8
12.1" and 15" Models.....	2-9
17" Models	2-10
Powering Up the Terminal	2-11
Terminal On/Off Switch	2-11
Calibrating the Touch Screen	2-13
Out-of-Box Failures.....	2-14

Chapter 3: Touch Screen Calibration – Windows (MT 7.12)

General Guidelines.....	3-1
Considerations When Replacing or Re-Imaging the Hard Drive.....	3-2
Installing the Touch Software	3-2

Hiding the Cursor	3-4
Other Serial Devices Do Not Function	3-7
Touch Calibration Procedures.....	3-12
Calibration Flow Chart.....	3-13
3-Point Calibration	3-14
Linearization	3-18
Other Controls.....	3-23
Main Tab	3-23
Controller ID	3-23
Controller Type	3-23
Firmware Version	3-23
Touch Settings Tab	3-24
Touch Modes	3-25
Right-Click Tool	3-26
Touch Sound.....	3-26
Double-Click Speed	3-26
Double-Click Area.....	3-27
Edge Adjustment Tab	3-28
Tools Tab.....	3-30
Component Versions	3-31
Draw Test	3-32
Restore Factory Settings.....	3-33
Reset Controller.....	3-33
Advanced Touch Screen Options	3-33
 <i>Chapter 4: Touch Screen Calibration – Windows (MT 5.64, SR4)</i>	
General Guidelines	4-1
Considerations When Replacing or Re-Imaging the Hard Drive.....	4-1

Touch Calibration Procedures.....	4-2
Installing the Touch Driver	4-2
Calibration Flow Chart.....	4-8
2-Point Calibration Procedure	4-9
Cursor Stabilization Procedure	4-13
25-Point Linearization Procedure.....	4-16
Restore Defaults Procedure.....	4-20
Changing From 4-Point to 2-Point Calibration.....	4-22
Touch Performance.....	4-25

Chapter 5: Touch Screen Calibration – Windows (MT 5.64, SR6)

General Guidelines	5-1
Considerations When Replacing or Re-Imaging the Hard Drive.....	5-1
Installing the Touch Driver	5-2
Touch Calibration Procedures.....	5-7
Calibration Flow Chart.....	5-8
2-Point Calibration Procedure	5-9
Cursor Stabilization Procedure	5-12
25-Point Linearization Procedure.....	5-15
Restore Defaults Procedure.....	5-19
Touch Performance	5-21

Chapter 6: Touch Screen Calibration – DOS

Calibration Flow Chart.....	6-1
2-Point Calibration.....	6-3
Noise Check.....	6-3

Chapter 7: Installing a Secondary (Dual) Display

Configuring the Graphics Controller	7-1
Single Display Mode Setup.....	7-3
Clone Dual Display Mode Setup (DVI and VGA).....	7-4
Extended Desktop Dual Display Mode Setup (DVI and VGA)	7-5
Extended Desktop Dual Display Mode Setup (DVI and DVI)	7-6
Extended Desktop Dual Display Mode Setup (VGA and VGA)	7-7
Intel 82852/82855 GM/GME Graphics Controller Hot Keys....	7-8

Chapter 8: Installing Peripheral Options

Printers	8-1
NCR 7167 Printer.....	8-1
NCR 7197 Printer.....	8-2
Installing the Transaction Printer	8-3
Remote Displays	8-5
5964 12.1-Inch Touch Screen	8-5
Features	8-6
Installing an NCR 5964 12.1-inch Touch LCD	8-8
5964 15-Inch Touch Screen	8-11
Installing an NCR 5964 15-inch Touch LCD	8-12
5966 15-Inch Touch Screen	8-15
Installing an NCR 5966 Monitor	8-16
5942 12.1-INCH Color LCD.....	8-19
NCR 5942 12.1-Inch LCD Monitor Cable Connections	8-20
NCR 5942 15-Inch LCD Monitor Cable Connections	8-21
NCR 5954 15-Inch DynaKey	8-22

Installing an NCR 5954 USB DynaKey	8-23
7452-K419 15-Inch Color CRT	8-25
NCR 5932 Keyboards	8-26
109-Key USB Keyboard	8-26
Features	8-27
115-Key PS/2 Big Ticket Keyboard.....	8-29
68-Key PS/2 POS Keyboard.....	8-29
Features	8-30
Remote Customer Displays	8-33
NCR 5972 2x20 Customer Display	8-33
Tall Post Models	8-33
Desktop Models.....	8-34
Features	8-34
NCR 5973 2x20 International VFD Customer Display	8-35
Features	8-35
Installing an NCR 5972 Remote Customer Display	8-36
Installing a Cash Drawer.....	8-39
Installing a Second Cash Drawer.....	8-40

Chapter 9: Installing the Terminal in an Integrated Configuration

Introduction	9-1
Exploded Views.....	9-2
Kit Contents.....	9-5
Installation Procedures.....	9-7
Installing the Keyboard	9-8
Installing the Customer Display.....	9-10
Installing the Transaction Printer.....	9-13
Installing the 7402.....	9-15

Chapter 10: 2x20 Customer Display Interface

Introduction	10-1
General Specifications	10-1
Serial Communication Interface	10-1
Command Codes.....	10-2
User Defined Character Definition (08h, CODE, Byte1...Byte5).....	10-2
Character Table Select (09h, TABLE CODE)	10-3
Clear Display (12h).....	10-3
Luminance Control (11h, LUMINANCE).....	10-3
Cursor Position (10h, POSITION)	10-4
Reset (13h)	10-4
Character Tables and Codes	10-4
CP437	10-5
CP858	10-6
CP866	10-7
CP932	10-8

Chapter 11: APA Customer Display Interface

Introduction	11-1
General Specifications	11-1
Serial Communication Interface	11-1
Architecture	11-2
Display Data RAM	11-2
Display Page Map	11-3
Monochrome Display Mode	11-4
Grayscale Display Mode	11-5
Display Control Bits	11-6
Command Codes (00h - 0Fh).....	11-7

Reset (00h)	11-7
Set Luminance (01h, LUMINANCE)	11-7
Set Y Address Register (02h, YAR)	11-7
Set X Address Register (03h, XAR)	11-8
Set Display Control Bits (04h, DCB)	11-8
Write Data Byte (05H, DATA)	11-8
Write Data Page (06h, BYTE1, BUTE2,... BYTE1024).....	11-8
Write Data w/Shift (07h, DIRECTION, ROW, BYTE1, BYTE2,... BYTE32).....	11-9
Data Write Mode (08h, MODE).....	11-10
Character Write Mode (09h, MODE)	11-10
Invert Screen (0Ah)	11-11
Reserved (0Bh - 0Fh)	11-11
Character Codes (10h - FFh)	11-11
5X7 Character Table	11-12
10x14 Character Table.....	11-13
Command Execution Times	11-14

Chapter 12: Cash Drawer Interface

Introduction	12-1
Logic Description	12-1
Component Architecture	12-4
Code Changes	12-4
Hardware/Firmware Interfaces.....	12-6
Dependencies/Assumptions/Constraints	12-10
Hardware Dependencies	12-10
Software Dependencies	12-10
Sample Code	12-10
<i>CPP Source File:</i> DarlingtonCDSample.cpp.....	12-10

<i>Header file:</i> DarlingtonCDSample.h.....	12-26
---	-------

Chapter 13: Wedge to USB MSR Software Migration

Overview	13-1
Software Requirements	13-2
Potential Operational Differences.....	13-4
Deployment Considerations.....	13-5
Local Update	13-5
Remote Deployment	13-5

Chapter 14: Maintenance

Cabinet and Touch Screen Cleaning Procedures	14-1
Cleaners/Solvents to Use	14-1
Cleaners/Solvents to NOT Use	14-2
Cooling Vent Cleaning	14-3
MSR Cleaning Procedures	14-4

Chapter 15: Operating System Recovery

Introduction	15-1
Prerequisites.....	15-1
OS Recovery Procedures.....	15-1

Chapter 16: BIOS Updating Procedures

Introduction	16-1
Prerequisites.....	16-1
Creating the Bootable Media	16-2
Creating a Bootable CD	16-2
Creating a Bootable USB Memory Drive	16-2
BIOS Updating Procedures.....	16-3

Appendix A: Cables

Printer Cables	A-1
Scanner Cables.....	A-3
7872 or 7875 Scanner/Scale (RS-232)	A-3
7892 Scanner (Powered RS-232)	A-3
7882 Scanner (Powered RS-232)	A-3
7837 Scanner (Powered RS-232)	A-4
7837 Scanner (RS-232, External Power).....	A-4
Display Cables.....	A-5
VGA Display, Mono.....	A-5
VGA Display, Color	A-5
CRT AC Power Extension	A-5
5972 VFD Customer Display (Powered RS-232)	A-6
DVI to DVI.....	A-6
PS/2 - RS-232 & Power	A-6
LCD Power Cable	A-7
Cash Drawer Cables	A-8
Dual Cash Drawer, Y-Cable.....	A-8
Cash Drawer, Extension Cable	A-8
Communications Cable	A-8
Ethernet, 10/100BaseT	A-8
Keyboard Cables	A-9
PS/2 Keyboard Extension	A-9
Signature Capture/Electronic Payment Terminal Cable	A-9
5945/5992 EPT (RS-232 w/Power).....	A-9
Power Cables (AC).....	A-10

Appendix B: Feature Kits

Appendix C: Memory Map

DOS Considerations.....	C-2
-------------------------	-----

Appendix D: IRQ Settings

Interrupts	D-1
Default Settings	D-1
Optional Settings.....	D-2

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net