


NCR RealPOS™ 20 (7443)

Release 1.1

User Guide

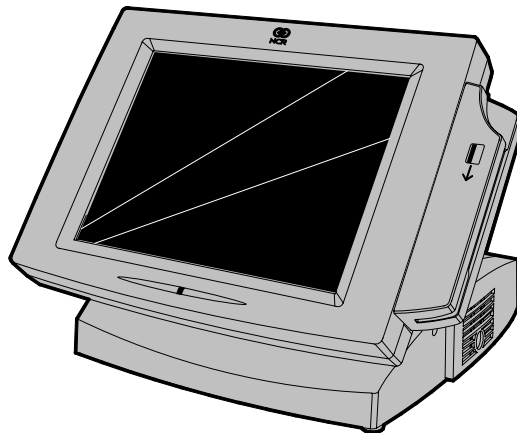

B005-0000-1547

Issue B

Table of Contents

Chapter 1: Product Overview

Model Numbers	1-3
Operator Controls	1-4
Serial Number/Model Number Label	1-5
Features	1-6
Main Board	1-6
I/O Connector Board	1-6
Storage.....	1-6
Display	1-6
Options.....	1-7
Remote Peripherals	1-7
Operating Systems	1-7
Power Management.....	1-8
Definitions of the states involved.....	1-9
Compact Flash.....	1-13
Customer Displays.....	1-14
7443-K450 VFD	1-14
5972-1xxx VFD	1-16
5972-2xxx LCD	1-17
Printers	1-18
7167 Printer.....	1-18
7197 Printer.....	1-19
Software Drivers	1-19

Chapter 2: Hardware Installation

Installation Restrictions.....	2-1
--------------------------------	-----

Installing Peripherals.....	2-2
Peripheral Cable Routing	2-2
Accessing the Cable Connectors	2-3
Removing the Covers.....	2-3
Removing the Back Cover	2-5
Replacing the Back Cover.....	2-8
Keyboard and Mouse Connections	2-10
Installing a Transaction Printer.....	2-11
RS-232 Printer Connections.....	2-11
USB Printer Connections	2-12
Installing an Integrated Customer Display	2-13
Installing the Cabinet-Mounted 2x20 Customer Display (7443-K453)	2-14
Installing the Post-Mounted 2x20 Customer Display (7443- K451).....	2-17
Dip Switch Settings	2-20
Installing a Remote Customer Display	2-21
NCR 7443-K451 Remote Customer Display	2-21
Dip Switch Settings	2-26
NCR 5972 Customer Display	2-27
5972 Customer Display	2-27
Installing the Display Mount.....	2-28
Installing a Memory Module.....	2-29
Removing the Memory Module	2-31

Chapter 3: Setup

Entering Setup	3-1
BIOS Default Values	3-1
Standard CMOS Features	3-1

Advanced Features.....	3-2
Advanced Chipset Features	3-3
Integrated Peripherals	3-4
Power Management Setup	3-6
PnP/PCI Configurations	3-8
Frequency/Voltage Control.....	3-8

Chapter 4: Operating System Recovery

Introduction	4-1
Prerequisites.....	4-1
OS Recovery.....	4-2
Connecting the External USB CD-ROM Drive	4-2
Recovery Procedures.....	4-3
Completing the OS Installation.....	4-4
Windows XP Pro/Windows XPe	4-4
DOS.....	4-4
Gold Disk Contents.....	4-5
NCR 7443-xxxx (WinXP Pro) OS Recovery Software (LPIN: D370-0672-0100)	4-5
NCR 7443-xxxx (WinXPE) OS Recovery Software (LPIN: D370-0671-0100).....	4-1
OS Customization	4-2
NCR 7443-xxxx (MS-DOS) OS Recovery Software (LPIN: D370-0624-0100).....	4-4

Chapter 5: BIOS Updating Procedures

Introduction	5-1
Prerequisites.....	5-1
Creating the Bootable Media	5-2

Creating a Bootable Flex Diskette	5-2
Creating a Bootable CD	5-2
BIOS Update	5-3
Connecting an External USB CD-ROM Drive	5-3
Updating Procedures	5-3

Chapter 6: 2x20 Customer Display

Features	6-5
Software Drivers	6-5
General Specifications	6-6
Interface	6-7
Specifications.....	6-7
Connector Pinouts	6-8
RS232C Link to PC/HOST Connector	6-8
Display Panel Connector.....	6-8
Dip Switch and Software Setting.....	6-9
Command Type Selection	6-9
Baud Rate Selection.....	6-9
Parity Check Selection	6-9
Demo Mode Selection.....	6-9
International Character Set	6-10
Command Control.....	6-11
Command List Table	6-12
Commands.....	6-15
RealPOS 20 Standard Mode Command List.....	6-15
EPSON ESC/POS Command List-1.....	6-17
EPSON ESC/POS Command List-2.....	6-19
Set International Font for ESC/POS (Table 7-11)	6-20
Select Code for ESC/POS (Table 7-12).....	6-20

Character Sets	6-21
International Character Sets.....	6-21
USA, Standard Character Sets (20H – 7EH)	6-22
Page 0 (PC437: USA, Standard Europe) (80H – FFH)	6-22
Page 1 (Katakana) (80H – FFH)	6-23
Page 2 (PC858: Multilingual+ Euro Symbol) (80H – FFH).....	6-23
Page 3 (PC860: Portuguese) (80H – FFH).....	6-24
Page 6 (Slavonic) (80H – FFH)	6-24
Page 7 (Russia) (80H – FFH)	6-25
Command details.....	6-26
Overwrite Mode	6-26
Vertical Scroll Mode.....	6-26
Horizontal Scroll Mode	6-26
Set the String Display Mode, and Write String to Display	6-27
Upper Line Message Scroll Continuously	6-27
Move Cursor Left.....	6-27
Move Cursor Right.....	6-28
Move Cursor Up.....	6-28
Move cursor down	6-29
Vertical scroll.....	6-29
Move Cursor to Home Position.....	6-29
Move Cursor to Left-Most Position	6-29
Move Cursor to Right-Most Position.....	6-29
Move Cursor to Bottom Position.....	6-29
Move Cursor to Specified Position	6-30
Initialize Display.....	6-30
Reset the Window	6-30
Clear Display Screen, and Clear String Mode.....	6-30
Clear current line, and cancel string mode	6-30

Brightness adjustment	6-30
Set cursor ON or OFF.....	6-30
Control Code Set	6-31
Code Example.....	6-32

Chapter 7: Cash Drawer Interface

Software Drivers	7-1
Cash Drawer Pin Assignment.....	7-1
Cash Drawer Controller register description.....	7-2
Cash Drawer Control Register.....	7-2
Cash Drawer Status Register	7-3
Cash Drawer control command example.....	7-4
Code Example.....	7-5

Appendix A: Cables

Printer Cables	A-1
RS-232 (9-Pin to 9-Pin)	A-1
RS-232 (9-Pin to 25-Pin)	A-1
Standard USB	A-2
Scanner Cables.....	A-3
7872 or 7875 Scanner/Scale (RS-232)	A-3
7892 Scanner (Powered RS-232)	A-3
7882 Scanner (Powered RS-232)	A-3
7837 Scanner (Powered RS-232)	A-4
7837 Scanner (RS-232, External Power)	A-4
Display Cables.....	A-5
5972 VFD Customer Display (Powered RS-232)	A-5
Communications Cable	A-5
Ethernet, 10/100BaseT	A-5

Keyboard Cables	A-6
PS/2 Keyboard Extension	A-6
Signature Capture/Electronic Payment Terminal Cable	A-6
5945/5992 EPT (RS-232 w/Power).....	A-6
Power Cables	A-7

Appendix B: **Memory Maps**

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*