

# **NCR 7448 Workstation**

Release 1.4

# **Hardware User's Guide**



B005-0000-1202  
Issue F

---

# Table of Contents

## Chapter 1: Product Overview

Introduction .....	1-1
Workstation Configurations .....	1-2
7448-10xx: 7448 Workstation with 2 x 20 Operator Display .....	1-2
7448-20xx/21xx/22xx: 7448 Workstation with Mono/ Color LCD Operator Display .....	1-2
7448-30xx: 7448 Workstation with 9" CRT Operator Display .....	1-3
Hardware Modules .....	1-4
Processor Board .....	1-4
Personality Board .....	1-4
Personality Board for TFT LCD .....	1-4
PCMCIA Expansion Board .....	1-4
Compact Flash I/F Board .....	1-5
NCR 1 line Numeric Customer Display .....	1-14
NCR 4 line Alphanumeric Customer Display .....	1-15
NCR 2x20 Remote Customer Display .....	1-16
NCR International VFD Customer Display .....	1-17
Printer Options .....	1-18
7140 Printer .....	1-18
7158 Printer .....	1-18
7161 Printer .....	1-19
7194 Printer .....	1-19
7196 Printer .....	1-20
7167 Printer .....	1-20
7197 Printer .....	1-21
System Configuration Diagram .....	1-22

---

## Chapter 2: Workstation Hardware Installation

Installation Restrictions.....	2-1
Out-of-Box Hardware Installation.....	2-2
How to Install Cash Drawer .....	2-3
Keyboard.....	2-4
How to Install Keyboard Insert: 176-Key Micromotion Keyboard .....	2-4
How to Install Keycheck: 80-Key Conventional Keyboard .....	2-5
How to Setup Oversized key of the 80-key Keyboard .....	2-6
LCD Display .....	2-9
How to set brightness control of the TFT type LCD display ...	2-9

## Chapter 3: Installing Optional Hardware Features

Introduction .....	3-1
How to Install the 1 line Numeric / 4 line Alphanumeric Customer Display .....	3-2
Integrated 1 line Numeric/ 4 line Alphanumeric Customer Display (Low Profile/ Telescope) .....	3-2
How to Install the International VFD Customer Display .....	3-4
Integrated Mount International VFD Customer Display (Low Profile/ Telescope).....	3-4
How to Install the 5972 2x20 Remote Customer Display .....	3-7
How to Install the MSR .....	3-9
How to Install the Server Lock.....	3-10
How to Install the PCMCIA Expansion Board .....	3-12
How to Install the Compact Flash I/F Board.....	3-13
How to Install the Optional Security Cover for the Compact Flash Card Slot .....	3-18
How to Install the Compact Flash Card (Type 1 or Type 2) .....	3-19
How to Install the Hard Disk.....	3-20

---

**Chapter 4: Setup**

Introduction .....	4-1
How to Use Installation Main Menu .....	4-2
Turn on the NCR 7448 Workstation .....	4-2
POST (Power On Self Test) Function.....	4-2
Installation Main Menu .....	4-2
Keys Used in the System Setup Program.....	4-5
EXIT .....	4-7
How to Power Off the Workstation.....	4-7
How to Reboot the Workstation.....	4-8
How to Go to Desktop .....	4-9
SYSTEM SETTING.....	4-11
How to Make System Setting Report.....	4-11
How to Set Peripheral Parameters for RS-232 ports.....	4-14
How to Set Peripheral Parameters for USB ports (Microsoft Windows 98 Only).....	4-16
How to Set Peripheral Parameters for MSR .....	4-18
How to Set Date/ Time.....	4-19
How to Set Terminal Name .....	4-23
How to Set Domain.....	4-24
How to Set IP Address.....	4-26
How to Set Name Server .....	4-28
How to Make WindowsCE Configuration .....	4-30
DIAGNOSTICS.....	4-31
How to Perform Keyboard Test .....	4-31
How to Perform Keylock Test .....	4-32
How to Perform Tone Test.....	4-34
How to Perform Network Ping-Pong Test .....	4-36
How to Perform Display Test.....	4-38
How to Perform Printer Test .....	4-40

---

How to Perform Scanner Test.....	4-43
How to Perform Scale Test.....	4-44
How to Perform Coin Dispenser Test.....	4-46
How to Perform Cash Drawer Test .....	4-48
How to Perform MSR Test .....	4-50
How to Perform Server Lock Test.....	4-52
How to Interpret Diagnostics Error Messages .....	4-54
INSTALL APPLICATION .....	4-55
How to Install Application from Storage Card .....	4-55
How to Install Application from LAN .....	4-56
How to Install Application Upgrades .....	4-60
BACKUP/ RESTORE .....	4-60
How to Backup .....	4-60
How to RESTORE.....	4-62
OS MAINTENANCE.....	4-64
How to Upgrade Operating System from Storage Card.....	4-64
How to Upgrade Operating System from LAN.....	4-66
Printer Test Errors.....	4-70
Software Installation Errors.....	4-72
Server PC Setup for Application Install & OS Maintenance.....	4-74
Install “NCR PXE Staging and Crisis Recovery Server Services” .....	4-75
Create the PXE folder.....	4-76
TFTP Setting .....	4-77
Changing Event Viewer Setting .....	4-78
Copy the application files to the PXE folder.....	4-79

### **Chapter 5: Crisis Recovery**

How to Recover Operating System .....	5-1
Crisis Recovery Operation Overview .....	5-1

---

System Requirements.....	5-2
Install “NCR PXE Staging and Crisis Recovery Server Services” (Version 1.1) .....	5-4
Install “NCR PXE Staging and Crisis Recovery Server Services” (Version 1.0) .....	5-9
Parameter Set Up .....	5-11
Set up a Server PC(Windows NT).....	5-15
Set up a Server PC(Windows 2000) .....	5-21
Copy the Recovery files to the PXE folder .....	5-34
NCR 7448 Network Boot Setting with LCD Operator Display .....	5-35
NCR 7448 Platform Software Installation .....	5-38
NCR 7448 Network Boot Setting with 2x20 Operator Display .....	5-40
NCR 7448 Platform Software Installation .....	5-42

### Appendix A: BIOS

POST Diagnostics.....	A-1
Power On Self Test (POST) Errors .....	A-1
BIOS Setup .....	A-1
NCR 7448 Network Boot Setting.....	A-2
Main Menu .....	A-3
Advanced Menu .....	A-5
Security Menu.....	A-8
Power Menu .....	A-8
Boot Menu .....	A-9
Exit Menu .....	A-9
BIOS Update .....	A-10
BIOS Update Operation Overview .....	A-10
System Requirements.....	A-10

---

Install “NCR PXE Staging and Crisis Recovery Server Services” .....	A-12
When downloading the BIOS Update .....	A-12
When finishing BIOS Update .....	A-13
NCR 7448 Network Boot Setting .....	A-14
BIOS Update Operation with 2x20 Operator Display .....	A-16
Normal BIOS Update Sequence .....	A-18
Alternative BIOS Update Sequence .....	A-22
Keys Used in the Crisis Recovery, BIOS Setup, and BIOS Update .....	A-25
Hardware Resources .....	A-27

Appendix B

Set up Gold Disk: Pre-loaded MS Windows 98 .....	B-1
Installing NCR 7448 Platform Software for Windows 98 .....	B-5
System Requirements .....	B-5
Installation Pre-procedure .....	B-5
Installation Procedure .....	B-6
Un-installation Procedure .....	B-10
Upgrade Installation Procedure .....	B-11

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/7448 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/7448%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)