


NCR 7452 Workstation

Release 4.0

Hardware User's Guide

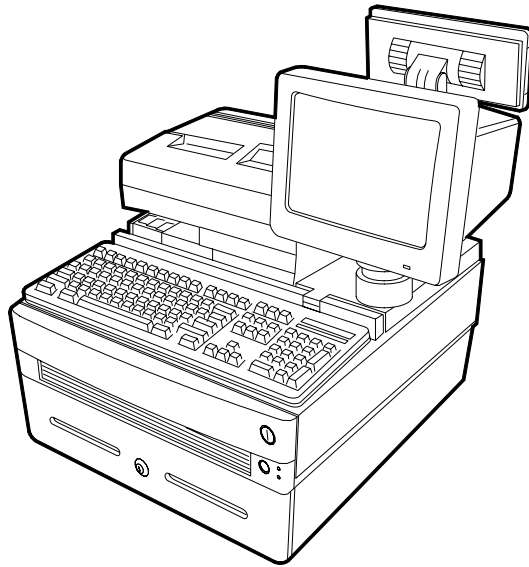

BD20-1373-C
Issue Q

Table of Contents

Chapter 1: Product Overview

Introduction	1-1
Workstation Configurations	1-3
Integrated 7452.....	1-3
Semi-Modular 7452	1-5
Modular 7452	1-6
Hardware Modules.....	1-7
Processor Board	1-7
Graphics (Series 4000).....	1-10
Graphics (other than Series 4000)	1-11
Advanced Power Management.....	1-12
NCR 5952 Wedge DynaKey Module.....	1-13
NCR 5953 12.1" DynaKey	1-14
NCR 5962 Wedge Touch Screen	1-16
NCR 5964 12.1-inch Touch LCD	1-17
NCR 5932 Wedge Keyboard.....	1-18
Features.....	1-19
115-key Big-Ticket Keyboard.....	1-19
68-key POS Keyboards	1-19
Keylock	1-20
Speaker.....	1-20
System Status Indicator LED	1-21
MSR	1-21
Dual-Port USB.....	1-21
External Decoded Scanner Connector	1-22
Special <i>PC Setup</i> Keypad Layout for POS Keyboard	1-22
NCR 5932 USB Keyboard.....	1-23

Features.....	1-23
Keylock	1-24
Speaker.....	1-24
MSR	1-24
Keyboard Status LEDs	1-25
NCR 5972 2x20 Customer Display	1-26
Features.....	1-26
NCR 5973 International VFD Customer Display	1-30
Features.....	1-30
Printer Options.....	1-33
NCR 2208 Printer.....	1-33
NCR 7141 Printer.....	1-34
NCR 7152 Printer.....	1-34
NCR 7156 Printer.....	1-35
NCR 7158 Printer.....	1-35
NCR 7162 Printer.....	1-36
NCR 7193 Printer.....	1-36
NCR 7194 Printer.....	1-37
System Configuration Diagram	1-38

Chapter 2: Hardware Installation

Installation Restrictions.....	2-1
AC Input Selection Switch.....	2-2
Out-of-Box Hardware Installation.....	2-3
Integrated Workstation.....	2-3
Semi-Modular Workstation	2-6
Modular Workstation	2-8
NCR 5952 DynaKey Workstation Configuration.	2-9
NCR 5953 DynaKey Workstation Configuration	2-12
NCR 5962 Touch Screen Workstation Configuration.....	2-15

Chapter 3: Installing Optional Hardware Features

Introduction	3-1
Installation Restrictions	3-1
Installing an NCR 5952 DynaKey	3-2
Models.....	3-2
<u>NCR 5952 DynaKey Integrated Mount 5952-</u> <u>F021</u>	3-3
<u>NCR 5952 DynaKey Remote Table-Mount</u> <u>5952-F022</u>	3-8
Installing an NCR 5953 DynaKey	3-11
Models.....	3-12
<u>NCR 5953 DynaKey Integrated Mount 5953-</u> <u>F021, 7452-K300</u>	3-14
Installation Instructions.....	3-15
<u>5953 DynaKey Remote Table-Top Mount 5953-</u> <u>F022</u>	3-18
Adding a 2x20 Customer Display.....	3-20
Connecting a NCR 5953 DynaKey to a 7452- 2xxx, 3xxx	3-22
Installing a PCI LCD Board	3-22
Connecting the NCR 5953 DynaKey to a 7452- 4xxx.....	3-25
Installing an NCR 5962 Touch Screen.....	3-27
<u>5962 Touch Screen Remote Mount 5962-F020</u>	3-28
<u>5962 Touch Screen Integrated Mount 5962-F021</u>	3-33
Installing an NCR 5964 12.1-inch Touch LCD	3-36
Connecting to the Host	3-37
Installing a 2x20 Customer Display.....	3-38
NCR 5972-1000 (VFD).....	3-38
NCR 5972-2000 (LCD)	3-39
<u>5972 2x20 Customer Display High-Post Remote</u> <u>Mount 5972-F031</u>	3-40

<u>5972 2x20 Customer Display Integrated Mount</u> <u>5972-F032</u>	3-42
5973 International 2x20 Customer Display Table-Top Mount <u>5973-F130</u>	3-44
<u>5973 International 2x20 Customer Display 16"</u> <u>High-Post Mount</u> <u>5973-F131</u>	3-46
<u>5973 International 2x20 Customer Display</u> <u>Integrated Mount</u> <u>5973-F132</u>	3-48
Installing Printers.....	3-51
Installing a Hand-Held Scanner.....	3-56
Cable Routing from the Workstation	3-57
Installing Win95 Intel EtherExpress Pro Adapter Driver.....	3-58
Installing a Win2000 AMD Ethernet Driver.....	3-60

Chapter 4: Setup

Introduction	4-1
Legacy USB Option	4-1
DynaKey Special Keypad Mode.....	4-2
Enabling the DynaKey Special Keypad Mode .	4-2
Wedge (PS/2) DynaKey Special Mode	4-3
USB DynaKey Special Mode	4-4
DynaKey Normal Keypad Mode	4-5
Wedge (PS/2) DynaKey Normal Mode.....	4-5
USB DynaKey Normal Mode	4-6
5932 USB Keyboard.....	4-7
Running Setup	4-8
Entering Setup	4-8
Setting the Date and Time	4-8
Setting Passwords.....	4-8
Changing your Video Resolution (486DX4 and 586 Processor Boards only)	4-9

Configuring a Hard Drive	4-9
Configuring a Flex Drive.....	4-10
Setting Memory Cache.....	4-10
Setting Memory Shadow	4-11
Setting Boot Options	4-11
Allocating Interrupts (7452-4xxx).....	4-11
Restoring Factory Settings.....	4-12
BIOS Default CMOS Values (586 Processor) - Version 1.06.00.....	4-13
Main Values.....	4-13
Advanced Values.....	4-15
Security Values	4-17
Power Values	4-17
Exit Values.....	4-19
BIOS Default CMOS Values (686) - Version 5.1.n ...	4-20
Main Values.....	4-20
Advanced Values.....	4-22
Security Values	4-23
Power Values	4-24
Exit Values.....	4-26
BIOS Default CMOS Values (7452-35xx) - Version 5.2.8	4-27
Main Values.....	4-27
Advanced Values.....	4-29
Security Values	4-30
Power Values	4-30
Boot Values.....	4-32
Exit Values.....	4-32
BIOS Default CMOS Values (7452-4xxx) - Version 2.2.1.x	4-34
Main Values.....	4-34

Advanced Values.....	4-35
Security Values	4-40
Power Values	4-40
Boot Values.....	4-40
Exit Values.....	4-40
I/O Addresses (486DX4, 586, 2xxx 686, 3xxx 686 and 35xx 686)	4-42
I/O Addresses (7452-4xxx).....	4-44
Interrupt Levels (486DX4, 586, 2xxx 686, 3xxx 686, and 35xx 686)	4-47
Interrupt Levels (7452-4xxx).....	4-48
Memory Map (486DX4, 586, 2xxx 686, 3xxx 686, and 35xx 686)	4-50
Memory Map (7452-4xxx)	4-51
DMA Channels (486DX4, 586, 2xxx 686, 3xxx 686, and 35xx 686)	4-53
DMA Channels (7452-4xxx).....	4-54
Clearing a Password.....	4-55
Setup Tips.....	4-56

Chapter 5: Operating System Recovery

Introduction	5-1
Prerequisites.....	5-1
Updating Procedures	5-2
Completing the OS Installation (WinNT and Win2000).....	5-4
Completing the OS Installation (Win98).....	5-5
Completing the OS Installation (DOS).....	5-6
Gold Disk Contents.....	5-7
NCR 7452/7453-4000 Win95 OS Recovery Software (LPIN: D370-0472-0100).....	5-7

NCR 7452/7453-4000 Win98 OS Recovery Software (LPIN: D370-0473-0100).....	5-9
NCR 7452/7453-4000 NT Operating System Recovery Software (LPIN: D370-0474-0100)	5-12
NCR 7452/7453-4000 Win2000 Operating System Recovery Software (LPIN: D370-0518- 0100).....	5-15

Chapter 6: BIOS Updating Procedures

Introduction	6-1
Flexible Diskette Updating Procedures (7452- 10xx/20xx/30xx/35xx).....	6-2
Updating the PC BIOS.....	6-2
Updating the Memory Dump ROM.....	6-3
Updating the LCD BIOS on the ISA Board.....	6-4
Updating the LAN Boot ROM.....	6-5
CD-ROM Updating Procedure (7452-40xx).....	6-6
Prerequisites	6-6
Updating Procedures	6-7
Creating 7452-40xx Diskettes from CD-ROM ..	6-9
BIOS Crisis Recovery	6-10
Recovery Procedures.....	6-11
Cable/Connector Pin-Out Information	6-13

Chapter 7: Memory Dump

General Memory Dump Information.....	7-1
Supported Operating Systems.....	7-1
Summary of Operating Systems	7-2
Memory DUMP ROM Base Address.....	7-2
Riser Board Base Address	7-3
Updating the Memory Dump ROM Image	7-3
DOS Memory Dump Specifics	7-4

Dump Process Overview	7-4
Restrictions and Limitations	7-4
Performing the Memory Dump.....	7-8
Tunes/Tones.....	7-9
Disk Format.....	7-11
Moving the Files to Hard Disk and Reassembling	7-11
Flow Chart.....	7-13
Pharlap 286 DOS Extender	7-14
Memory Dump Assembler.....	7-16
Windows Memory Dump Specifics	7-17
Prerequisites	7-18
More Information.....	7-18
Windows 2000	7-18
Windows NT.....	7-20
Restrictions and Limitations	7-21
Troubleshooting.....	7-21

Appendix A: Retail Keyboard Key Layouts

68-Key Keyboard.....	A-1
68-Key Keyboard Special Keypad Mode	A-3
Special PC Setup Keypad Mode Activated (68-Key Keyboard)	A-4
DynaKey	A-5
DynaKey Special Keypad Mode.....	A-5
Wedge (PS/2) DynaKey Special Mode Layout.....	A-6
USB DynaKey Special Mode Layout	A-7
DynaKey Normal Keypad Mode	A-8
Wedge (PS/2) DynaKey Normal Mode Layout.....	A-8

USB DynaKey Normal Mode Layout..... A-9
5932 USB Keyboard..... A-10

*Appendix B: **Feature Kits***

Index

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/7452 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/7452%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)