

NCR 7453 Workstation

Release 3.2

Hardware Service Guide



B005-0000-1343

Issue C

Table of Contents

Chapter 1: Product Overview

Introduction.....	1-1
-------------------	-----

Chapter 2: POST Diagnostics

Power-On Self-Test (POST) Errors.....	2-1
Recoverable POST Errors.....	2-2
Error and Beep Codes.....	2-2
Terminal POST Errors	2-5
Test Points and Beep Codes	2-6

Chapter 3: Troubleshooting

Introduction.....	3-1
Getting Started	3-1
Diagnostic LEDs	3-3
Aux Power	3-4
Problem Solving.....	3-4
General Suggestions	3-5
Application Software Problems	3-6
CMOS RAM Settings Are Wrong	3-6
Workstation Clock Loses Time and Date Settings	3-6
System Reboots When Plug & Play Config.Mgr Is Loaded High.....	3-7
Power-On Light Is Not Lit.....	3-7
Workstation Requires a Power-On Password	3-7
Workstation Will Not Run POST.....	3-7
Power-On Self-Test (POST) Errors	3-9

Hard Drive Light Does Not Light	3-11
System Halts before Completing POST	3-11
Problems after a New Hardware Device Is Installed	3-11
Crisis Situation and Crisis Recovery	3-12
Service Tips	3-13
Power the Unit Down.....	3-13
Powering Up After Replacing a Board	3-13
Error and Information Messages	3-13
Add-on Boards	3-14
Lithium Battery	3-14
Memory	3-14
Wake-On LAN not Working (7453-4xxx)	3-15
Monitor Problems.....	3-16

Chapter 4: Hardware Service

Introduction.....	4-1
Safety Requirements	4-1
Fuse Replacement.....	4-1
Power Supply Cord Used as Disconnect Means	4-2
Lithium Battery Warning	4-2
Disassembly Procedures.....	4-3
Cable Connector Identification	4-3
Workstation Disassembly Procedures	4-5
Removing the Cover	4-5
Removing an Adapter Board	4-6
Removing the Internal UPS Battery Assembly	4-7
Removing the Disk Drive Assembly.....	4-8
Removing the Tree Card.....	4-9

Removing the Fan.....	4-10
Removing the Power Supply	4-11
Removing the Auxiliary Power Board	4-13
Removing the Main Processor Board	4-14
Circuit Boards	4-16
Series 4000 Processor Board	4-16
DIMM Memory	4-17
Installing the DIMM Memory	4-17
686 Processor Board.....	4-18
Adding Memory	4-19
Replacing the Lithium Battery	4-20
Replacing Processors (486, 586, 2xxx and 3xxx)	4-21
Replacing Processors (7453-4xxx).....	4-23
Setting DIP Switches (486, 586, 2xxx and 3xxx)	4-27
Setting DIP Switches (7453-4xxx)	4-29
586 Processor Board.....	4-30
SW1 Block	4-30
Adding Memory	4-31
Replacing the Lithium Battery	4-33
Changing or Installing 586 Processors.....	4-34
Active Tree Card (2xxx, 3xxx, 35xx 686 and some 4xxx).....	4-36
Passive Tree Card (7453-4xxx)	4-39
Passive Tree Card (586).....	4-40
Dual Port RS-232 Board (New Style).....	4-41
Dual Port RS-232 Board (Old Style)	4-43
4-Port PCI Serial Board	4-46
Hardware Installation.....	4-46
Software Installation	4-47

Default I/O Address and Interrupt Settings ..	4-47
Ethernet Circuitry	4-49
8-Port RS-232 Board	4-50
General	4-50
Description and Location of Switches and Jumpers	4-52
Hardware Installation	4-60
Software Setup for DOS	4-61
Software Setup for Windows NT 4.0	4-62
Software Setup for Windows 95 or Windows 98	4-64
Auxiliary Power Board (without Cash Drawer Connector)	4-67
Auxiliary Power Board (with Cash Drawer Connector)	4-68
PCI LCD Board (VGA)	4-70
Setting the Panel Select Switch (SW1)	4-70
PCI LCD Board (SVGA)	4-71
Power Supply	4-72
Clearing the Password	4-74
586 Processor Board	4-74
686 Processor Board	4-75
Series 4000 Processor Board	4-76

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/7453 hardware service manual.html](https://the-checkout-tech.com/manuals/ncr/7453%20hardware%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)