

# NCR 7453 Workstation

Release 3.2

# Hardware Service Guide



B005-0000-1343

Issue C

---

# Table of Contents

## Chapter 1: Product Overview

Introduction.....	1-1
-------------------	-----

## Chapter 2: POST Diagnostics

Power-On Self-Test (POST) Errors.....	2-1
Recoverable POST Errors.....	2-2
Error and Beep Codes.....	2-2
Terminal POST Errors .....	2-5
Test Points and Beep Codes .....	2-6

## Chapter 3: Troubleshooting

Introduction.....	3-1
Getting Started .....	3-1
Diagnostic LEDs .....	3-3
Aux Power .....	3-4
Problem Solving.....	3-4
General Suggestions .....	3-5
Application Software Problems .....	3-6
CMOS RAM Settings Are Wrong .....	3-6
Workstation Clock Loses Time and Date Settings .....	3-6
System Reboots When Plug & Play Config.Mgr Is Loaded High.....	3-7
Power-On Light Is Not Lit.....	3-7
Workstation Requires a Power-On Password .....	3-7
Workstation Will Not Run POST.....	3-7
Power-On Self-Test (POST) Errors .....	3-9

Hard Drive Light Does Not Light .....	3-11
System Halts before Completing POST .....	3-11
Problems after a New Hardware Device Is Installed .....	3-11
Crisis Situation and Crisis Recovery .....	3-12
Service Tips .....	3-13
Power the Unit Down.....	3-13
Powering Up After Replacing a Board .....	3-13
Error and Information Messages .....	3-13
Add-on Boards .....	3-14
Lithium Battery .....	3-14
Memory .....	3-14
Wake-On LAN not Working (7453-4xxx) .....	3-15
Monitor Problems.....	3-16

**Chapter 4: Hardware Service**

Introduction.....	4-1
Safety Requirements .....	4-1
Fuse Replacement.....	4-1
Power Supply Cord Used as Disconnect Means .....	4-2
Lithium Battery Warning .....	4-2
Disassembly Procedures.....	4-3
Cable Connector Identification .....	4-3
Workstation Disassembly Procedures .....	4-5
Removing the Cover .....	4-5
Removing an Adapter Board .....	4-6
Removing the Internal UPS Battery Assembly .....	4-7
Removing the Disk Drive Assembly.....	4-8
Removing the Tree Card.....	4-9

---

Removing the Fan.....	4-10
Removing the Power Supply .....	4-11
Removing the Auxiliary Power Board .....	4-13
Removing the Main Processor Board .....	4-14
Circuit Boards .....	4-16
Series 4000 Processor Board .....	4-16
DIMM Memory .....	4-17
Installing the DIMM Memory .....	4-17
686 Processor Board.....	4-18
Adding Memory .....	4-19
Replacing the Lithium Battery .....	4-20
Replacing Processors (486, 586, 2xxx and 3xxx) .....	4-21
Replacing Processors (7453-4xxx).....	4-23
Setting DIP Switches (486, 586, 2xxx and 3xxx) .....	4-27
Setting DIP Switches (7453-4xxx) .....	4-29
586 Processor Board.....	4-30
SW1 Block .....	4-30
Adding Memory .....	4-31
Replacing the Lithium Battery .....	4-33
Changing or Installing 586 Processors.....	4-34
Active Tree Card (2xxx, 3xxx, 35xx 686 and some 4xxx).....	4-36
Passive Tree Card (7453-4xxx) .....	4-39
Passive Tree Card (586).....	4-40
Dual Port RS-232 Board (New Style).....	4-41
Dual Port RS-232 Board (Old Style) .....	4-43
4-Port PCI Serial Board .....	4-46
Hardware Installation.....	4-46
Software Installation .....	4-47

Default I/O Address and Interrupt Settings ..	4-47
Ethernet Circuitry .....	4-49
8-Port RS-232 Board .....	4-50
General .....	4-50
Description and Location of Switches and Jumpers .....	4-52
Hardware Installation .....	4-60
Software Setup for DOS .....	4-61
Software Setup for Windows NT 4.0 .....	4-62
Software Setup for Windows 95 or Windows 98 .....	4-64
Auxiliary Power Board (without Cash Drawer Connector) .....	4-67
Auxiliary Power Board (with Cash Drawer Connector) .....	4-68
PCI LCD Board (VGA) .....	4-70
Setting the Panel Select Switch (SW1) .....	4-70
PCI LCD Board (SVGA) .....	4-71
Power Supply .....	4-72
Clearing the Password .....	4-74
586 Processor Board .....	4-74
686 Processor Board .....	4-75
Series 4000 Processor Board .....	4-76

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*