


# NCR 7454 Retail Terminal

Release 2.2

## Hardware User's Guide

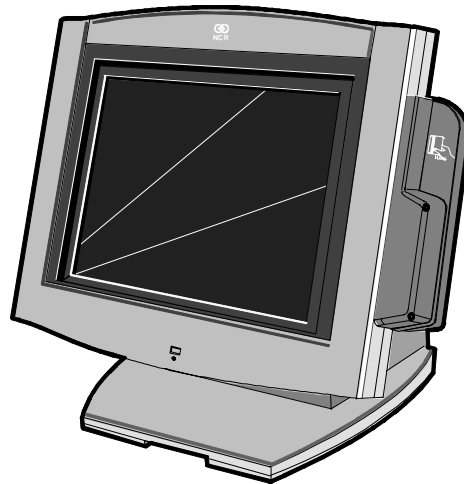

18004

B005-0000-1256  
Issue H

---

# Table of Contents

## Chapter 1: Product Overview

Introduction .....	1-1
Serial Number/Model Number Label.....	1-2
Hardware Modules .....	1-3
Base Unit .....	1-3
Hardware Options .....	1-4
Terminal Components not Supported.....	1-6
System Configuration Diagram.....	1-7
Hardware Module Descriptions.....	1-8
Processor Board.....	1-8
Processor/Chip Set .....	1-8
Video Subsystem.....	1-9
Ethernet 10/100Base-T LAN Communications .....	1-10
Wireless LAN Communications .....	1-11
Universal Serial Bus .....	1-12
Serial Ports .....	1-13
Hardware Monitor .....	1-13
PCI Expansion Header .....	1-14
IDE Header .....	1-14
Audio .....	1-14
Magnetic Stripe Reader .....	1-14
Touch Screen Controller .....	1-15
Processor Board Connectors .....	1-15
Compact Flash.....	1-16
NCR Retail Specific Hardware.....	1-16
Board BIOS .....	1-18

BIOS Upgrades.....	1-19
Operator Display.....	1-20
LCD Adapter Board.....	1-21
LCD Backlight Inverter Module .....	1-21
Touch Screen .....	1-22
NCR 7454 Integrated Customer Display .....	1-22
NCR 5973 International VFD Customer Display.....	1-23
Table Top Mount.....	1-23
16" High Post Mount.....	1-23
Features .....	1-24
Magnetic Stripe Reader.....	1-24
Printer Options .....	1-25
2214 Printer .....	1-25
7158 Printer.....	1-26
7166 Printer.....	1-26
7167 Printer.....	1-27
7194 Printer.....	1-27
7196 Printer.....	1-28
7197 Printer.....	1-28
Other Integrated Devices and Indicators .....	1-29
Hard Disk Drive.....	1-29
Reset Switch.....	1-29
Internal Speaker .....	1-29
POS Connector Board.....	1-30
Motion Sensor .....	1-30
Power/Status LED.....	1-31
Power OK LED.....	1-31
LAN Status LEDs .....	1-31
Power Supply.....	1-32
Integrated Speaker Module (Optional) .....	1-32
USB RS-232 Port Server .....	1-33

---

Additional Pentium III and Celeron Connectors.....	1-34
---	------

## **Chapter 2: Hardware Installation**

Introduction .....	2-1
Installation Summary.....	2-1
Installation Restrictions.....	2-2
Connecting the Cables.....	2-3
Accessing the Cable Connectors .....	2-3
Routing the Cables .....	2-4
Identifying the Cable Connectors .....	2-5
Installing Peripherals .....	2-6
Installing a Transaction Printer .....	2-6
RS-232 Installation .....	2-7
USB Installation.....	2-8
2214 Printer.....	2-9
Installing a Remote Customer Display.....	2-10
5974 Remote Customer Display.....	2-10
5972-1100 Remote Customer Display .....	2-12
5973 International VFD Customer Display ....	2-14
Installing a High-Post Integrated Customer Display .....	2-16
Installing an Integrated Customer Display (5972-F039).....	2-17
Installing a Cash Drawer .....	2-22
Installing a Second Cash Drawer.....	2-23
Mounting the 7454.....	2-24
Wall Mounting a Tilt Mount .....	2-25
Finalizing the Installation .....	2-26
Completing the OS Installation (Win2000) ....	2-26
Completing the OS Installation (WinXPe) ....	2-26
Completing the OS Installation (WinNT).....	2-27

Completing the OS Installation (Win98) .....	2-27
Completing the OS Installation (Win95) .....	2-28
Completing the OS Installation (DOS) .....	2-28
Setting Auto-Logon (WinNT Terminal).....	2-29
Installing a Serial Mouse.....	2-34
Guidelines for Calibrating the Touch Screen .....	2-35
Calibration Procedure.....	2-35
Summary.....	2-37
Out-of-Box Failures .....	2-37

### **Chapter 3: Setup**

Introduction .....	3-1
BIOS Versions.....	3-1
Entering Setup Without a Keyboard.....	3-1
Entering Setup Using a Keyboard.....	3-2
How to Select Menu Options .....	3-2
Restoring Factory Settings.....	3-3
BIOS Default CMOS Values (Pentium) .....	3-4
Main Values.....	3-4
Advanced Values .....	3-6
I/O Device Configuration .....	3-6
PCI Configuration.....	3-7
Interrupts (Pentium) .....	3-8
Memory Map (Pentium) .....	3-9
BIOS Default CMOS Values (Pentium III/Celeron) .....	3-10
Main Values.....	3-10
Advanced Values .....	3-11
Security Values.....	3-15
Power Values.....	3-16
Boot Values.....	3-16
Exit Values.....	3-16

---

Interrupts (Pentium III/Celeron).....	3-17
Memory Map (Pentium III/Celeron).....	3-19

### **Chapter 4: Operating System Recovery**

Introduction .....	4-1
Prerequisites .....	4-1
Updating Procedures .....	4-2
Completing the OS Installation (Win2000) .....	4-5
Completing the OS Installation (WinXPe) .....	4-5
Completing the OS Installation (WinNT).....	4-6
Completing the OS Installation (Win98) .....	4-6
Completing the OS Installation (Win95) .....	4-7
Completing the OS Installation (DOS) .....	4-7
Gold Disk Contents .....	4-8
Microsoft Operating System License Agreements.....	4-8
Operating System Restrictions .....	4-9
Standby and Hibernate Mode Restriction.....	4-9
NCR 7454-32xx Win2000 Operating System Recovery Software ( <i>Version 02.02.00.02</i> ).....	4-10
NCR 7454-3xxx WinXPe Operating System Recovery Software ( <i>Version 02.02.00.01</i> ).....	4-12
NCR 7454-22xx Win2000 Operating System Recovery Software ( <i>Version 01.01.00.00</i> ).....	4-13
NCR 7454-32xx NT Operating System Recovery Software ( <i>Version 02.02.00.01</i> ).....	4-15
NCR 7454-22xx NT Operating System Recovery Software ( <i>Version 01.04.01.00</i> ).....	4-17
NCR 7454-32xx Win98 Operating System Recovery Software ( <i>Version 02.02.00.01</i> ).....	4-19
NCR 7454-22xx Win98 Operating System Recovery Software ( <i>Version 01.01.00.00</i> ).....	4-21

NCR 7454-32xx Win95 Operating System Recovery Software ( <i>Version 02.01.00.01</i> ).....	4-22
NCR 7454-22xx Win95 Operating System Recovery Software ( <i>Version 01.02.00.00</i> ).....	4-24
OS Recovery from a Larger Disk Image .....	4-25

### **Chapter 5: BIOS Updating Procedures**

Introduction .....	5-1
Prerequisites .....	5-1
Updating Procedures .....	5-2
BIOS Crisis Recovery .....	5-4
Recovery Procedures .....	5-5
Cable/Connector Pin-Out Information .....	5-8

### **Chapter 6: NCR 7454 4x20 Customer Display**

Introduction .....	6-1
Viewing Area.....	6-1
Diagnostics.....	6-2
Character Set.....	6-3
Page 1 – International .....	6-3
Page 2 – Japanese .....	6-4
Page 3 – Code Page 850 .....	6-5
Command Descriptions .....	6-6
Structure/Logic Description .....	6-6
Host/Retail VFD Command Interface.....	6-6
Reset Display .....	6-8
Erase Display.....	6-8
Invalid Command.....	6-8
Set Diagnostic State.....	6-9
Set Display State On.....	6-9
Set Low Power State On .....	6-10
Enable Cursor.....	6-10

---

Disable Cursor.....	6-10
Set Screen Save Blank .....	6-11
Set Screen Save Walk .....	6-11
Turn On Screen Save.....	6-11
Disable Screen Save Option.....	6-12
Enable Character Blink .....	6-12
Disable Character Blink .....	6-12
Move Cursor Left.....	6-13
Move Cursor Right .....	6-13
Move Cursor Up .....	6-13
Move Cursor Down .....	6-14
Move Cursor To Specified Position .....	6-14
Brightness Adjustment .....	6-15
Read Display ID Byte.....	6-15
Read Display ID String.....	6-15
Display ESC Character .....	6-16
Select Character Set n.....	6-16
Read Display Data String .....	6-16

### **Appendix A: Cables**

### **Appendix B: Feature Kits**

7454 Kits.....	B-1
Kit Index.....	B-2



This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/7454 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/7454%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)