


NCR 7454 Retail Terminal

Release 2.2

Hardware User's Guide

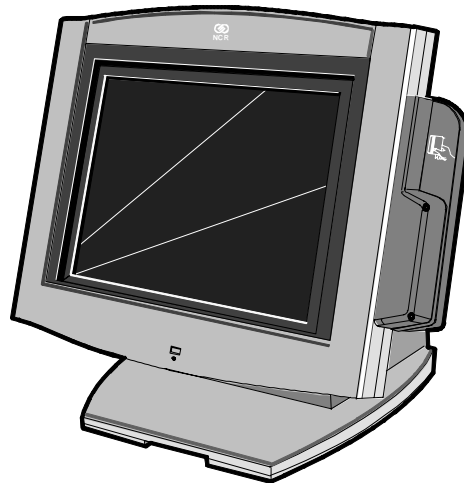

18004

B005-0000-1256
Issue H

Table of Contents

Chapter 1: Product Overview

Introduction	1-1
Serial Number/Model Number Label.....	1-2
Hardware Modules	1-3
Base Unit	1-3
Hardware Options	1-4
Terminal Components not Supported.....	1-6
System Configuration Diagram.....	1-7
Hardware Module Descriptions.....	1-8
Processor Board.....	1-8
Processor/Chip Set	1-8
Video Subsystem.....	1-9
Ethernet 10/100Base-T LAN Communications	1-10
Wireless LAN Communications	1-11
Universal Serial Bus	1-12
Serial Ports	1-13
Hardware Monitor	1-13
PCI Expansion Header	1-14
IDE Header	1-14
Audio	1-14
Magnetic Stripe Reader	1-14
Touch Screen Controller	1-15
Processor Board Connectors	1-15
Compact Flash.....	1-16
NCR Retail Specific Hardware.....	1-16
Board BIOS	1-18

BIOS Upgrades.....	1-19
Operator Display.....	1-20
LCD Adapter Board.....	1-21
LCD Backlight Inverter Module	1-21
Touch Screen	1-22
NCR 7454 Integrated Customer Display	1-22
NCR 5973 International VFD Customer Display.....	1-23
Table Top Mount.....	1-23
16" High Post Mount.....	1-23
Features	1-24
Magnetic Stripe Reader.....	1-24
Printer Options	1-25
2214 Printer	1-25
7158 Printer.....	1-26
7166 Printer.....	1-26
7167 Printer.....	1-27
7194 Printer.....	1-27
7196 Printer.....	1-28
7197 Printer.....	1-28
Other Integrated Devices and Indicators	1-29
Hard Disk Drive.....	1-29
Reset Switch.....	1-29
Internal Speaker	1-29
POS Connector Board.....	1-30
Motion Sensor	1-30
Power/Status LED.....	1-31
Power OK LED.....	1-31
LAN Status LEDs	1-31
Power Supply.....	1-32
Integrated Speaker Module (Optional)	1-32
USB RS-232 Port Server	1-33

Additional Pentium III and Celeron Connectors.....	1-34
---	------

Chapter 2: Hardware Installation

Introduction	2-1
Installation Summary.....	2-1
Installation Restrictions.....	2-2
Connecting the Cables.....	2-3
Accessing the Cable Connectors	2-3
Routing the Cables	2-4
Identifying the Cable Connectors	2-5
Installing Peripherals	2-6
Installing a Transaction Printer	2-6
RS-232 Installation	2-7
USB Installation.....	2-8
2214 Printer.....	2-9
Installing a Remote Customer Display.....	2-10
5974 Remote Customer Display.....	2-10
5972-1100 Remote Customer Display	2-12
5973 International VFD Customer Display	2-14
Installing a High-Post Integrated Customer Display	2-16
Installing an Integrated Customer Display (5972-F039).....	2-17
Installing a Cash Drawer	2-22
Installing a Second Cash Drawer.....	2-23
Mounting the 7454.....	2-24
Wall Mounting a Tilt Mount	2-25
Finalizing the Installation	2-26
Completing the OS Installation (Win2000)	2-26
Completing the OS Installation (WinXPe)	2-26
Completing the OS Installation (WinNT).....	2-27

Completing the OS Installation (Win98)	2-27
Completing the OS Installation (Win95)	2-28
Completing the OS Installation (DOS)	2-28
Setting Auto-Logon (WinNT Terminal).....	2-29
Installing a Serial Mouse.....	2-34
Guidelines for Calibrating the Touch Screen	2-35
Calibration Procedure.....	2-35
Summary.....	2-37
Out-of-Box Failures	2-37

Chapter 3: Setup

Introduction	3-1
BIOS Versions.....	3-1
Entering Setup Without a Keyboard.....	3-1
Entering Setup Using a Keyboard.....	3-2
How to Select Menu Options	3-2
Restoring Factory Settings.....	3-3
BIOS Default CMOS Values (Pentium)	3-4
Main Values.....	3-4
Advanced Values	3-6
I/O Device Configuration	3-6
PCI Configuration.....	3-7
Interrupts (Pentium)	3-8
Memory Map (Pentium)	3-9
BIOS Default CMOS Values (Pentium III/Celeron)	3-10
Main Values.....	3-10
Advanced Values	3-11
Security Values.....	3-15
Power Values.....	3-16
Boot Values.....	3-16
Exit Values.....	3-16

Interrupts (Pentium III/Celeron).....	3-17
Memory Map (Pentium III/Celeron).....	3-19

Chapter 4: Operating System Recovery

Introduction	4-1
Prerequisites	4-1
Updating Procedures	4-2
Completing the OS Installation (Win2000)	4-5
Completing the OS Installation (WinXPe)	4-5
Completing the OS Installation (WinNT).....	4-6
Completing the OS Installation (Win98)	4-6
Completing the OS Installation (Win95)	4-7
Completing the OS Installation (DOS)	4-7
Gold Disk Contents	4-8
Microsoft Operating System License Agreements.....	4-8
Operating System Restrictions	4-9
Standby and Hibernate Mode Restriction.....	4-9
NCR 7454-32xx Win2000 Operating System Recovery Software (<i>Version 02.02.00.02</i>).....	4-10
NCR 7454-3xxx WinXPe Operating System Recovery Software (<i>Version 02.02.00.01</i>).....	4-12
NCR 7454-22xx Win2000 Operating System Recovery Software (<i>Version 01.01.00.00</i>).....	4-13
NCR 7454-32xx NT Operating System Recovery Software (<i>Version 02.02.00.01</i>).....	4-15
NCR 7454-22xx NT Operating System Recovery Software (<i>Version 01.04.01.00</i>).....	4-17
NCR 7454-32xx Win98 Operating System Recovery Software (<i>Version 02.02.00.01</i>).....	4-19
NCR 7454-22xx Win98 Operating System Recovery Software (<i>Version 01.01.00.00</i>).....	4-21

NCR 7454-32xx Win95 Operating System Recovery Software (<i>Version 02.01.00.01</i>).....	4-22
NCR 7454-22xx Win95 Operating System Recovery Software (<i>Version 01.02.00.00</i>).....	4-24
OS Recovery from a Larger Disk Image	4-25

Chapter 5: BIOS Updating Procedures

Introduction	5-1
Prerequisites	5-1
Updating Procedures	5-2
BIOS Crisis Recovery	5-4
Recovery Procedures	5-5
Cable/Connector Pin-Out Information	5-8

Chapter 6: NCR 7454 4x20 Customer Display

Introduction	6-1
Viewing Area.....	6-1
Diagnostics.....	6-2
Character Set.....	6-3
Page 1 – International	6-3
Page 2 – Japanese	6-4
Page 3 – Code Page 850	6-5
Command Descriptions	6-6
Structure/Logic Description	6-6
Host/Retail VFD Command Interface.....	6-6
Reset Display	6-8
Erase Display.....	6-8
Invalid Command.....	6-8
Set Diagnostic State.....	6-9
Set Display State On.....	6-9
Set Low Power State On	6-10
Enable Cursor.....	6-10

Disable Cursor.....	6-10
Set Screen Save Blank	6-11
Set Screen Save Walk	6-11
Turn On Screen Save.....	6-11
Disable Screen Save Option.....	6-12
Enable Character Blink	6-12
Disable Character Blink	6-12
Move Cursor Left.....	6-13
Move Cursor Right	6-13
Move Cursor Up	6-13
Move Cursor Down	6-14
Move Cursor To Specified Position	6-14
Brightness Adjustment	6-15
Read Display ID Byte.....	6-15
Read Display ID String.....	6-15
Display ESC Character	6-16
Select Character Set n.....	6-16
Read Display Data String	6-16

Appendix A: Cables

Appendix B: Feature Kits

7454 Kits.....	B-1
Kit Index.....	B-2

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*