


# NCR 7455 Retail Terminal

Release 1.1

## Hardware User's Guide

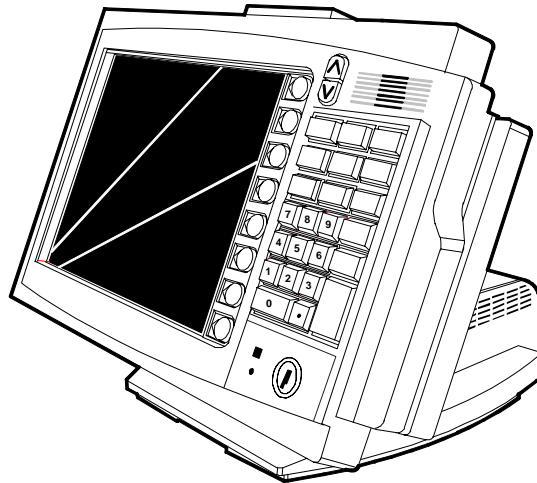

---

# Table of Contents

## Chapter 1: Product Overview

Introduction .....	1-1
Serial Number/Model Number Label.....	1-2
Hardware Modules .....	1-3
Base Unit.....	1-3
Hardware Options .....	1-4
System Configuration Diagram.....	1-7
Hardware Module Descriptions.....	1-8
Processor Board.....	1-8
Processor/Chip Set .....	1-8
Video Subsystem.....	1-8
Ethernet 10/100Base-T LAN Communications .....	1-9
Wireless LAN Communications .....	1-10
Universal Serial Bus .....	1-11
Serial Ports.....	1-11
Hardware Monitor .....	1-12
PCI Expansion Header .....	1-12
IDE Header .....	1-12
Audio .....	1-12
Magnetic Stripe Reader .....	1-13
Optional Touch Screen Controller .....	1-13
Processor Board Connectors .....	1-14
External Motherboard Connectors .....	1-15
POS Daughterboard Connectors.....	1-15
Internal Motherboard Connectors .....	1-16
Flash Disk .....	1-17

Board BIOS .....	1-18
Operator Display.....	1-21
LCD Adapter Cable .....	1-21
LCD Backlight Inverter Module .....	1-22
DynaKey .....	1-22
Touch Screen (Optional).....	1-22
NCR 7455 Remote Displays.....	1-23
4x20 VFD Customer Display.....	1-23
NCR 5972 2x20 VFD Customer Display .....	1-23
NCR 5973 International VFD Customer Display.....	1-23
Table Top Mount.....	1-24
16" High Post Mount.....	1-24
Features .....	1-25
Magnetic Stripe Reader.....	1-25
Printer Options.....	1-26
7162 Printer.....	1-26
7158 Printer.....	1-27
7166 Printer.....	1-27
7194 Printer.....	1-28
7196 Printer.....	1-28
Other Integrated Devices and Indicators .....	1-29
Hard Disk Drive.....	1-29
Reset Switch.....	1-29
Internal Speaker .....	1-30
Motion Sensor .....	1-30
Power/Status LED.....	1-31
LAN Status LEDs .....	1-31
Power Supply .....	1-32
USB RS-232 Port Server .....	1-35

---

Introduction .....	2-1
Installation Summary.....	2-1
Installation Restrictions.....	2-2
Connecting the Cables.....	2-3
Accessing the Cable Connectors .....	2-3
Routing the Cables .....	2-4
Identifying the Cable Connectors .....	2-5
Installing Peripherals .....	2-6
7158 Printer.....	2-6
7166 Printer.....	2-7
7194 Printer.....	2-8
7196 Printer.....	2-9
7162 Printer.....	2-10
Installing a Remote Customer Display.....	2-11
7448 Remote Customer Display .....	2-11
5972-1000 Remote Customer Display .....	2-13
5973 International VFD Customer Display ....	2-15
Installing a Cash Drawer .....	2-16
Installing a Second Cash Drawer.....	2-18
Finalizing the Installation .....	2-19
Completing the OS Installation (Windows 2000) .....	2-19
Completing the OS Installation (Windows NT) .....	2-19
Completing the OS Installation (Windows 98) .....	2-20
Completing the OS Installation (DOS) .....	2-20
Guidelines for Calibrating the Touch Screen (If Equipped) .....	2-21
Summary .....	2-22
Out-of-Box Failures.....	2-23

**Chapter 3: Setup**

Introduction .....	3-1
Entering Setup Using a Keyboard.....	3-1
Entering Setup Without a Keyboard (on units with Touch-Screen) .....	3-2
How to Select Menu Options .....	3-3
Restoring Factory Settings.....	3-3
Setup Menus .....	3-4
Main Menu .....	3-4
System Time and Date.....	3-4
Legacy Diskette .....	3-5
Primary Master.....	3-5
Advanced Menu.....	3-6
Cache Memory .....	3-7
I/O Device Configuration.....	3-9
System Monitors .....	3-16
Multiple ROM Menu .....	3-17
Advanced Chipset Control.....	3-19
Boot-Time Diagnostic Screen .....	3-23
Security Menu Options.....	3-24
Set Supervisor/User Password.....	3-25
Diskette Access.....	3-25
Fixed Disk Boot Sector .....	3-26
Password on Boot.....	3-26
Power Menu Options.....	3-27
Power Savings.....	3-27
IDE Drive x Monitoring.....	3-29
PCI Bus Monitoring .....	3-29
Video Power State Control.....	3-29
Boot Menu Options .....	3-30
Exit Menu Options .....	3-31

---

Memory Map.....	3-32
BIOS Default Values.....	3-33
Main Values.....	3-33
Advanced Values.....	3-34
Security Values.....	3-38
Power Values.....	3-39
Exit Values.....	3-39

#### **Chapter 4: Operating System Recovery**

Introduction.....	4-1
Prerequisites.....	4-1
Updating Procedures.....	4-2
Completing the OS Installation (Windows NT).....	4-4
Completing the OS Installation (Windows 98).....	4-4
Completing the OS Installation (Windows 2000).....	4-5
Completing the OS Installation (DOS).....	4-5
Gold Disk Contents.....	4-6
NCR 7455 Win2000 OS Recovery Software.....	4-6
NCR 7455 NT Operating System Recovery Software.....	4-7
NCR 7455 Win98 OS Recovery Software.....	4-8
NCR 7455 DOS Operating System Recovery Software.....	4-8
OS Recovery from a Larger Disk Image.....	4-9

#### **Chapter 5: BIOS Updating Procedures**

Introduction.....	5-1
Prerequisites.....	5-1
Updating Procedures.....	5-2

BIOS Crisis Recovery .....	5-5
Recovery Procedures .....	5-6
Cable/Connector Pin-Out Information .....	5-9

**Appendix A: Cables**

7455 Cables.....	A-1
------------------	-----

**Appendix B: Feature Kits**

Kit Index.....	B-1
----------------	-----

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*