


NCR 7460 Retail Terminal

Release 1.2

Hardware User's Guide

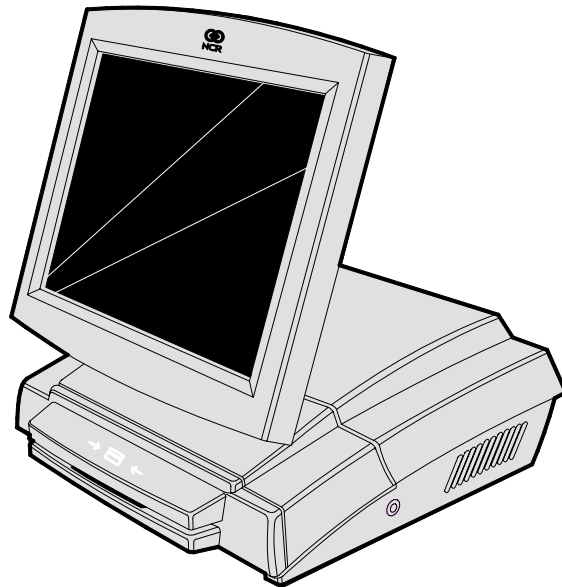

B005-0000-1280

Issue D

Table of Contents

Chapter 1: Product Overview

Introduction.....	1-1
Serial Number Labels.....	1-2
Hardware Modules	1-3
Base Unit	1-3
Hardware Options	1-4
Terminal Components not Supported.....	1-5
System Configuration Diagram.....	1-6
Hardware Module Descriptions.....	1-7
Processor Board.....	1-7
Processor/ Chip Set.....	1-7
Video Subsystem	1-7
Ethernet 10/100Base-T LAN Communications.....	1-8
Universal Serial Bus	1-9
Serial Ports	1-9
Hardware Monitor	1-10
Mini PCI Expansion Header	1-10
IDE Header	1-10
Touch Screen Controller	1-10
Processor Board Connectors	1-11
Flash Disk	1-11
NCR Retail Specific Hardware	1-12
Board BIOS	1-14
Operator Display.....	1-16
LCD Adapter Board	1-16
LCD Backlight Inverter Module	1-16

Touch Screen	1-16
NCR 7460 Integrated Customer Display	1-17
Features	1-18
Magnetic Stripe Reader	1-18
Printer Options	1-19
NCR 7194 Printer	1-19
7158 Printer	1-19
7194 Printer	1-20
7196 Printer	1-20
NCR 5972 2x20 Customer Display	1-21
Features	1-22
NCR 5973 International VFD Customer Display	1-23
Other Integrated Devices and Indicators	1-24
Hard Disk Drive	1-24
Power/Status LED	1-24
LAN Status LEDs	1-25
Power Supply	1-25

Chapter 2: Hardware Installation

Introduction	2-1
Installation Summary	2-1
Installation Restrictions	2-2
Connecting the Cables	2-3
Accessing the Cable Connectors and Routing Cables	2-3
Identifying the Cable Connectors	2-4
Installing Peripherals	2-5
Installing a Transaction Printer	2-5
7158 Printer	2-5
7194 Printer	2-6
Serial Modem for 7194 Printers	2-7

Installation Procedures	2-7
7196 Printer	2-8
Installing a Remote Customer Display	2-10
NCR 5972-1000/1100 Remote Customer Display	2-10
5973 International VFD Customer Display	2-12
Mounting Considerations	2-14
Wall Mounting the 7460	2-15
Wall Mounting the Base Unit	2-16
Wall Mounting the LCD Operators Display	2-17
Installing a Cash Drawer	2-19
Installing a Second Cash Drawer	2-20
Mini PCI 56KB Modem (7460-F210).....	2-21
Installing the Modem	2-21
Finalizing the Installation.....	2-22
Completing the OS Installation (WinNT)	2-22
Completing the OS Installation (Win98)	2-23
Completing the OS Installation (Win95)	2-24
Completing the OS Installation (DOS)	2-24
Installing a Serial Mouse	2-25
Guidelines for Calibrating the Touch Screen	2-26
Calibration Procedure	2-26
Summary	2-28
Out-of-Box Failures	2-28
Powering Down the Terminal	2-28

Chapter 3: BIOS Setup

Introduction.....	3-1
Entering Setup Using a Keyboard	3-1
How to Select Menu Options	3-1
Restoring Factory Settings	3-2

Setup Menus.....	3-3
Main Menu.....	3-3
System Time and Date	3-3
Legacy Diskette.....	3-3
Primary Master	3-4
Advanced Menu.....	3-5
Installed OS	3-6
Reset Configuration Data	3-6
Cache Memory	3-7
PS/2 port.....	3-11
Large Disk Access Mode	3-23
Local Bus IDE adapter	3-24
Advanced Chipset Control.....	3-24
PCI Configuration	3-25
System Monitors.....	3-28
Multiple ROM Menu.....	3-29
QuickBoot Mode.....	3-31
After Power Failure.....	3-31
Continuous POST	3-32
Boot menu retry	3-32
LCD contrast and LCD Brightness (Advanced Menu).....	3-32
Beep Error Codes (Advanced Menu).....	3-32
Security Menu Options	3-33
Set Supervisor/User Password	3-33
Password on Boot	3-34
Power Menu Options	3-35
<i>Power Savings</i>	3-35
Resume On Time	3-37
Resume Time	3-38
Resume On Modem Ring	3-38

Boot Menu Options.....	3-39
System Boot Sequence.....	3-39
Exit Menu Options.....	3-40
BIOS Default CMOS Values	3-41
Main Values.....	3-41
Advanced ValuesI/O Device Configuration..	3-43
PCI Configuration	3-43
I/O Addresses	3-44
Interrupt Levels	3-46
Memory Map.....	3-47

Chapter 4: Operating System Recovery

Introduction.....	4-1
Prerequisites	4-1
Updating Procedures.....	4-2
Completing the OS Installation (Win2000)	4-5
Completing the OS Installation (WinNT)	4-6
Completing the OS Installation (Win98)	4-6
Completing the OS Installation (Win95)	4-7
Completing the OS Installation (DOS)	4-7
Gold Disk Contents	4-8
Microsoft Operating System License Agreements.....	4-8
NCR 7460 Win 2000 Operating System Recovery Software (LPIN: D370-0505-0100)	4-9
NCR 7460-NT Operating System Recovery Software (LPIN: D370-0496-0100).....	4-10
NCR 7460-Win98 Operating System Recovery Software (LPIN: D370-0497-0100).....	4-11
NCR 7460-Win95 Operating System Recovery Software (LPIN: D370-0498-0100).....	4-12

NCR 7460 DOS Operating System Recovery Software (LPIN: D370-0499-0100).....	4-12
OS Recovery from a Larger Disk Image.....	4-13

Chapter 5: BIOS Updating Procedures

Introduction.....	5-1
Prerequisites	5-1
Updating Procedures.....	5-2
BIOS Crisis Recovery	5-3
Recovery Procedures	5-5
Cable/Connector Pin-Out Information.....	5-7

Chapter 6: NCR 7460 2x20 Customer Display

Introduction.....	6-1
Viewing Area	6-1
Diagnostics.....	6-1
Command Descriptions	6-2
Structure/Logic Description	6-2
Integrated Display Interface.....	6-2
Character Map	6-4

Appendix A: Cables

Appendix B: Kits

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/7460 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/7460%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)