


NCR RealPOS 62

Release 2.0

Hardware User's Guide

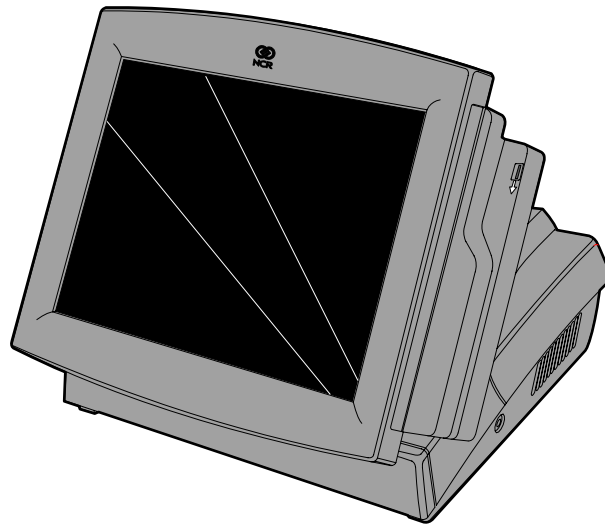

B005-0000-1481
Issue C

Table of Contents

Chapter 1: Product Overview

Introduction	1-1
Serial Number Labels	1-2
Hardware Modules.....	1-3
Base Unit.....	1-3
Hardware Options.....	1-4
Terminal Components not Supported	1-5
System Configuration Diagram	1-6
Hardware Module Descriptions	1-7
Processor Board	1-7
Processor/ Chip Set.....	1-7
Video Subsystem.....	1-7
Ethernet 10/100Base-T LAN Communications	1-8
Universal Serial Bus.....	1-9
Serial Ports	1-9
Parallel Port.....	1-10
PS/2 Keyboard and Mouse Interface	1-10
Hardware Monitor.....	1-10
Mini PCI Expansion Header.....	1-11
IDE Header	1-11
Processor Board Connectors.....	1-11
MSR.....	1-11
Graphics Subsystem.....	1-12
Board BIOS.....	1-12
Operator Display	1-14
LCD Adapter Board.....	1-14
LCD Backlight Inverter Module.....	1-14

Operator Touch Screen.....	1-15
NCR 7460 Integrated Customer Display.....	1-15
Hardware Features	1-16
Magnetic Stripe Reader	1-16
Printer Options	1-17
NCR 7167 Printer	1-17
NCR 7197 Printer	1-18
7196 Printer	1-18
Customer Displays	1-19
NCR 5974 Remote 4x20 Customer Display	1-19
NCR 5973 International VFD Customer Display.....	1-20
Cash Drawers.....	1-21
2189 Cash Drawer	1-21
Other Cash Drawers	1-21
Third-Party Cash Drawers.....	1-21
Other Integrated Devices and Indicators	1-22
Hard Disk Drive	1-22
Power Status LED	1-22
LAN Status LEDs	1-23
Power Supply	1-23
NCR Power Management.....	1-23

Chapter 2: Hardware Installation

Introduction	2-1
Installation Summary.....	2-1
Installation Restrictions.....	2-2
Connecting the Cables.....	2-3
Accessing the Cable Connectors and Routing Cables.....	2-3
Cable Connectors.....	2-4
Terminal Cable Connectors	2-4
Operator Display Cable Connectors.....	2-5

Installing Peripherals.....	2-6
Installing a Transaction Printer	2-6
USB Printer Installation.....	2-7
RS-232 Printer Installation	2-8
Installing a Remote Customer Display.....	2-9
Installing a Cash Drawer	2-11
Installing a Keyboard and Mouse.....	2-12
Installing a Serial Mouse	2-13
Calibrating the Touch Screen	2-14
Calibration Using TouchWare (Windows)	2-15
Calibration Using Microcal (DOS)	2-18
Noise Check Utility	2-18
Summary	2-19
Double-Touch Condition.....	2-19
MSR Cleaning Cards	2-20
Out-of-Box Failures.....	2-20
Powering Down the Terminal.....	2-20

Chapter 3: BIOS Setup

Introduction	3-1
Entering Setup Using a Keyboard.....	3-1
Entering Setup Using the Touch Screen.....	3-1
How to Select Menu Options.....	3-2
Restoring Factory Settings.....	3-2
BIOS Default CMOS Values.....	3-2
Main Values	3-3
Advanced Menu	3-4
Security Menu.....	3-9
Power Menu.....	3-9
Boot Menu.....	3-9

Chapter 4: Operating System Recovery

Introduction	4-1
Prerequisites	4-1
Updating Procedures	4-2
Completing the OS Installation (Win2000).....	4-4
Completing the OS Installation (WinNT)	4-5
Completing the OS Installation (Win98).....	4-5
Completing the OS Installation (DOS).....	4-6
Gold Disk Contents.....	4-7
Microsoft Operating System License Agreements.....	4-7
Migrating Operating System Images from 7460 1.x Terminals	4-8
NCR 7460 Win 2000 Operating System Recovery Software (LPIN: D370-0562-0100)	4-8
Installed Software	4-8
Uninstalled Drivers.....	4-9
Settings and Revisions.....	4-9
NCR 7460-NT Operating System Recovery Software (LPIN: D370-0561-0100)	4-10
Installed Software	4-10
Uninstalled Drivers.....	4-10
Settings and Revisions.....	4-11
NCR 7460-Win98 Operating System Recovery Software (LPIN: D370-0559-0100)	4-12
Installed Software	4-12
Uninstalled Drivers.....	4-12
Settings and Revisions.....	4-13
NCR 7460 DOS Operating System Recovery Software (LPIN: D370-0499-0100)	4-13
OS Recovery from a Larger Disk Image	4-14

Chapter 5: BIOS Updating Procedures

Introduction	5-1
Prerequisites	5-1
Updating Procedures	5-2
BIOS Crisis Recovery	5-5
Recovery Procedures.....	5-6
Cable/Connector Pin-Out Information.....	5-8

Chapter 6: Integrated 2x20 Customer Display

Introduction	6-1
Viewing Area	6-1
Diagnostics	6-1
Command Descriptions	6-2
Structure/Logic Description.....	6-2
Integrated Display Interface	6-2
Instructions	6-4
Clear Display	6-4
Cursor Home	6-5
Entry Mode Set	6-5
Display On/Off Control.....	6-6
Cursor/Display Shift.....	6-6
Function Set.....	6-7
CGRAM Address Set.....	6-7
DDRAM Address Set.....	6-8
Address Counter Read	6-8
DDRAM or CGRAM Write.....	6-8
DDRAM or CGRAM Read.....	6-9
Reset Conditions	6-9
Initialization.....	6-10
Character Map (VFD).....	6-11
Character Map (LCD)	6-12

Appendix A: Cables

Printers	A-3
7167, 7197 Printer (RS-232)	A-3
7167, 7197 Printer (USB)	A-3
7196 Printer (RS-232)	A-4
Cash Drawers	A-4
Cash Drawer, Extension Cable	A-4
Keyboard PS/2 Y-Cable	A-5
5964 to 7460 (RS-232/PS2/Power)	A-5
Remote Customer Display	A-6
5972 VFD (Parallel)	A-6
5972 VFD (RS-232)	A-6
5973/5974 International VFD (Parallel)	A-7
Operator Display Cable (DVI to DVI)	A-7
5945/5992 Cable (RS-232)	A-8
Ethernet 10/100BaseT Cable	A-8
Power Cables	A-8
AC Power	A-8

Appendix B: Kits**Appendix C: Technical Specifications**

Interrupt Defaults	B-1
DMA Channel Defaults	B-2
Memory Map	B-3
I/O Map	B-4

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/RealPOS 62 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/RealPOS%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)