


NCR RealPOS 80

Release 1.0

Hardware User's Guide

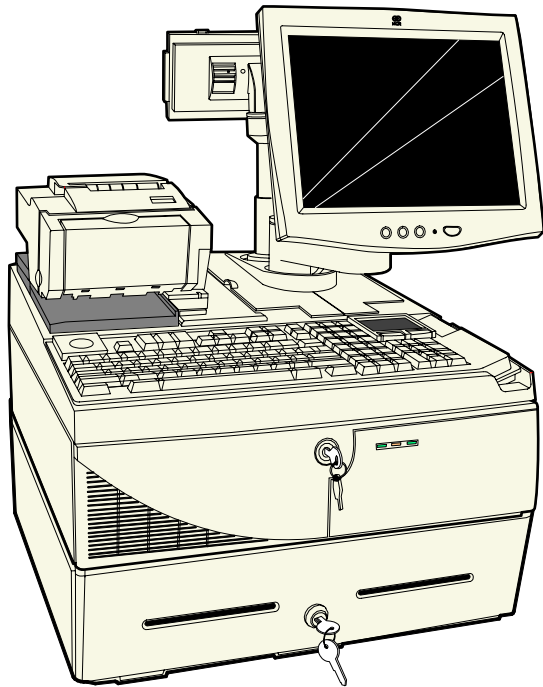

B005-0000-1440

Issue A

Table of Contents

Chapter 1: Product Overview

Introduction	1-1
Cabinet	1-2
Configurations	1-4
Integrated Terminal	1-4
Integrated Terminal w/Cash Drawer	1-5
Left/Right Configurability	1-6
Serial Number/Model Number Label	1-7
Features	1-8
Processor Board	1-8
4-Port USB Daughter Card	1-9
ATX Riser Card	1-9
Front Control Panel	1-10
Storage Media	1-10
Power Supply	1-11
Operating Systems	1-11
UPS	1-11
Power Management.....	1-12
Definitions of the states involved.....	1-13
Operator Displays.....	1-17
5964 12.1-Inch Touch Screen	1-17
Features	1-17
5942 12.1-INCH Color LCD.....	1-19
7452-K309/K404 9-Inch Monochrome CRT.....	1-20
7452-K419 15-Inch Color CRT.....	1-20
NCR 5982 5-Inch LCD Display	1-21
NCR 5953 12.1-Inch DynaKey	1-22

NCR 5952 10.4-Inch DynaKey	1-23
NCR 5932 Keyboards	1-24
109-Key USB Keyboard	1-24
Features	1-25
115-Key PS/2 Big Ticket Keyboard.....	1-26
68-Key PS/2 POS Keyboard.....	1-27
Features	1-27
NCR 5972 2x20 Remote Customer Display	1-31
Features.....	1-31
NCR 5973 2x20 International VFD Customer Display	1-32
Features.....	1-32
Printers	1-33
NCR 7158 Printer.....	1-33
NCR 7162 Printer.....	1-34
NCR 7194 Printer.....	1-34
NCR 7167 Printer.....	1-35
NCR 7197 Printer.....	1-35
System Configuration Diagrams	1-36

Chapter 2: Hardware Installation

Introduction	2-1
Installation Restrictions	2-1
Installing the Integration Tray	2-2
Installing the Keyboard.....	2-3
PS/2 Keyboard/Mouse Cable Connections	2-5
Dual Port Keyboard/Mouse Installation.....	2-5
Mouse Installation Restriction.....	2-5
Installing the Integrated Operator Display	2-6
Operator Display Cable Connections.....	2-10
Installing an NCR 5964 12.1-inch Touch LCD	2-10
Installing a 5942 12.1-Inch LCD Monitor	2-13

Installing the Integrated Customer Display	2-14
Installing the Transaction Printer	2-16
Printer Cable Connections.....	2-18
USB Installation	2-18
RS-232 Installation w/Power from Powered USB	2-19
Installing an NCR 5972 Remote Customer Display	2-20
Customer Display Cable Connections.....	2-21
Installing an NCR 5973 Remote Customer Display	2-22
Customer Display Cable Connections.....	2-23
Installing a 5953 DynaKey	2-24
Installing a 5952 DynaKey	2-25
Installing a Secondary CRT Display (Dual Display).....	2-26
Installing the Hardware.....	2-26
Supported Configurations	2-26
Supported Configurations by Operating System.....	2-27
Supported Hardware Configurations	2-27
Installing the Displays.....	2-28
Configuring the Software for Dual Display.....	2-29
Installing an NCR 5982 5-Inch Operator Display.....	2-30
Installing the PCI LCD Board (5952-K052).....	2-31
Connecting the 5982 Display to the Terminal.....	2-32
Installing a Cash Drawer	2-33
Installing a Second Cash Drawer.....	2-33

Chapter 3: Setup

Introduction	3-1
Entering Setup Using a Keyboard	3-1
How to Select Menu Options	3-1
Restoring Factory Settings	3-2
Special DynaKey Keypad Mode	3-2
Normal DynaKey Keypad Operating Mode	3-4

Disabling Resources.....	3-5
BIOS Default Values	3-5
Main Menu	3-5
Advanced Menu	3-8
Security Menu	3-12
Power Menu	3-12
Boot Sequence	3-12

Chapter 4: Operating System Recovery

Introduction	4-1
Prerequisites.....	4-1
Connecting an External Backpack CD-ROM Drive.....	4-2
Updating Procedures	4-3
Completing the OS Installation (Windows 2000)	4-5
Completing the OS Installation (Windows NT 4.0)	4-5
Completing the OS Installation (Windows EXe)	4-6
Completing the OS Installation (DOS).....	4-6
Gold Disk Contents.....	4-7
NCR 7456/58 Windows 2000 Operating System Recovery Software (LPIN: D370-0536-0100).....	4-7
Installed Software:	4-7
Software Drivers.....	4-8
Special Settings	4-8
Recommendation	4-9
NCR 7456/58 Windows NT 4.0 Operating System Recovery Software (LPIN: D370-0564-0100)	4-10
Installed Software:	4-10
Software Drivers.....	4-10
Special Settings	4-11
Recommendation	4-12

NCR RealPOS 80/80c Windows XPe Operating System Recovery Software (<i>LPIN: D370-0570-0100</i>)	4-13
Installed Software:	4-13
Software Drivers.....	4-13
Special Settings	4-14
Recommendation	4-14
OS Recovery from a Larger Disk Image	4-15

Chapter 5: BIOS Updating Procedures

Introduction	5-1
Prerequisites.....	5-1
Connecting an External Backpack CD-ROM Drive.....	5-2
Updating Procedures	5-3
BIOS Crisis Recovery	5-5
Recovery Procedures.....	5-6
Cable/Connector Pin-Out Information	5-9

Chapter 6: Memory Dump

General Memory Dump Information.....	5-1
BIOS Requirements	5-1
Disk Format.....	5-1
Supported Operating Systems.....	5-2
Summary of Operating Systems	5-3
Prerequisites.....	5-3
Windows XP/2000	5-4
Windows NT.....	5-5
DOS Memory Dump Specifics	5-6
Dump Process Overview	5-6
Restrictions and Limitations	5-6
Performing the Memory Dump.....	5-9
Configuring the Terminal	5-9

Dump Procedure	5-9
Tunes/Tones	5-10
Moving the Files to Hard Disk and Reassembling	5-12
Flow Chart	5-13
Memory Dump Assembler	5-14

Appendix A: Retail Keyboard Key Layouts

68-Key Keyboard	A-1
DynaKey	A-4
Special DynaKey Keypad Mode	A-4
Normal DynaKey Keypad Operating Mode	A-6
5932 USB Keyboard	A-7

Appendix B: Feature Kits

Appendix C: Cables

Printer Cables	C-1
Scanner Cables	C-3
7872 or 7875 Scanner/Scale (RS-232)	C-3
7872 or 7875 Scanner/Scale (Powered USB)	C-3
7892 Scanner (Powered RS-232)	C-3
7882 Scanner (Powered RS-232)	C-4
7837 Scanner (Powered RS-232)	C-4
Display Cables	C-5
VGA Display, Mono	C-5
VGA Display, Color	C-5
CRT AC Power Extension	C-5
5982 5-Inch LCD	C-6
5953 DynaKey	C-6
5953 DynaKey w/Insert	C-6
Wedge Keyboard Y-Cable	C-7

5972 VFD Customer Display (Powered RS-232)	C-7
DVI to DVI for 5964.....	C-7
PS/2 - RS-232 & Power for 5964	C-8
Wedge Keyboard Adapter	C-8
12.1-Inch LCD Aux Power Cable	C-8
Cash Drawer Cables	C-9
Dual Cash Drawer, Y-Cable.....	C-9
Cash Drawer, Extension Cable	C-9
Ethernet Communications Cable.....	C-9
Keyboard Cables	C-10
PS/2 Keyboard Extension	C-10
PS/2 Y-Cable.....	C-10
Signature Capture/Electronic Payment Terminal Cable	C-11
5945/5992 EPT (RS-232 w/Power)	C-11
5942 12V Power Cable.....	C-11
IDE Cables.....	C-12
IDE Interface Cable (3-Connector)	C-12
IDE Interface Cable (2-Connector)	C-12
Compact Flash Power Cable.....	C-12
Power Cables	C-13
AC Power.....	C-13

Appendix D: Memory Map

DOS Considerations	D-2
Non-TAPS DOS Environment	D-3
TAPS DOS Environment	D-3

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/RealPOS 80 hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/RealPOS%2080%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)