


# NCR RealPOS™ 80c

Release 1.1

## Hardware User's Guide

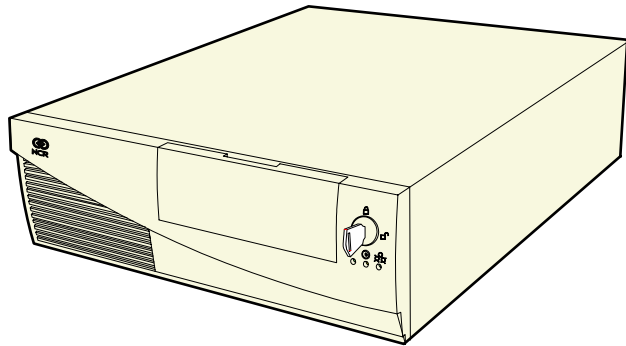

B005-0000-1359

Issue C

---

# Table of Contents

## Chapter 1: Product Overview

Introduction .....	1-1
Configurations .....	1-3
Additional Features.....	1-4
Serial Number/Model Number Label .....	1-5
Features .....	1-6
Processor Board .....	1-6
4-Port USB Daughter Card.....	1-7
6-Port USB Daughter Card w/ Audio.....	1-7
ATX Riser Card.....	1-8
Storage Media .....	1-8
Power Supply .....	1-8
Operating Systems .....	1-9
UPS .....	1-9
Power Management.....	1-10
Operator Displays.....	1-15
5964 12.1-Inch Touch Screen .....	1-15
5942 12.1-Inch Color LCD.....	1-17
7452-K309/K404 9-Inch Monochrome CRT.....	1-18
7452-K419 15-Inch Color CRT.....	1-18
NCR 5982 5-Inch LCD Display .....	1-19
NCR 5953 12.1-Inch DynaKey .....	1-20
NCR 5952 Wedge DynaKey .....	1-21
NCR 5932 Keyboards .....	1-22
109-Key USB Keyboard .....	1-22
115-Key PS/2 Big Ticket Keyboard.....	1-24
68-Key PS/2 POS Keyboard.....	1-25

NCR 5972 2x20 Remote Customer Display .....	1-29
Features .....	1-29
NCR 5973 2x20 International VFD Customer Display .....	1-30
Features .....	1-30
Printers .....	1-31
NCR 7158 Printer .....	1-31
NCR 7162 Printer .....	1-32
NCR 7194 Printer .....	1-32
NCR 7167 Printer .....	1-33
NCR 7197 Printer .....	1-33
System Configuration Diagrams .....	1-34

## Chapter 2: Hardware Installation

Introduction .....	2-1
Installation Restrictions .....	2-1
Out-of-Box Hardware Installation.....	2-2
Installing the Keyboard and Mouse .....	2-3
PS/2 Keyboard/Mouse Installation .....	2-3
Dual Port Keyboard/Mouse Installation .....	2-4
Mouse Installation Restriction .....	2-4
Installing the Transaction Printer .....	2-5
USB Installation .....	2-5
RS-232 Installation w/Power from Powered USB.....	2-6
Installing an NCR 5964 12.1-Inch Touch LCD .....	2-7
Cable Connections.....	2-7
DVI Connections .....	2-8
RS-232 Connections .....	2-9
Installing a 5942 12.1-Inch LCD Monitor .....	2-10
Installing a 5953 DynaKey .....	2-11
Installing a 5952 DynaKey .....	2-12
Installing an NCR 5982 5-Inch Operator Display.....	2-13

Installing the PCI LCD Board (5952-052).....	2-13
Connecting the 5982 Display to the Terminal.....	2-14
Installing a Secondary CRT Display (Dual Display).....	2-15
Installing the Hardware.....	2-15
Supported Configurations by Operating System.....	2-16
Installing the Displays.....	2-17
Configuring the Software for Dual Display.....	2-19
Installing an NCR 5972 Remote Customer Display .....	2-20
Installing an NCR 5973 Remote Customer Display .....	2-22
Customer Display Cable Connections.....	2-23

### **Chapter 3: Setup**

Introduction .....	3-1
Entering Setup Using a Keyboard.....	3-1
How to Select Menu Options.....	3-1
Restoring Factory Settings.....	3-2
Special DynaKey Keypad Mode.....	3-2
Normal DynaKey Keypad Operating Mode .....	3-4
Disabling Resources .....	3-5
BIOS Default Values.....	3-5
Main Menu .....	3-5
Advanced Menu .....	3-8
Security Menu.....	3-12
Power Menu .....	3-12
Boot Sequence .....	3-12

### **Chapter 4: Operating System Recovery**

Introduction .....	4-1
Prerequisites .....	4-1
Connecting an External Backpack CD-ROM Drive.....	4-2
Updating Procedures .....	4-3

Completing the OS Installation (Windows 2000) .....	4-6
Completing the OS Installation (Windows NT 4.0) .....	4-6
Completing the OS Installation (Windows EXe) .....	4-7
Completing the OS Installation (DOS) .....	4-7
Gold Disk Contents .....	4-8
NCR 7456/58 Windows 2000 Operating System Recovery Software (LPIN: D370-0536-0100) .....	4-8
Installed Software: .....	4-8
Software Drivers .....	4-9
Special Settings .....	4-9
Recommendation .....	4-10
NCR 7456/58 Windows NT 4.0 Operating System Recovery Software (LPIN: D370-0564-0100) .....	4-11
Installed Software: .....	4-11
Software Drivers .....	4-11
Special Settings .....	4-12
Recommendation .....	4-13
NCR RealPOS 80/80c Windows XPe Operating System Recovery Software (LPIN: D370-0570-0100) .....	4-14
Installed Software: .....	4-14
Software Drivers .....	4-14
Special Settings .....	4-15
Recommendation .....	4-15
OS Recovery from a Larger Disk Image .....	4-16

### **Chapter 5: BIOS Updating Procedures**

Introduction .....	5-18
Prerequisites .....	5-18
Connecting an External Backpack CD-ROM Drive .....	5-19
Updating Procedures .....	5-20
BIOS Crisis Recovery .....	5-22

---

Recovery Procedures.....	5-23
Cable/Connector Pin-Out Information .....	5-26

### Chapter 6: Memory Dump

General Memory Dump Information.....	6-1
BIOS Requirements .....	6-1
Disk Format .....	6-1
Supported Operating Systems.....	6-3
Summary of Operating Systems .....	6-3
Prerequisites.....	6-4
Windows XP/2000 .....	6-4
Windows NT.....	6-5
DOS Memory Dump Specifics .....	6-6
Dump Process Overview .....	6-6
Restrictions and Limitations .....	6-6
Performing the Memory Dump.....	6-9
Configuring the Terminal .....	6-9
Dump Procedure .....	6-9
Tunes/Tones.....	6-10
Moving the Files to Hard Disk and Reassembling.....	6-12
Flow Chart.....	6-13
Memory Dump Assembler.....	6-14

### Appendix A: Retail Keyboard Key Layouts

68-Key Keyboard.....	A-1
68-Key Keyboard Special Keypad Mode .....	A-3
Special PC Setup Keypad Mode Activated (68-Key Keyboard).....	A-4
DynaKey .....	A-5
Special DynaKey Keypad Mode .....	A-5
Normal DynaKey Keypad Operating Mode .....	A-7

5932 USB Keyboard.....	A-8
------------------------	-----

### Appendix B: Feature Kits

### Appendix C: Cables

Printer Cables .....	C-1
Scanner Cables.....	C-3
7872 or 7875 Scanner/Scale (RS-232) .....	C-3
7892 Scanner (Powered RS-232) .....	C-3
7882 Scanner (Powered RS-232) .....	C-3
7837 Scanner (Powered RS-232) .....	C-3
Display Cables.....	C-4
VGA Display, Mono.....	C-4
VGA Display, Color .....	C-4
CRT AC Power Extension .....	C-4
5982 5-Inch LCD .....	C-5
5953 DynaKey .....	C-5
5953 DynaKey w/Insert .....	C-5
Wedge Keyboard Y-Cable.....	C-6
5972 VFD Customer Display (Powered RS-232) .....	C-6
DVI to DVI for 5964.....	C-6
PS/2 - RS-232 & Power for 5964 .....	C-7
Wedge Keyboard Adapter .....	C-7
12.1-Inch LCD Aux Power Cable .....	C-7
Cash Drawer Cables .....	C-8
Dual Cash Drawer, Y-Cable.....	C-8
Cash Drawer, Extension Cable .....	C-8
Communications Cable .....	C-8
Ethernet, 10/100BaseT .....	C-8
Keyboard Cables .....	C-9
PS/2 Keyboard Extension .....	C-9

PS/2 Y-Cable .....	C-9
Signature Capture/Electronic Payment Terminal Cable .....	C-10
5945/5992 EPT (RS-232 w/Power) .....	C-10
5942 12V Power Cable.....	C-10
Power Cables .....	C-11
AC Power.....	C-11

### Appendix D: Memory Maps

DOS Considerations .....	D-2
Non-TAPS DOS Environment .....	D-3
TAPS DOS Environment .....	D-3

## Revision Record

Issue	Date	Remarks
A	June 2002	First issue
B	Oct 2002	Added <i>Memory Dump</i> chapter
C	Apr 2003	Changed product name to RealPOS 80c, added support for Windows XPe operating system, 256KB compact flash, NCR 5952 10.4 Inch VGA DynaKey, International VFD customer displays, PCI VGA board, 2-port and 4-port RS-232 expansion boards.



This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/ncr/RealPOS 80c hardware user manual.html](https://the-checkout-tech.com/manuals/ncr/RealPOS%2080c%20hardware%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)